


Access Display Group, Inc.

TEL: 800-289-1539 FAX: 877-842-5126

E-MAIL: customerservice@accessdisplaygroup.com

Instruction Sheet

Poster Display Rack Assembly 24 Swing Panels (S0040)

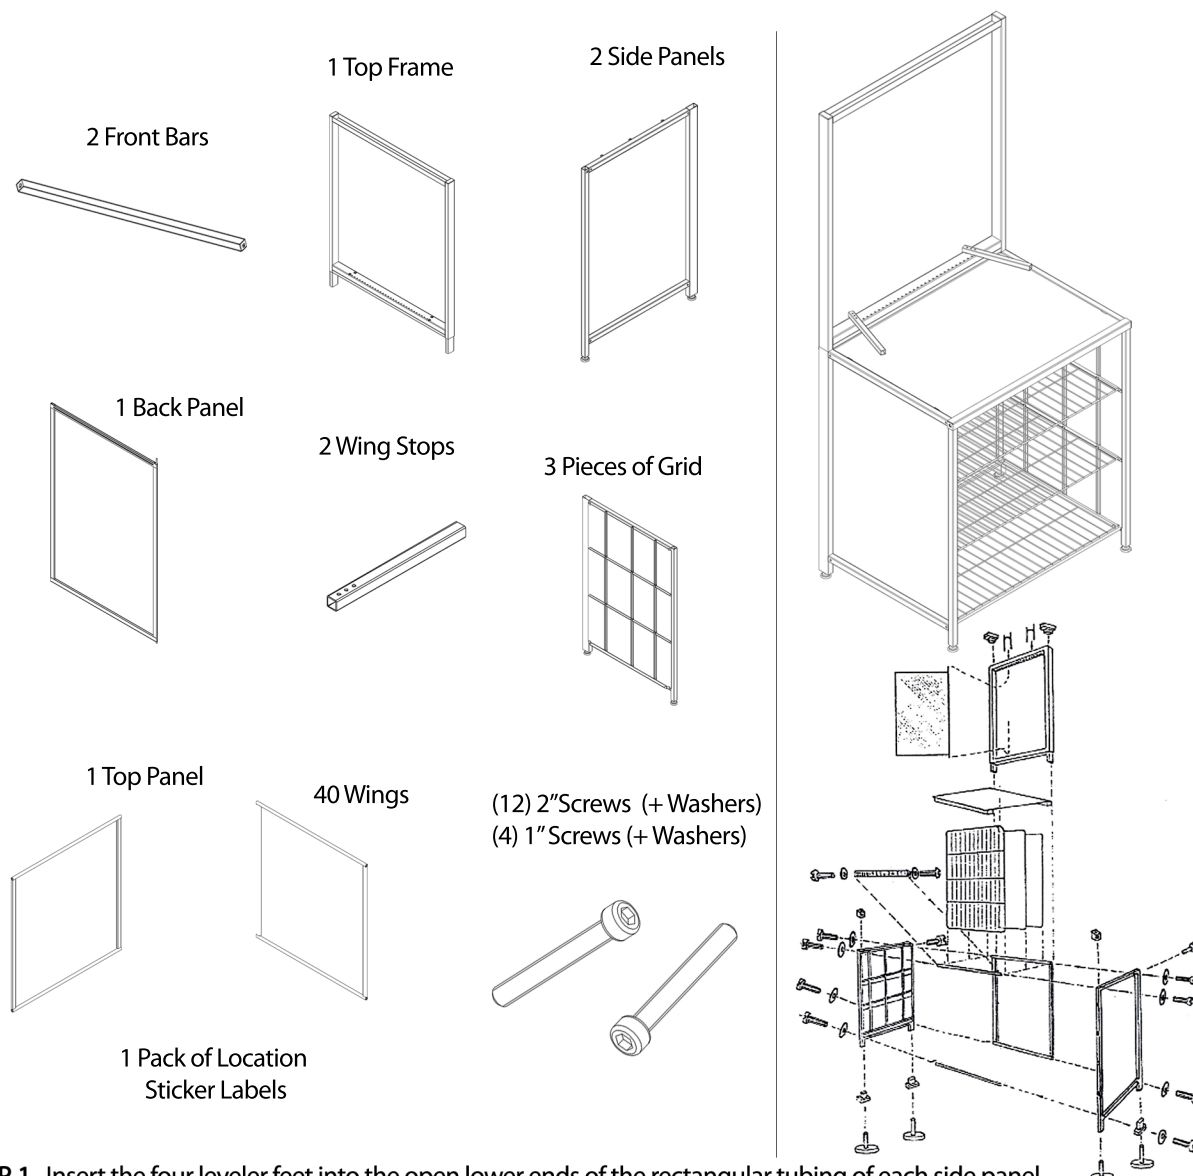

STEP 1. Insert the four leveler feet into the open lower ends of the rectangular tubing of each side panel.

STEP 2. Attach the two front bars (one at top and one at bottom) to the front of the side panels using four 2" screws with washers. This forms the front of the base.

STEP 3. Install the back panel to the sides. Use four 2" screws and washers.

STEP 4. Lower three grid panels into the slots provided on the inside of the side panels.

STEP 5. Place top panel with lip displaying number locations facing to the front and down. This piece does not require screws.

STEP 6. Apply Location Stickers along upright front edge of side panel.

STEP 7. Install top display frame by lowering it onto the upper open ends of the rearmost tubing of the side panels. (Make sure holes along lower cross piece of frame are closest to front of unit) Use four 1" screws through threaded holes in back of tubing to secure frame.

STEP 8. Place the swing stops over double holes located to the farthest left and right inside of lower cross piece of top frame, making sure forward ends are facing outward. Secure with four 2" machine screws and washers.

STEP 9. Install poster swing frames by making sure the long swivel pin of frame is pointing upward. Push upper pin into upper hole of top display frame as far as it will go, locate corresponding hole at bottom of frame and lower swing frame.