


Access Display Group, Inc.

TEL: 800-289-1539 FAX: 877-842-5126


E-MAIL: customerservice@accessdisplaygroup.com

Instruction Sheet

Wooden A-Board 24 x 32 Black Marker Board A-Frame Sidewalk Sign Holder

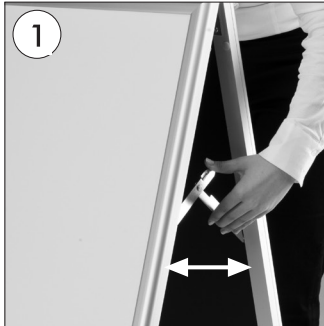

- Pull out the iron legs of the Write on A Board to opposite directions and open your A Board up by putting the scissors on two sides in straight position.

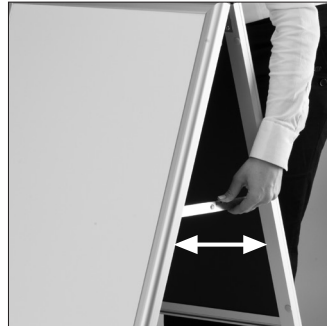

- Suitable for writing with boardmarker & waterbase chalkpen.



• Please inform the order number on the product or on the carton (e.g. 1/110001394-460) to the place that you have made the purchase if any problem with the product occurs.

• All rights reserved. All pictures, figures and writings are secured internationally by copy-right law. Infringements will be sued by civil and legal law.