



Metallic Reversible Riser Centerpiece Vase 28" Tall Set Up Instructions

Pieces Included

- 2 trumpet vase pieces
- 1 center connector sphere
- 1 long connector screw
- 3 nuts
- 2 circular washer disks

Directions

1. Start by screwing one nut at the end of the long connector screw. While screwing the nut in slip one of the washers behind it to keep the nut in place.
2. Pull the screw (nut and washer side facing out) through the widest opening of one of the trumpet pieces. If done correctly the washer disk will fall into place inside of the narrow part of the trumpet piece.
3. Lay the trumpet piece with the screw on its side. While holding the connector screw in place from the inside of the trumpet vase, place the connector sphere through the long connector screw. Push the sphere flush against the trumpet piece while keeping the washer disk secure inside of the trumpet piece. *(Note: You can also perform this step with an additional person holding the pieces in place instead of laying them down.)*
4. Place the narrow end of the second trumpet vase through the connector screw until it's tightly sandwiching the connector sphere between the 2 trumpet pieces.
5. Pull the connector screw so the trumpet vases and connector sphere are flush.
6. Place the last washer disk through the screw and push it as far down as you can towards the narrow part of the vase.
7. Add a nut to the end of the connector screw and firmly twist it down until the disk is secured.
8. Remove your vase from its side position and stand it up on either side — it's now ready to use!

Note: After setting up you will have an extra provided nut. This piece is not required to assemble your metallic reversible riser, but is provided as an extra piece in case one of your other nuts is lost or misplaced.