

UNIVERSAL TWO WIRE ACTUATOR MOTOR

INSTALLING ACTUATOR

Carefully remove the window winder handles, lever surrounds & door panels.

Align actuator in the correct direction. Make sure the actuator does not obstruct any moving parts within the door. Ensure the actuators movement is parallel with lock mechanism.


Drill two holes 5mm (3/16") in the internal side of the door, use actuator mounting holes to indicate location, and then secure.

Align actuator to middle stroke position, align lock rod to middle position.

Use a knuckle to connect the locking rod.


Ensure all screws are secured on the knuckle and complete with thread locking solution (*Loctite*)

Can be used to replace other factory door motors, but please see an Auto Electrician for installation

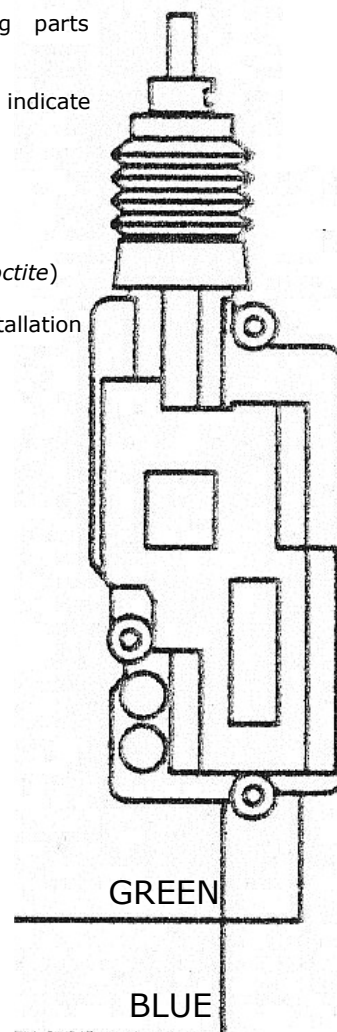


Locking/Unlocking Trigger +/- Pulse

Locking/Unlocking Trigger +/- Pulse

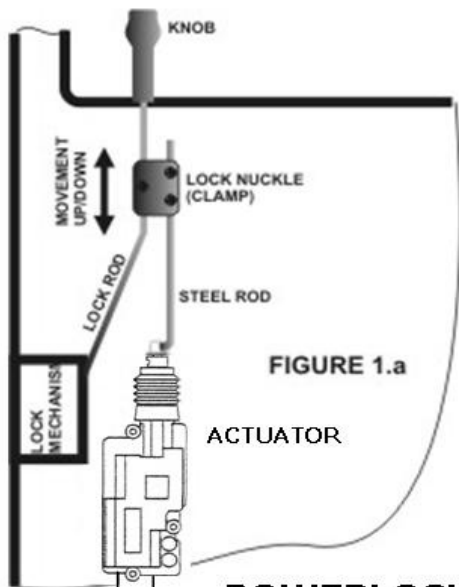

OR

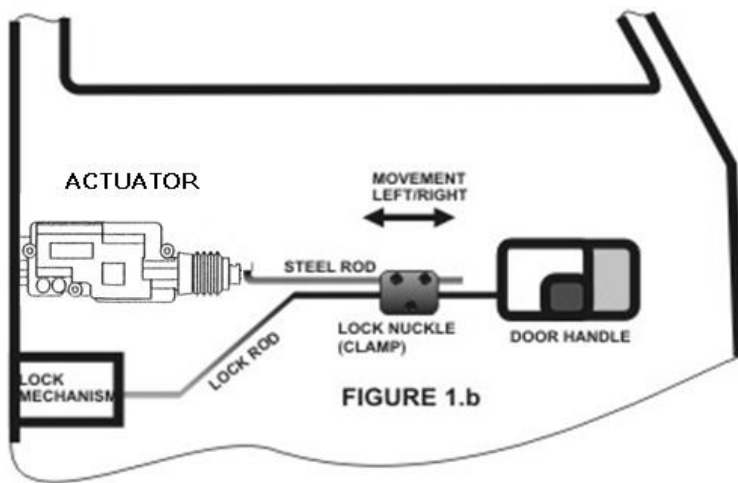

POWERLOCK ACTUATOR WITHIN DOORS