




Skuttle®
Indoor Air Quality Products

To Order Genuine Skuttle Parts
888-SKUTTLE (758-8853) • 740-373-9169
www.skuttleparts.com

Model 60 Series Replacement Parts: Diagram Page

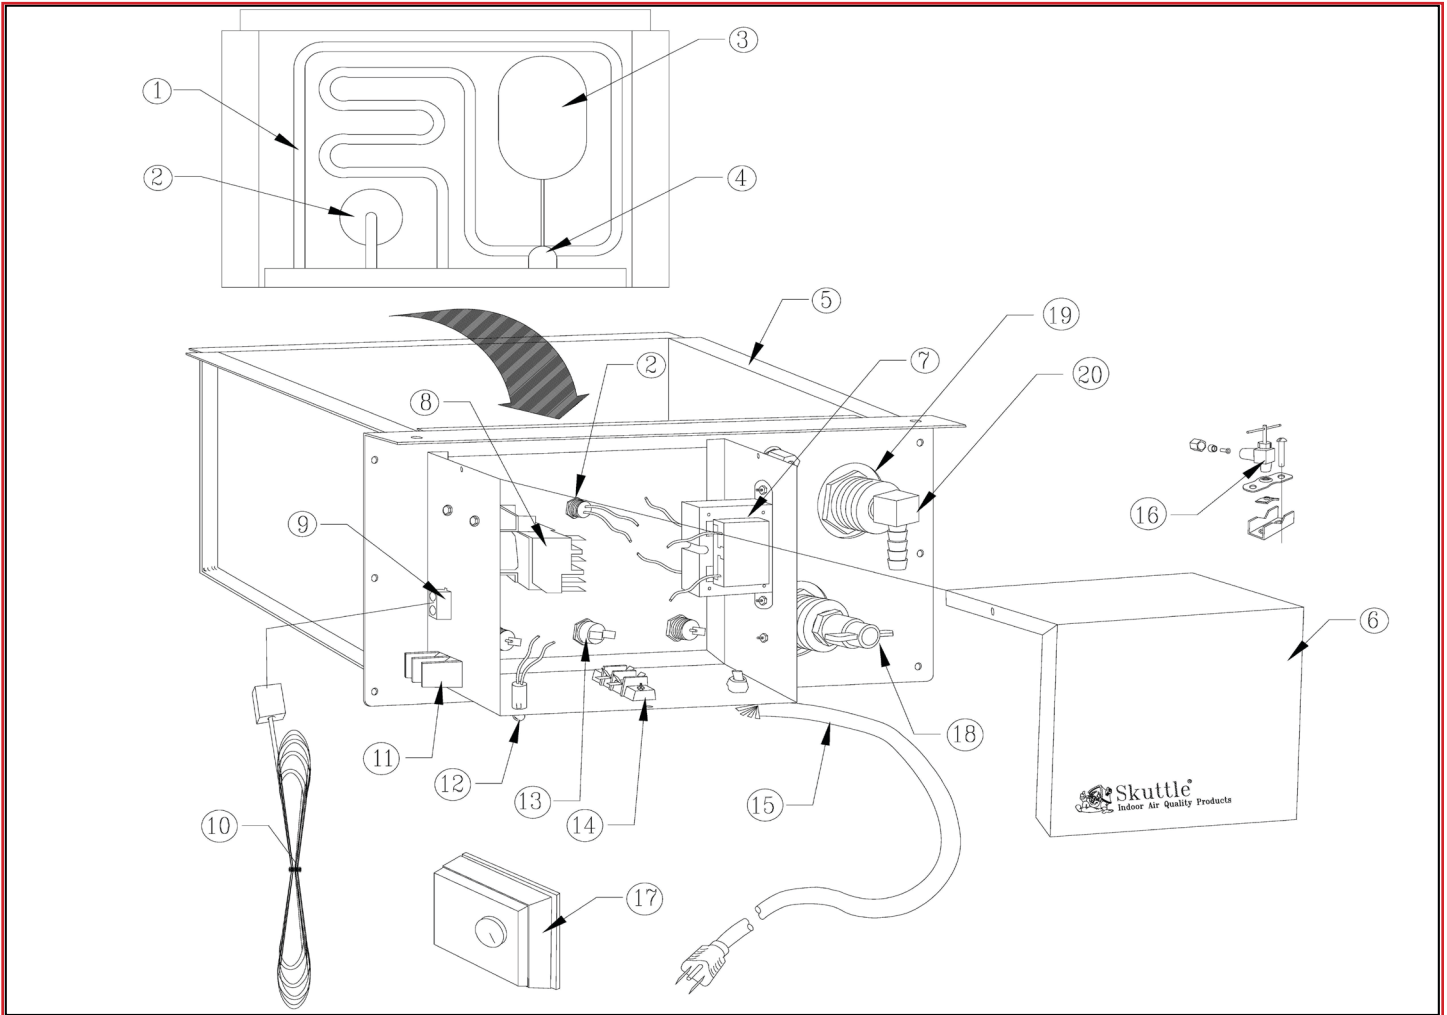

See part numbers and descriptions on accompanying list page.





Skuttle®

Indoor Air Quality Products

To Order Genuine Skuttle Parts
888-SKUTTLE (758-8853) • 740-373-9169
www.skuttleparts.com

Model 60 Series Replacement Parts: List Page

Key	Part Number	Description
1	000-0430-055	120 Volt Heater
2	000-0814-132	Safety Float Switch
3	A00-1309-012	Float Only for Water Fill Valve
4	000-1731-012	Water Fill Valve & Arm Assembly
5	A01-1730-078	Water Pan Assembly
6	000-0641-150	Cover
7	000-0814-133	Transformer 120 Volt Primary 24 Volt Secondary
8	000-0431-031	Control Relay DPST 24 volt
9 & 10	A00-0811-120	Fan Wiring Assembly
11	000-0814-135	Humidistat Control Terminal Block
12	000-0814-139	Indicator Light
13	000-0431-030	Thermal Fan Control "Thermostat"
14	000-0814-134	Power Distribution Terminal Block
15	000-0811-107	120 volt Power Supply Cord
16	A00-1128-005	Saddle Valve
17	SEH-7100-000	Compustat Assembly
18	000-1319-065	Drain Cock Valve
19	A00-1319-067	Drain and Overflow Bushing (Includes Overflow Bushing, Washer, & Lock Nut)
20	000-1106-034	90° Barbed Elbow
Not Shown	A00-0693-020	9 pc. Gasket Set (Includes Drain, Overflow, Thermostat, Safety Float & Heater Washers)
Not Shown	000-0431-039	Safety Control Shut Off
Not Shown	A01-1707-107	Mounting Frame



Model 60-2 Replacement Parts That Differ From 60-1

1	000-0430-056	240 Volt Heater
7	000-0814-140	Transformer 240 volt Primary 24 volt Secondary
15	000-0811-108	240 volt Power Supply Cord

Model F Series Replacement Parts Not Shown

Not Shown	00S-HAFT-000	Automatic Humidifier Flushing Timer
Not Shown	A03-0815-017	Flushing Timer Repair Kit (Includes Timer, Transformer and Solenoid Valve)
Not Shown	WF-10	Chlorine Removal Filter For Steam Humidifiers

See parts diagram with key numbers on accompanying page.