

GRAIN

A U D I O

PWS.01

HEY THERE!

Congratulations on your purchase of your GRAIN AUDIO PWS.01, you're going to love it.

There are a few things you should know about the PWS. First, your PWS is a rechargeable battery powered speaker, so use it until it runs out, then charge it and start all over again. Second, there is no storage on the PWS, you must have access to your digital music library through your phone, tablet or computer, just pair it and play it. Third, the PWS is made of solid wood, don't get it wet.

Finally, the functions phases of the PWS are controlled through and communicated by the three buttons on the top of the unit. Take a look at the graphic on the right hand side of the page for a breakdown.

Now go out, have fun and Play Loud.

-Grain Audio



CONTROL BUTTON:

This button controls Power, Pairing, Play/Pause. The backlit "G" indicates current mode and battery level.




VOLUME DOWN

VOLUME UP

POWER

1. To turn on the PWS 0.1, press and hold down the command button for about 2 seconds until you hear the “power up” tone. The power button will glow blue.
2. To turn off the PWS 0.1, hold the command button down for 1 second until you hear the “power down” tone. The power button will dim.

Note: The power button may glow a different color depending on the charging or battery state. Check the “Battery Level” section of this manual for more information.

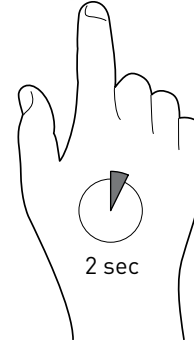

power off



power on

 
BLUETOOTH®

You will only need to pair to the PWS once. After that the PWS will automatically pair to your *Bluetooth*® enabled device each time it is powered up.

1. Before pairing for the first time it is a good idea to have your PWS fully charged.
2. While the PWS power is off place your *Bluetooth*® enabled device within 3 feet of the unit.
3. Press and hold the power button. The PWS will play its “power up” tone which will be followed by the announcement, “pairing mode on” after about 5 seconds. The power button will also indicate pairing mode by flashing blue.
4. Find the “Grain Audio PWS.01” on your *Bluetooth*® enabled device and select it for pairing. The PWS will announce, “pairing complete” when properly connected.

Note:

1. For this step you may need to consult the owners manual for the device you wish to pair with the PWS for any specific instructions.
2. The PWS will remember up to 9 devices but can only pair with one device at a time.
3. If password is requested during pairing mode use “0000”.

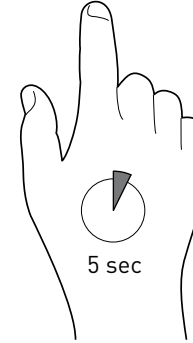

“pairing mode on”

 


“pairing complete”

3.5MM CABLE

If you do not own a *Bluetooth*[®] enabled device you can connect to your PWS with the included 3.5mm cable.


Note: When you get a chance, buy a *Bluetooth*[®] enabled device... it's like having a little bit of magic in your pocket.

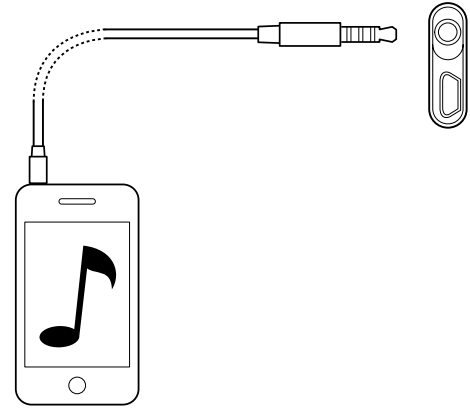

CHARGING

1. To charge, connect the PWS to the wall adapter with the USB cable included in the package. The PWS will announce that it is, "charging" and the power button will glow red.
2. When the PWS is plugged in and has reached a full charge it will announce, "charge complete" and the power button will glow green.

Note: While charging the power button will glow red when the power is turned on or off.

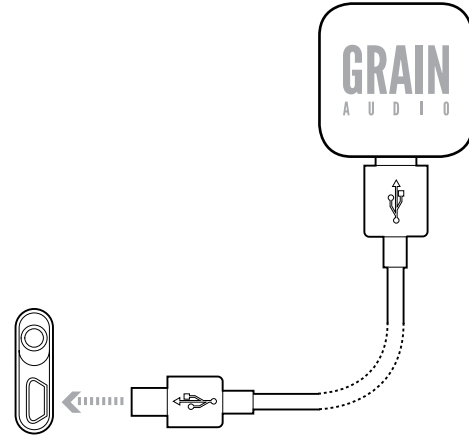

"charging"





"charge complete"

VOLUME

This is pretty simple. The “+” button increases the volume while the “-” button decreases it. The PWS will indicate its max volume by giving you an auditory signal.


Note: The volume control on your paired device is controlled independently from the PWS. Use both sets of controls to achieve the right level for your use.

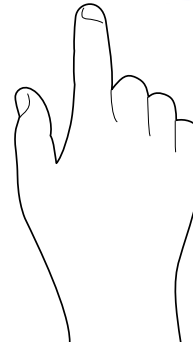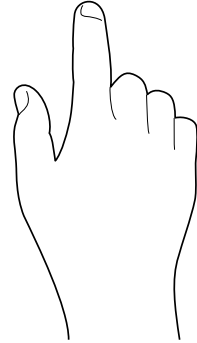

PLAY/PAUSE

During playback you can pause and restart your music by giving the power button a quick press.

Note: If your *Bluetooth*® device is separated from or not streaming to your PWS for 10 minutes, the speaker will automatically power off.

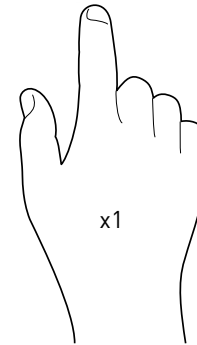

BATTERY LEVEL


The backlit control button indicates battery level by its activity.

- Constant Blue Glow- 50% full or better
- Alternating Blue and Red- 25% full
- Flashing Red- 10% full (accompanied by announcement)


Note: You can also check the battery level by pressing the “+” and “-” buttons at the same time.



50% full or better

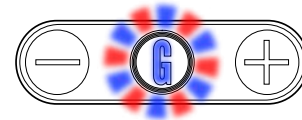

25% full or better

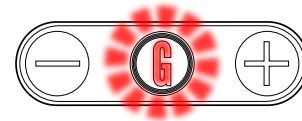

10% full or better- “battery low, charge soon”

TROUBLESHOOTING

NO POWER?

- Check that your PWS.01 is charged
- If your PWS.01 is not charged plug it into a wall socket using the supplied adapter or see the "Charging" section of this manual.

WON'T PAIR?

- Power down the unit and restart things. Make sure you hear the "pairing mode on" voice prompt or see the "Pairing" section of this manual.
- Don't know where to find your *Bluetooth*® settings? Check your device's user manual for location, but it's typically found in the "Settings" portion of the device.
- If password is requested use "0000".

NO MUSIC?

- Check that the PWS.01 is powered up
- Check that your device is properly paired with the PWS.01
- Check the volume of your PWS.01
- Check the volume of your *Bluetooth*® enabled device
- Make sure your devices playback is not paused
- Refer to your phone, computer or other *Bluetooth*® enabled device manual

Note: Not all applications or devices support *Bluetooth*®.

CARE AND FEEDING

This is a real, solid wood product. Wood is a great material for making audio products, its resonant qualities cannot be matched by man-made plastics or composites. Wood is also a beautiful material, and the natural color and grain variations inherent to the wood are part of this beauty.

Being made from a natural material there are a few precautions to take when using your Grain Audio product...

1-Keep things dry. Wood (and electronics by the way) don't like being wet or submerged in liquid... steam saunas aren't great places for them either. Please keep this in mind.

2-Take care. The wood housing of your Grain Audio product will take some bumps and bruises. Unlike harder plastics these scrapes may show but that's okay; these will not affect the sound quality of your product. Plus, it'll make you look cool.

3-Shade. Wood will change color over time. This is a result of the natural interaction between the wood, oxygen and sunlight. We're pretty sure you can't control the oxygen content in the air around your Grain Audio product but you can keep it out of prolonged exposure to direct sunlight. No sunscreen though, that would be bad.

4-Finish. The wood in your Grain Audio product is protected by a durable water resistant finish. It is designed to last the life of the product and should not need refinishing. However, an occasional cleaning with a soft cloth will help keep things pretty.

PLAY | LOUD