



Model 665MXTa

REPLACEMENT PARTS

In the U.S.A., replacement parts may be ordered from the Minn Kota Parts Dept., Johnson Fishing, Inc., 1531 E. Madison Ave., Mankato, MN 56001. In Canada, parts may be ordered from any of the Canadian Authorized Service Centers shown on the enclosed list. Be sure to provide the MODEL and SERIAL numbers of your motor when ordering parts and please use the correct part Numbers from the Parts List. Payment for parts ordered from the Minn Kota Parts Dept. may be by cash, check, MasterCard, Visa card, or UPS C.O.D. Please add \$3.00 for postage and handling on all orders. Minimum charge \$3.00.

| Item No. | Part No. | Description | Item No. | Part No. | Description |
|----------|----------|------------------------------------|----------|----------|--|
| 1 | 206-9026 | Motor Assembly-Complete (42", 48") | 53 | 201-1365 | Collar Screw |
| 1A | 206-6641 | Decal-Motor (2 req'd.) | 54 | 233-1303 | Screw |
| 2 | 406-022 | Front Endbell | 55 | 233-3101 | Hex Nut |
| 3 | 406-600 | Flange Bearing | 56 | 230-2935 | Strain Relief |
| 4 | 406-480 | Gasket | 57 | 230-5521 | Decal-Steering Motor |
| 5 | 406-460 | O-Ring | 58 | 235-3800 | Sideplate-Left |
| 6 | 405-204 | Armature | 59 | 235-5505 | Decal-Sideplate (2 req'd.) |
| 7 | 405-300 | E-Ring | 60 | 235-3900 | Sideplate-Right |
| 8 | 406-170 | Steel Washer | 61 | 230-3430 | Screw (4 req'd.) |
| 9 | 405-171 | Thrust Washer | 62 | 216-2544 | Control Box |
| 10 | 405-257 | Center Section w/Magnets | 63 | 235-4021 | Control Board Assembly |
| 12 | 406-341 | Brush Plate Screw (2 req'd.) | 64 | 230-1710 | Washer-Insulating (2 req'd.) |
| 12A | 406-090 | Brushholder | 65 | 236-5105 | Insulating Pad |
| 13 | 406-081 | Brush Spring (2 req'd.) | 66 | 206-6931 | Gasket-Cover |
| 14 | 406-070 | Brush (2 req'd.) | 67 | 206-0253 | Control Box Cover |
| 15 | 406-404 | Brush Plate w/Bearing | 68 | 235-3402 | Screw |
| 16 | 406-032 | Rear Endbell | 69 | 235-0901 | Handle Assembly |
| 17 | 406-461 | Seal (1 req'd.) | 70 | 235-0030 | Handle Stop |
| 17A | 406-471 | Cup Seal | 70A | 201-0010 | Outer Handle Bearing |
| 18 | 401-462 | Thru Bolt O-Ring (2 req'd.) | 71 | 235-5635 | Decal-Cover |
| 19 | 405-352 | Thru Bolt (2 req'd.) | 72 | 201-2100 | Screw (9 req'd.) |
| 21A | 406-010 | Ball Bearing | 73 | 233-2900 | Strain Relief (2 req'd.) |
| 21B | 401-050 | Thrust Disc | 74 | 235-5410 | Shrink Tube (2 req'd.) |
| 25 | 203-2053 | Tube—42" | 75 | 235-1201 | Coil Cord |
| 25A | 203-2054 | Tube—48" (Optional) | 76 | 201-2910 | Strain Relief |
| 26 | 206-1125 | Propeller | 77 | 235-0600 | Lead Wire (Includes Battery Terminals) |
| 27 | 209-2600 | Drive Pin | 78 | 206-5400 | Wire Insulator (Lg.) |
| 28 | 205-1700 | Prop Washer | 79 | 230-3001 | Pig Ring (2 req'd.) |
| 29 | 205-3100 | Prop Nut | 80 | 235-0701 | Control Cord |
| 30 | 235-1902 | Hinge Base | 81 | 230-4510 | Foot Pedal Base |
| 31 | 230-1830 | Drive Housing | 82 | 230-8500 | Wear Plate |
| 32 | 230-5110 | Pivot Pad Support (4 req'd.) | 83 | 230-4516 | Foot Pedal-Upper |
| 33 | 230-5100 | Pivot Pad (2 req'd.) | 84 | 230-4520 | Foot Pedal-Lower |
| 34 | 201-3110 | Speed nut (4 req'd.) | 85 | 230-7210 | Lever-Mom/Con |
| 35 | 230-0500 | Latch Pin | 86 | 230-2730 | Spring-Long/Upper Pedal |
| 36 | 230-0510 | Pivot Pin | 87 | 230-2731 | Spring-Short/Upper Pedal |
| 37 | 235-3600 | Release Rod | 88 | 230-2732 | Spring-Lower Pedal |
| 37A | 230-3110 | Push Nut | 89 | 230-4012 | Control Board Assembly |
| 38 | 230-2700 | Spring | 90 | 230-0120 | Knob-Speed Selector |
| 39 | 230-3700 | Release Lever | 91 | 230-0121 | Housing-Speed Selector |
| 40 | 230-1700 | Spacer-Release Lever | 92 | 230-2840 | Actuator-Board |
| 41 | 230-3430 | Screw | 93 | 230-2841 | Actuator-Mom/Con |
| 42 | 230-0100 | Release Lever Knob | 94 | 230-2842 | Actuator-Steering |
| 43 | 235-1912 | Hinge Bracket | 95 | 230-2100 | Screw #6-20 x 1/2 (5 req'd.) |
| 44 | 201-3010 | Retaining Ring(2 req'd.) | 96 | 237-2100 | Screw #8-18 x 5/8 (5 req'd.) |
| 45 | 201-1710 | Clamp Screw Washer (2 req'd.) | 97 | 230-6601 | Decal Mom/Con Lever |
| 46 | 201-1375 | Clamp Screw (2 req'd.) | 98 | 233-5130 | Bumper-Actuator |
| 47 | 235-0500 | Hinge Pin | 99 | 209-0700 | Ring Terminal (2 req'd.) |
| 48 | 235-1500 | Adjusting Spacer (9 req'd.) | 100 | 299-4802 | Bag Assembly |
| 49 | 235-2100 | Screw | *100A | 230-5131 | Rubber Bumper (6 req'd.) |
| 50 | 235-3401 | Screw (2 req'd.) | 101 | 235-3100 | Nut-Jam |
| 51 | 235-6502 | Front Housing | 102 | 206-0310 | Fused Grounding Wire |
| 52 | 230-1505 | Collar Drive | | | |
| 52A | 203-2800 | Tension Block | | | |

