



In the U.S.A., replacement parts may be ordered directly from MINN KOTA Parts Dept., JWA North America, 1531 E. Madison Avenue, Mankato, Minnesota 56001. In Canada, parts may be ordered from any of the Canadian Authorized Service Centers shown on the enclosed list. Be sure to provide the MODEL and SERIAL numbers of your motor when ordering parts. Please use the correct part numbers from the parts list. Payment for any parts ordered from the MINN KOTA parts department, may be by cash, personal check, Discover Card, MasterCard, VISA, or UPS C.O.D. To order, call 1-800-227-6433 or FAX 1-800-527-4464.

Hors de États-Unis, veuillez vous reporter à la liste ci-jointe pour le Centre de Service Agréé MINN KOTA le plus proche. Ne pas oublier de fournir les numéros de Modèle et de Série de votre Moteur lorsque vous placez une commande. Employez toujours le numéro de pièce exact se trouvant sur la liste des pièces de remplacement.

Fora da América do Norte, queira consultar a lista anexa para identificar o Centro de Serviço Autorizado MINN KOTA. Não deixe de incluir o número do MODELO e o número de SÉRIE do seu motor ao pedir peças. Sempre use os números corretos das peças da lista de peças.

1	403023	FRONT ENDBELL RT27/S	25	2061125	PROP ( WEEDLESS WEDGE)	54	2020310	CONNECTING WIRE-4-1/2
	406026	FRONT ENDBELL RT36/S	26	2051700	LOCKWASHER-PROP	55	2332102	SCREW-10-24 X 1-3/4 SS
2	406402	BRUSH PLATE ASSEMBLY RT27/S	27	2053100	NUT-PROP	56	2333101	NUT-HEX
	406404	BRUSH PLATE ASSEMBLY RT36/S	28	2092600	PIN-DRIVE SS	57	2990911	HANDLE ASSY-W/U-JOINT 5SP
3	406081	BRUSH SPRING ( 2 REQ'D )	29	2991963	BRACKET-KOTA STOW-ASSY SW	58	2060000	HANDLE BEARING ( 2 REQ'D )
4	406072	BRUSH ASSEMBLY ( 2 REQ'D )	29A	2771909	BRACKET ASSY (INCLUDES 29B—32)	59	2771809	U-JOINT ASSEMBLY
5	406341	BRUSH PLATE SCREW ( 2 REQ'D )	29B	2031922	BRACKET-DIECAST-SW (ORDER 29A)	60	2302742	SPRING-DETENT (OFF) SS
6	2066649	DECAL MOTOR "RIPTIDE" ( 2 REQ'D )	30	2011376	SCREW-CLAMP/NEW KNOB SS ( 2 REQ'D )	61	2302743	SPRING-DETENT HANDLE-TILT
7	403050	THRUST DISK RT27/S	31	2331700	WASHER-CLAMP SCREW 1.5 OD ( 2 REQ'D )	62	2302745	SPRING-RELEASE BUTTON SS
8	406010	BALL BEARING RT36/S	32	2333000	RETAINING-RING SS ( 2 REQ'D )	63	2303720	RELEASE BUTTON-HANDLE
9	403010	THRUST BALL RT27/S	33	2034301	ARM-LINK (LOWER) SW	64	2060410	HANDLE (TOP HALF)
10	406090	BRUSH HOLDER RT27/S	34	2030502	PIN-PIVOT (LOWER ARM)	65	2060415	HANDLE (LOWER HALF)
11	403207	ARMATURE ASSEMBLY RT27/S	35	2034201	ARM-LINK (UPPER) SW	66	2303412	SCREW-6-20 X 5/8 SELF TAP ( 11 REQ'D )
	405204	ARMATURE ASSEMBLY RT36/S	36	2030501	PIN-PIVOT (UPPER ARM)	67	2060005	BEARING-HANDLE PIVOT (2 REQ'D )
12	405300	E-RING	37	2263011	E-RING 3/8 DIA. SHAFT ( 4 REQ'D )	68	2060425	HANDLE- EXTENSION
13	406170	THRUST WASHER- STEEL ( AS REQ'D )	38	2030981	HANDLE-TILT (SW)	69	2010701	BATTERY CLIPS ( 2 REQ'D )
14	405171	THRUST WASHER- NYLON ( AS REQ'D )	39	2031701	WASHER-SPRING SEAT SS			
15	406480	GASKET	40	2012701	SPRING-LOCKBAR SS			
16	403256	CENTER SECTION W/MAGNETS RT27/S	41	2033605	LOCKBAR (KOTA STOW)			
	405258	CENTER SECTION W/MAGNETS RT36/S	42	2033011	E-RING 5/32 SS			
17	406460	O-RING	43	2032020	TUBE-GUIDE (KOTA STOW)			
18	403032	REAR ENDBELL	44	2030500	PIN-PIVOT (LINK/TUBE) ( 2 REQ'D )			
19	406461	SEAL	45	2037300	BUSHING-HINGE ( 2 REQ'D )			
20	406471	SEAL- CUP	46	2032800	TENSION BLOCK			
21	401462	O-RING —THRU BOLT ( 2 REQ'D )	47	2031520	COLLAR-DEPTH (W/O INSERT)			
22	403354	THRU BOLT RT27/S ( 2 REQ'D )	48	2011366	SCREW-COLLAR/NEW KNOB SS ( 2 REQ'D )			
	405352	THRU BOLT RT36/S ( 2 REQ'D )	49	2050602	LEADWIRE W/CLIPS SW			
23	2039072	MOTOR ASSEMBLY RT27/S	50	2062550	CONTROL BOX			
	2069028	MOTOR ASSEMBLY RT36/S	51	2060263	COVER-CONTROL BOX			
24	2032051	TUBE (COMPOSITE) 30"	52	2035682	DECAL-COVER RT27/S			
	2032052	TUBE (COMPOSITE) 36" OPTIONAL	52	2065682	DECAL-COVER RT36/S			
	2032053	TUBE (COMPOSITE) 42" OPTIONAL	53	2064022	SWITCH-FWD/REV COMBO-5 SP			

RT27/S RT36/S

