



In the U.S.A., replacement parts may be ordered directly from MINN KOTA Parts Dept., JWA North America, 1531 E. Madison Avenue, Mankato, Minnesota 56001. In Canada, parts may be ordered from any of the Canadian Authorized Service Centers shown on the enclosed list. Be sure to provide the MODEL and SERIAL numbers of your motor when ordering parts. Please use the correct part numbers from the parts list. Payment for any parts ordered from the MINN KOTA parts department, may be by cash, personal check, MasterCard, VISA, or UPS C.O.D. To order, call 1-800-227-6433 or FAX 1-800-527-4464.

Hors de États-Unis, veuillez vous reporter à la liste ci-jointe pour le Centre de Service Agréé MINN KOTA le plus proche. Ne pas oublier de fournir les numéros de Modèle et de Série de votre Moteur lorsque vous placez une commande. Employez toujours le numéro de pièce exact se trouvant sur la liste des pièces de remplacement.

Fora da América do Norte, queira consultar a lista anexa para identificar o Centro de Serviço Autorizado MINN KOTA. Não deixe de incluir o número do MODELO e o número de SÉRIE do seu motor ao pedir peças. Sempre use os números corretos das peças da lista de peças.

Item	Part No.	Description	Item	Part No.	Description	Item	Part No.	Description
1	406-024	Front Endbell	34*A	225-4321	Arm- Lower ( order item 34 )	65	206-2550	Control Box
3	406-404	Brush Plate Assembly	35	215-2610	Spring Pin	66	203-3400	Screw
4	406-081	Brush Spring ( 2 req'd )	36	223-3600	Lock Bar	67	201-3110	Hex Nut
5	406-072	Brush Assembly ( 2 req'd )	37	215-2700	Spring	68	206-4022	Switch- 5 Spd, For/Rev
6	406-341	Brush Plate Screw ( 2 req'd )	38	215-1700	Washer- Eye Shaft ( 4 req'd )	71	299-0915	Handle Assembly
7	406-010	Ball Bearing	39	215-3600	Eye Shaft	72	206-0000	Handle Bearing ( 2 req'd )
8	405-204	Armature Assembly	40	225-1600	Rope	77	230-2743	Spring- Detent
9	405-300	E-Ring	41	215-0400	Pull Grip	78	230-2742	Spring- Detent ( Off )
11	406-170	Thrust Washer- Steel ( as req'd )	42	226-3900	Motor Rest	79	206-0410	Handle- Top Half
12	406-171	Thrust Washer- Nylatron ( as req'd )	43	230-3430	Screw ( 4 req'd )	80	206-0005	Bearing- Handle Pivot ( 2 req'd )
13	406-480	Gasket	44	223-6000	Bearing- Nyliner ( 2 req'd )	81	206-0415	Handle- Lower Half
14	405-257	Center Section w/Magnets	45	229-3801	Tube Lock	82	230-3720	Release Button
15	406-460	O-Ring	46	229-3511	Bolt- Upper Arm ( 4 req'd )	83	230-2745	Spring- Release Button
16	406-600	Flange Bearing	47	229-3500	Bushing ( 4 req'd )	84	230-3412	Screw ( 11 req'd )
17	406-032	Rear Endbell	48	223-0500	Hinge Pin ( 2 req'd )	85	206-0425	Handle- Extension
18	406-461	Seal	49	225-1941	Bow Plate	87	203-1520	Collar- Depth
19	406-471	Seal- cup	50	226-7200	Latch Lever	88	201-1365	Knob Screw- Collar
20	401-462	O-Ring- Thru Bolt ( 2 req'd )	51	226-0500	Pin- Roll Latch Lever ( 2 req'd )	89	203-0620	Leadwire- w/ Battery Clips
21	405-352	Thru Bolt ( 2 req'd )	52	226-3800	Strap- Hold Down	89A	201-0700	Replacement Battery Clips ( 2 req'd )
25	206-9020	Motor Assembly	53	226-1910	Bracket- Hold Down Strap	90	201-0705	Battery Clip Sleeve- Black
26	200-6606	Decal ( 2 req'd )	54	226-3440	Screw	90A	201-0706	Battery Clip Sleeve- Red
27	203-2053	Tube	55	233-3101	Nut- Hex	91	202-0310	Connector Cable
27	203-2054	Tube ( 48" Optional )	56	226-1811	Hinge Base	92	299-4803	Bag Assembly ( 92A — 92D )
28	206-1125	Propeller	56*A	223-2350	Guide- Rope	92*A	215-3501	Mounting Bolt ( 4 req'd )
29	205-1700	Lockwasher	56*B	226-4705	Insert	92*B	215-3100	Mounting Nut ( 4 req'd )
30	205-3100	Nut- Prop	57	233-1570	Sleeve- Roller	92*C	215-1726	Flat Washer ( 4 req'd )
31	209-2600	Pin- Drive	58	226-1821	Hinge Door	92*D	230-1720	Mounting Washer- Rubber ( 6 req'd )
	299-1970	Bow Mount Assembly ( 32 — 60 )	58A	215-1531	Hinge Sleeve Half ( 2 req'd )	93	225-6300	Tie Wrap
32	226-4201	Arm- Upper	59	226-2640	Hinge Pin- Door			
33	226-5120	Bumper	60	226-0180	Knob- Hinge Cover			
34	277-4302	Arm- Lower Assembly ( 34A — 41+ 59 )	61	226-0210	Control Box Cover			
			62	218-5600	Decal- Cover			

\* This item is part of an assembly. This item cannot be sold separately due to machining and /or assembly that is required.

# 36AT/H

