
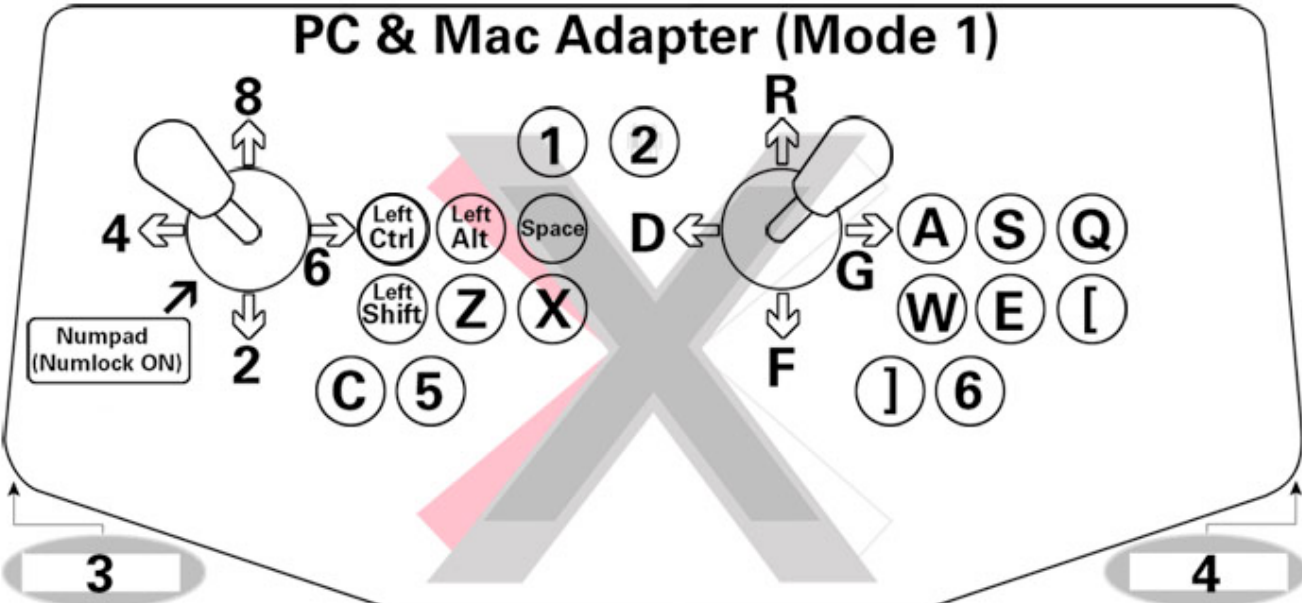


PC adapter Instructions:

Turn Off Computer!
 Damage will result if you connect to PS/2 Keyboard Port with PC on.

The X-Arcade™ is recognized by your computer as a standard keyboard. This is a great benefit as you don't need to install any drivers or software.

- 1.) Turn off the computer! (unless using our USB adapter)
- 2.) Unplug keyboard from computer, plug it in back of X-Arcade™
- 3.) Connect either end of Serial Cable to PC adapter (provided)
4. Connect other end of Serial Cable to X-Arcade™
- 5.) Plug PC Adapter into your computer's PS/2 Keyboard Port.

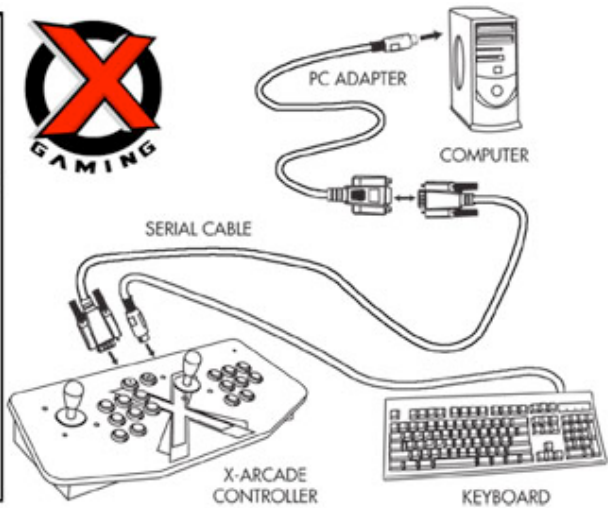

X-Arcade Programming Instructions:

At first, programming the X-Arcade™ is best performed in Notepad, MS Word, or any text editor, so that you can see the results of the programming. As you become more accustomed to programming The X-Arcade™, it will be possible to program the X-Arcade™ "on the fly" within the game.

IMPORTANT NOTES:
 When the light is on, you are in play mode. When the light is off you are in program mode.
 Remember that MODE 1 (switch closest to the serial cable) cannot be programmed.
 The keyboard must be plugged into the back of the X-Arcade to program it.
 To change modes, you must slide the switch on the back to desired Mode position, and then press the SAVE/LOAD button TWICE to load that mode.
 Programming is for the PC only, and does not function on game consoles.

- 1) Start by choosing the mode you wish to program by moving the switch away from the serial cable to MODE 2, 3, or 4. Again, MODE 1 cannot be programmed.
- 2) Press the SAVE/LOAD button on the back of the X-Arcade™ (the light turns off)
- 3) Press AND HOLD any button or direction on the X-Arcade that you wish to change
- 4) While still holding a button or direction from step 3, press and hold a key on your keyboard until the light on the X-Arcade blinks. Once it blinks it has been programmed, and you can release both held buttons/keys.
- 5) Repeat steps 3 and 4 to program additional buttons/directions. (do not hit SAVE/LOAD again)
- 6) When you have programmed everything the way you want, press the SAVE/LOAD button on the back of the X-Arcade once more to save your settings onto the internal memory chip.
- 7) Enjoy classic gaming!

