

7 Step

Inflatable Foam Pit Instruction

Follow These Steps For Easy Setup

One of the most important things for our clients to know is how to properly inflate and deflate a foam pit for easy setup and clean up.

1 First roll your foam pit to desired location



2. Next attach the blower to the vinyl air duct at the end of the foam pit. Look for the black strap



3. Next begin to roll out each side until the foam pit makes a perfect square.



4. This is what your foam pit should look like once it is all unfolded and ready for inflating. At this point you should go ahead and plug in the blower



5. Turn blower on and begin to inflate the foam pit. You will need to locate the zipper on the same side as the blower.



6. Make sure to close the zipper so the foam pit will hold air. Once the zipper is closed the foam pit will inflate very quickly.



7. Your foam pit should be very tight and fully inflated at this time.



