


Adjusting Bi-Metal Temperature Sensors

This drawing is only to illustrate the spacing between the centerline of the attachment to the tab point. We connect both sensors with one spade terminal where they come together.

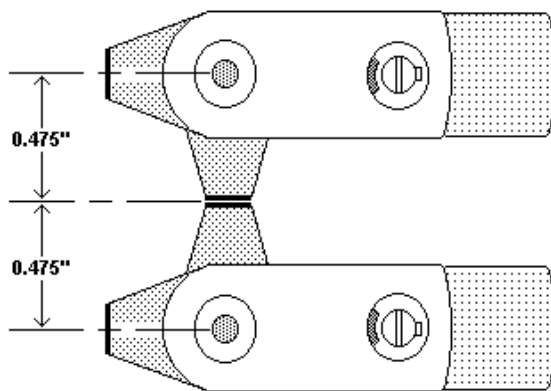

Move the tab to the right or clockwise so it is at the 3:30 position.

Clockwise = warmer
Counterclockwise = cooler

The lower tab is the Interlock. It should be set at 5 to 5:30 position. Adjusting this tab is opposite of the above control.

Clockwise = cooler
Counterclockwise = warmer