


Boiler Installation Diagram

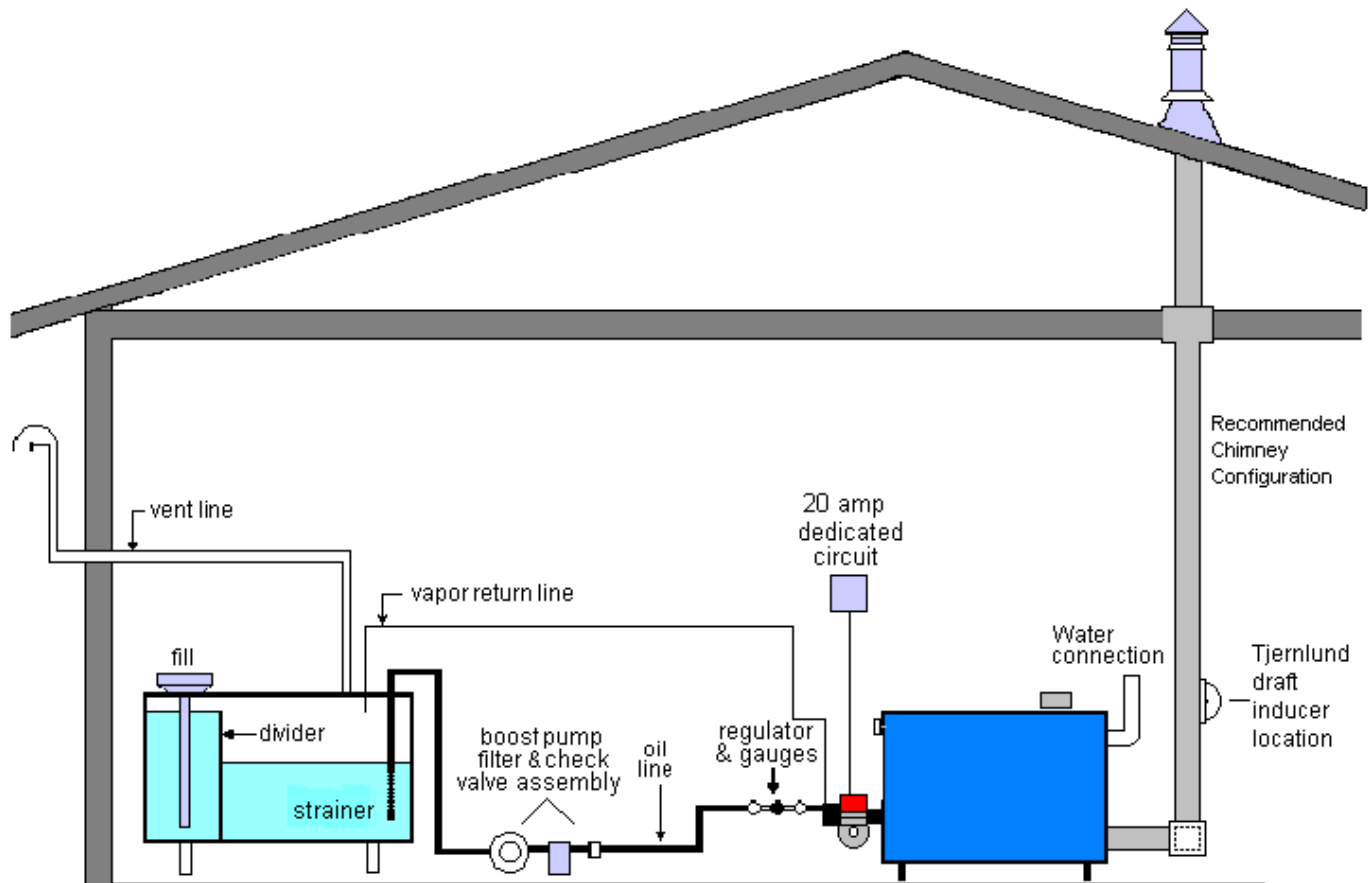

Notes:

1. The door can hinge right or left, be sure to direct supplies to hinge side.
2. This drawing is only pertinent to the fuel and venting requirements.
3. All water connections and related installation issues are the responsibility of the installer.
4. This drawing is not intended to be complete. The entire installation & operation manual must be referred to prior to startup.

NOTE: Carefully read **this complete manual** before installing the INOV8 system. The above diagram is intended only for illustration purposes and cannot be used in place of the detailed instructions.