

**FIGURE 9 - ELECTRODE ADJUSTMENT DIAGRAM**

Note: Insure that the spacing between the electrodes and the module components or flame retention head is never less than the 1/8" gap between the electrodes, or the ignition transformer will short-out and fail. On boiler burners the space between the end of the electrodes and the tip of the nozzle can be up to 3/16".

