# INSTALLATION INSTRUCTIONS MINI MAG 800 LB. LIFT

- 1) Determine which piling is to be used to mount the Mini Mag Lift. Timber piles should be 8" in diameter or greater. Square piles should be 6" x 6" or greater. Both pilings must be tied back to the dock or sea wall.
- 2) Mount the track as per figure #001. The top of the track (2) should be 2 feet above the deck or seawall cap. It is not necessary for the track to reach the bottom. It should reach to 3' below low water. Be sure to install the 3" dock washer (17A) behind the head of the 5/8" carriage mounting bolt (17) and the 5/8" x 1 1/2" stop bolt (16) at the bottom of the track. The track should have a slight backward pitch. It may be necessary to install a wooden shim between the channel spacer (3) and the track to compensate for a out of plumb piling.
- 3) Lubricate the stainless steel axles with a marine grease and install the poly rollers (8) onto the carriage. Apply some grease to the inside walls of the track to lube the poly rollers. Clamp a set of vice grips on the lip of the track 3' down from the top of the track. Install the arms in the track and lower the arm until it rests on the vice grips.
- 4) Install the AMS 1000 per figure #006 with the electric motor mounts or the manual winch per figure #007 to the top of the track. Install the cable in accordance with figure #006 and the blue nylon sheave if applicable. Plug in the power cord. Firmly grasp the cable using leather gloves and turn the switch to the up position. Neatly wind the cable onto the drum.
- 5) Determine the width of the vessel being lifted. If the vessel is 4' wide, measure out 2' on each arm. This will be your center mark for installing the horizontal bunks. Install the horizontal bunks in accordance with figure #004. Initially set the bunks at about 18" apart for a VEE bottom boat. That would be 9" on either side of the center mark.

## IMPORTANT

Apply a good heavy grease to the winch gears. (Use the two zirk fittings located on either side of the worm gear.) If the gears are not lubricated after installation the lift will bind and wear the gears producing a fine powder and a scraping noise. This is for electric models. The manuals do not require any lubrication.

# INSTALLATION INSTRUCTIONS MINI MAG 800LB. LIFT CON'T.

6) Check all nuts and bolts to be sure they are tight before fitting the boat onto the lift. Lower the lift to a depth deep enough to move the boat over the lift. Place the boat more forward so the transom extends 1' - 2' past the end of the bunks. Ideally the center of gravity will be located in the center of the forks. If the carriage sticks, the center of gravity is off center. Reposition the boat to center the weight on the lift and raise the boat. Adjust the bunks and guides if to securely hold the boat if necessary.

### \*\*\*\*\*\*\*\*\*\*IMPORTANT\*\*\*\*\*\*\*


DO NOT HARDWIRE THIS LIFT OR LEAVE IT PLUGGED IN WHILE NOT IN USE TO AN ELECTRICAL CIRCUIT. IF THE GROUND WIRE IS ALLOWED TO REMAIN CONNECTED TO THE CIRCUIT WHILE THE LIFT IS NOT IN USE, ELECTROLYSIS WILL OCCUR. THIS WILL CORRODE THE TRACK AT A GREATLY ACCELERATED RATE.


800M MINI MAG LOAD SHEET PARTS LIST		
NO.	ITEMS	QTY
1	2' x 3' FORK ARM	1
2	TRACK 8'/10'/12'	1
4	DL 800 WINCH	1
5	MANUAL MOTOR MOUNT	1
6	3" NYLON PULLEY	1
7	3/16" S.S. CABLE WITH STOP 16'-8'/20'-10'/24'-12'	1
8	POLY ROLLERS	4
9	3/8" STAINLESS U-BOLTS	4
10	3/8" STAINLESS FLAT WASHERS	8
11	3/8" STAINLESS NUTS	8
12	NOT USED	0
13	2" x 4" x 5' TIMBER RUNNERS-CARPETED (RETAIL ONLY)	2
14	FLAT RUNNER BRACKETS (HORIZONTAL TYPE)	4
15	7" WIDE CARPETS x 4' LONG (WHOLESALE ONLY)	2
16	5/8" x 1 1/2" GAL HEX BOLT (STOP BOLT)	1
16a	5/8" GAL NUTS	1
18	3/8" x 1" CARRIAGE BOLTS	4
18a	3/8" GAL NUTS	4
19	1/2" x 2 1/2" STAINLESS HEX BOLT	1
19a	1/2" STAINLESS LOCK NUT	1
20	3/8" x 1" GAL HEX BOLTS	2
20a	3/8" GAL NUTS	2
21	3/8" x 2 1/2" GAL CARRIAGE BOLTS	4
21a	3/8" GAL NUTS	4
22	NOT USED *	0
22a	NOT USED	0
23	NOT USED	0
23a	NOT USED	0
24	NOT USED	0
24a	NOT USED	0
24b	NOT USED	0
24c	NOT USED	0
25	NOT USED	0
26	NOT USED	0
27	NOT USED	0

	800M MINI MAG LOAD SHEET PARTS LIST				
NO.	ITEMS (CONTINUED)	QTY			
PILE MOUNTED					
3	BACKING CHANNELS (SPACER)	2			
17	5/8" x 14" BUTTON HEAD BOLTS	2			
17a	5/8" DOCK WASHERS WITH SQUARE ID 3" OD	2			
17b	5/8" WASHERS	2			
17c	5/8" GAL NUTS	2			
	OPTIONAL				
28	SEAWALL MOUNT	1			

800E MINI MAG LOAD SHEET PARTS LIST				
NO.	ITEMS	QTY		
1	2' × 3' FORK ARM	1		
2	TRACK 8'/10'/12'	1		
4	AMS 1000 MOTOR WITH COVER	1		
5	ELECTRIC MOTOR MOUNTS	2		
6	NOT USED	0		
7	1/4" S.S. CABLE WITH THIMBLE 7'-6"-8'/9'-6"-10'/11'-6"-12'	1		
8	POLY ROLLERS	4		
9	3/8" STAINLESS U-BOLTS	4		
10	3/8" STAINLESS FLAT WASHERS	8		
11	3/8" STAINLESS NUTS	8		
12	NOT USED	0		
13	2" x 4" x 5' TIMBER RUNNERS-CARPETED (RETAIL ONLY)	2		
14	FLAT RUNNER BRACKETS (HORIZONTAL TYPE)	4		
15	7" WIDE CARPETS x 4' LONG (WHOLESALE ONLY)	2		
16	5/8" x 1 1/2" GAL HEX BOLT (STOP BOLT)	1		
16a	5/8" GAL NUTS	1		
18	3/8" x 1" CARRIAGE BOLTS	4		
18a	3/8" GAL NUTS	4		
19	1/2" x 2" GAL HEX BOLT	1		
19a	1/2" GAL LOCK WASHER	1		
19b	1/2" GAL NUT	1		
20	3/8" x 1" GAL HEX BOLTS	4		
20a	3/8" GAL NUTS	4		
21	3/8" x 2 1/2" GAL CARRIAGE BOLTS	4		
21a	3/8" GAL NUTS	12		
22	NOT USED	0		
23	NOT USED	0		
23a	NOT USED	0		
24	NOT USED	0		
24a	NOT USED	0		
24b	NOT, USED	0		
24c	NOT USED	0		
25	3/16" CABLE CLAMP	1		
26	AMS POLY COVER	1		
27	BACKING PLATE	1		


	800E MINI MAG LOAD SHEET PARTS LIST				
NO.	ITEMS (CONTINUED)	QTY			
	PILE MOUNTED				
3	BACKING CHANNELS (SPACER)	2			
17	5/8" x 14" BUTTON HEAD BOLTS	2			
17a	5/8" DOCK WASHERS WITH SQUARE ID 3" OD	2			
17ь	5/8" WASHERS	2			
17c	5/8" GAL NUTS	2			
	OPTIONAL				
28	SEAWALL MOUNT	1			

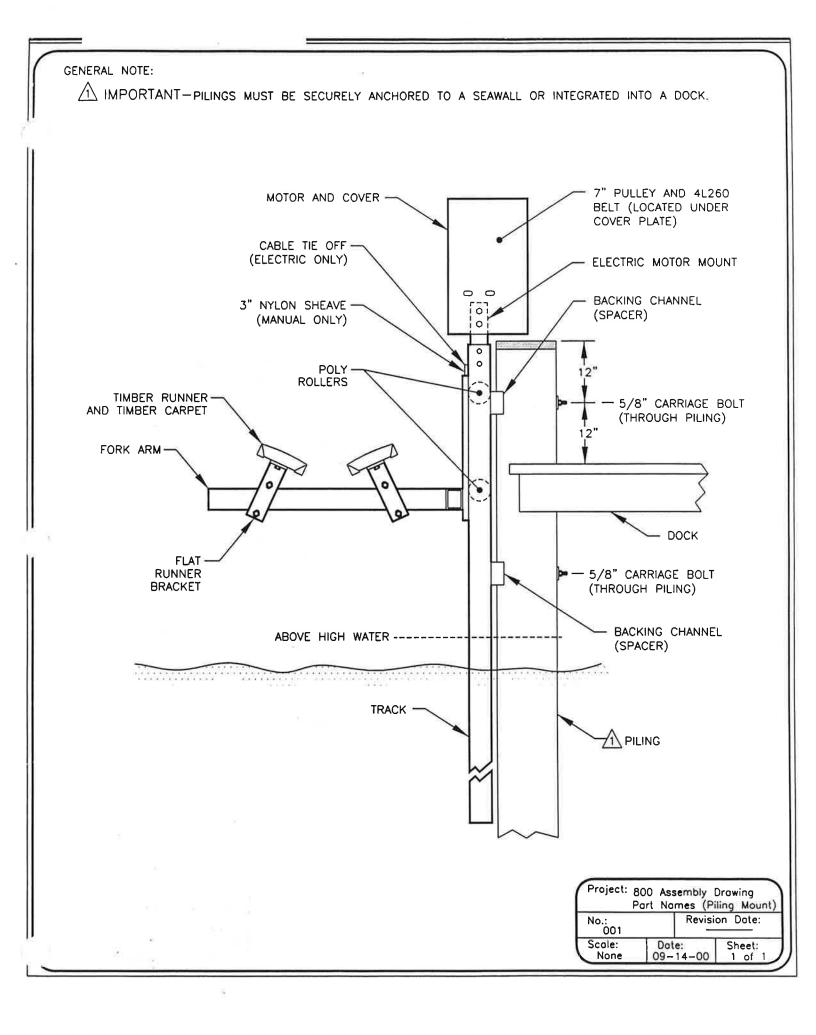


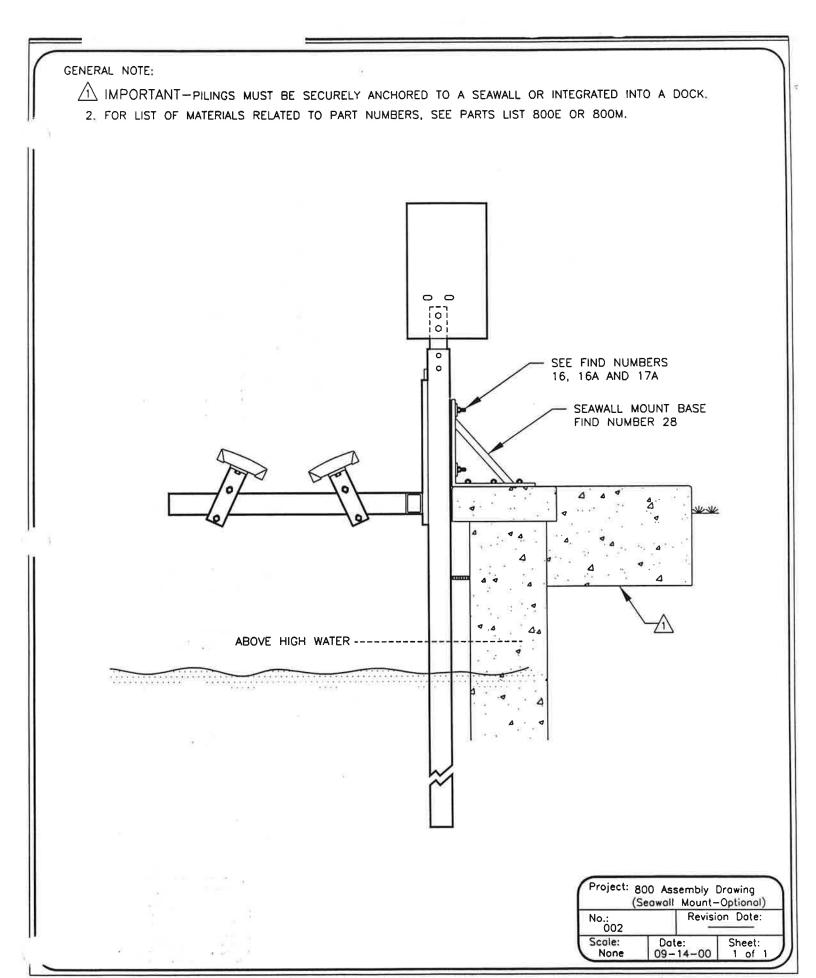



### GENERAL NOTE:


1. FOR LIST OF MATERIALS RELATED TO PART NUMBERS, SEE PARTS LIST 800E OR 800M. FIND NUMBERS 4 AND 5, AS SHOWN ON THIS ILLUSTRATION, ARE SPECIFIC TO 800E; HOWEVER, FOR MANUAL OPERATION, REFER TO 800M, FIND NUMBERS 4 AND 5. FIND NUMBER 6, AS SHOWN ON THIS ILLUSTRATION, IS SPECIFIC TO 800M.

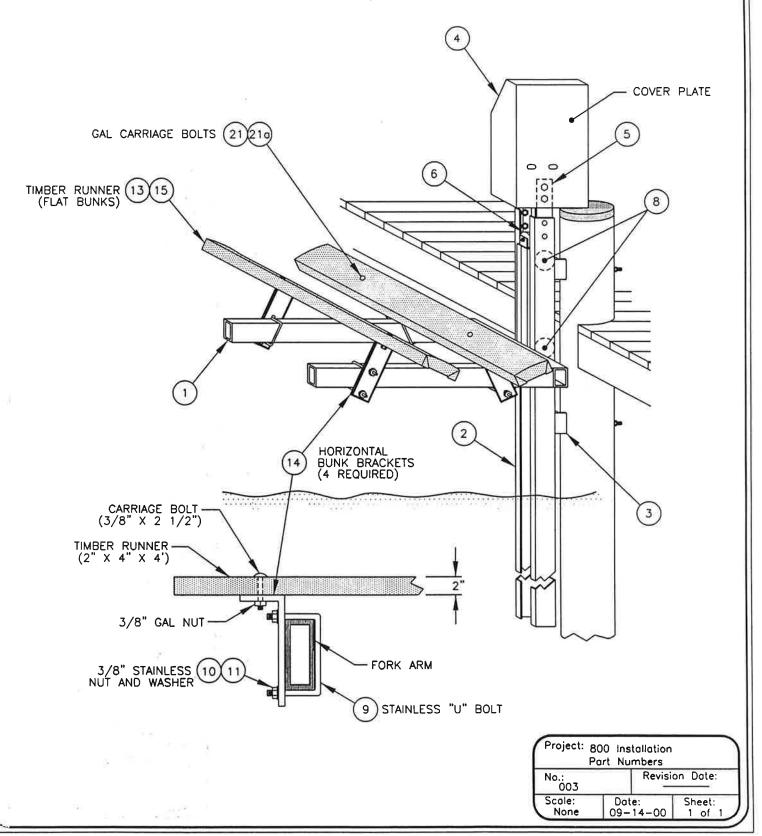


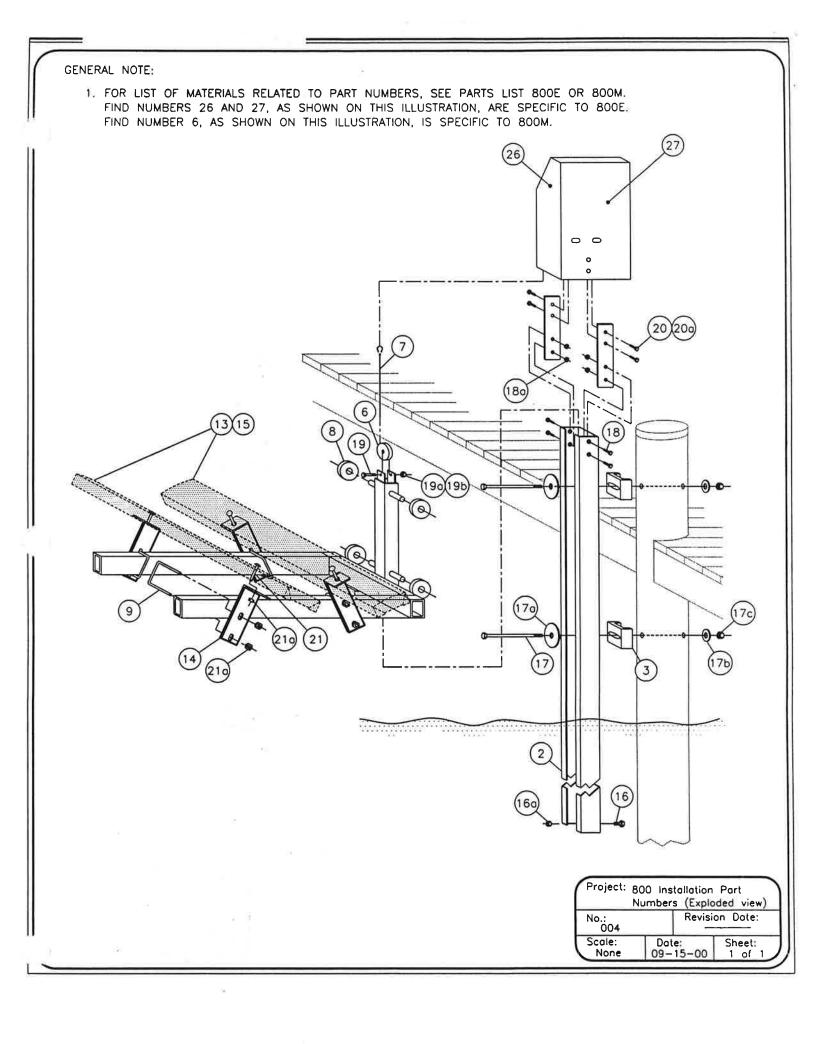


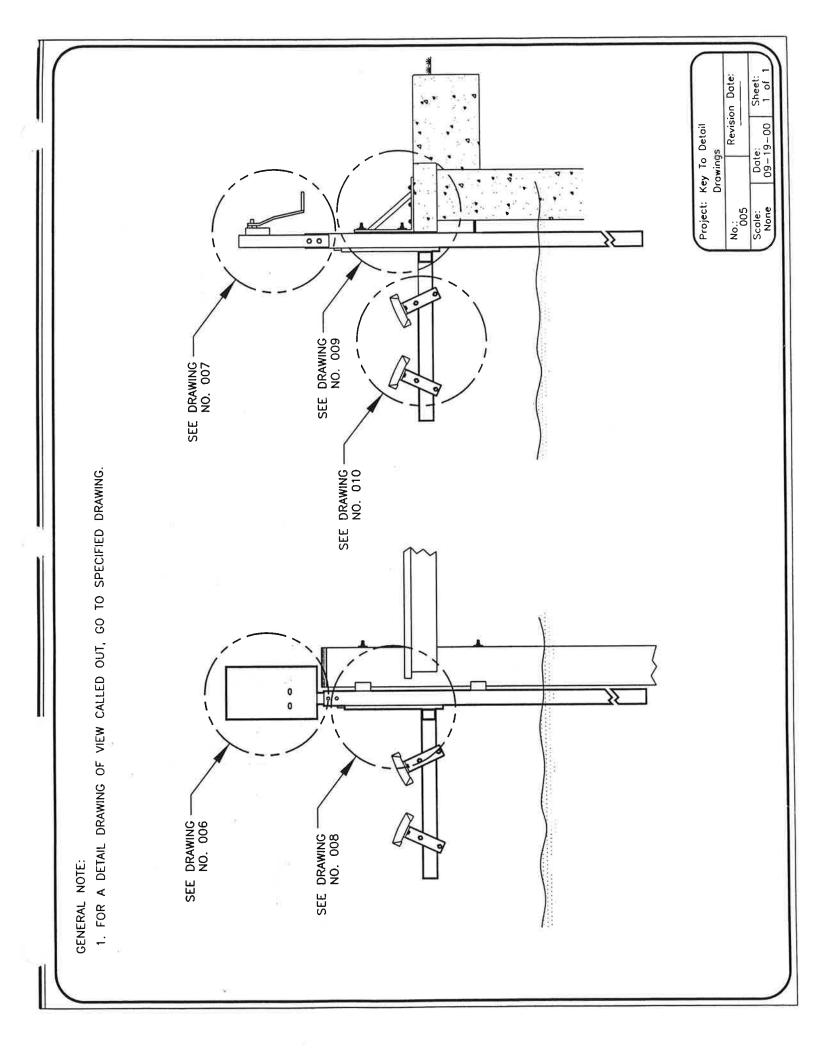


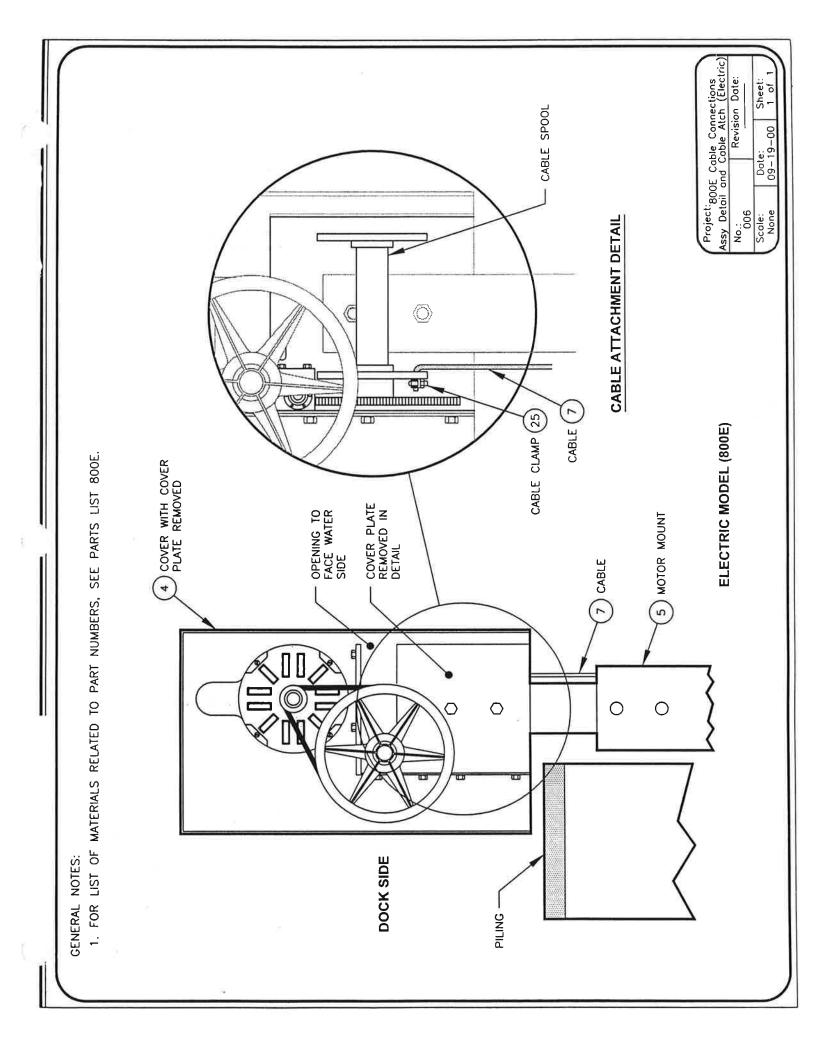

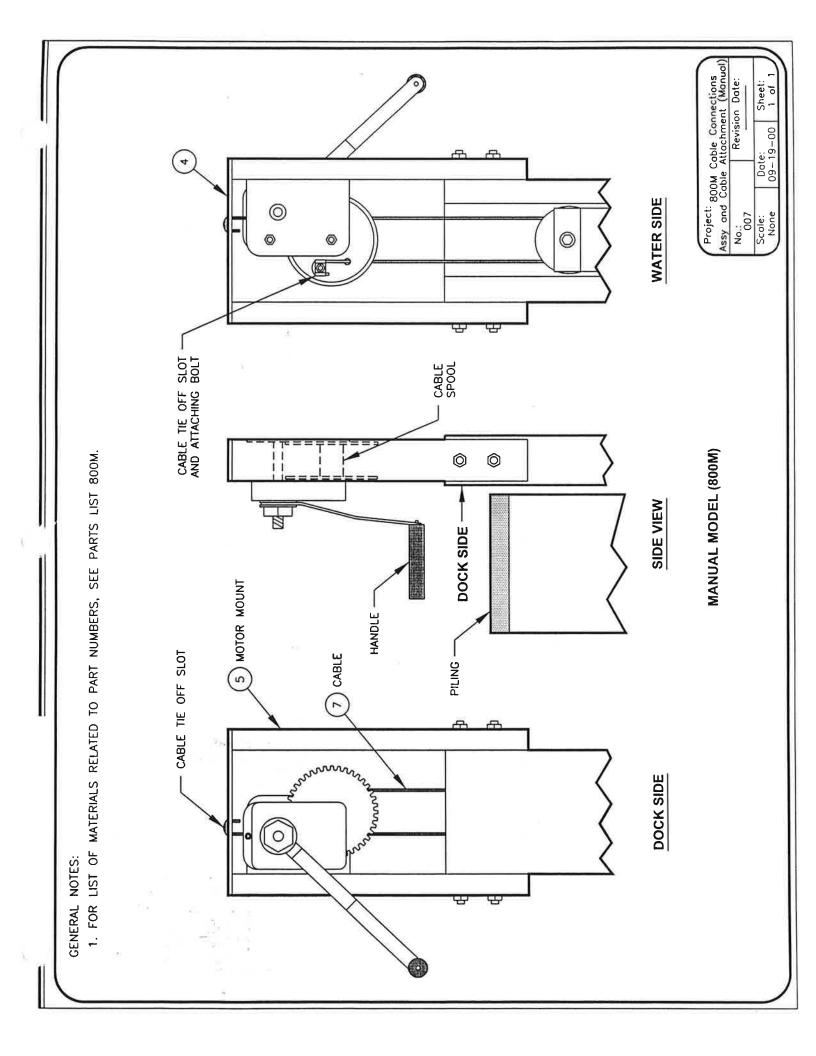

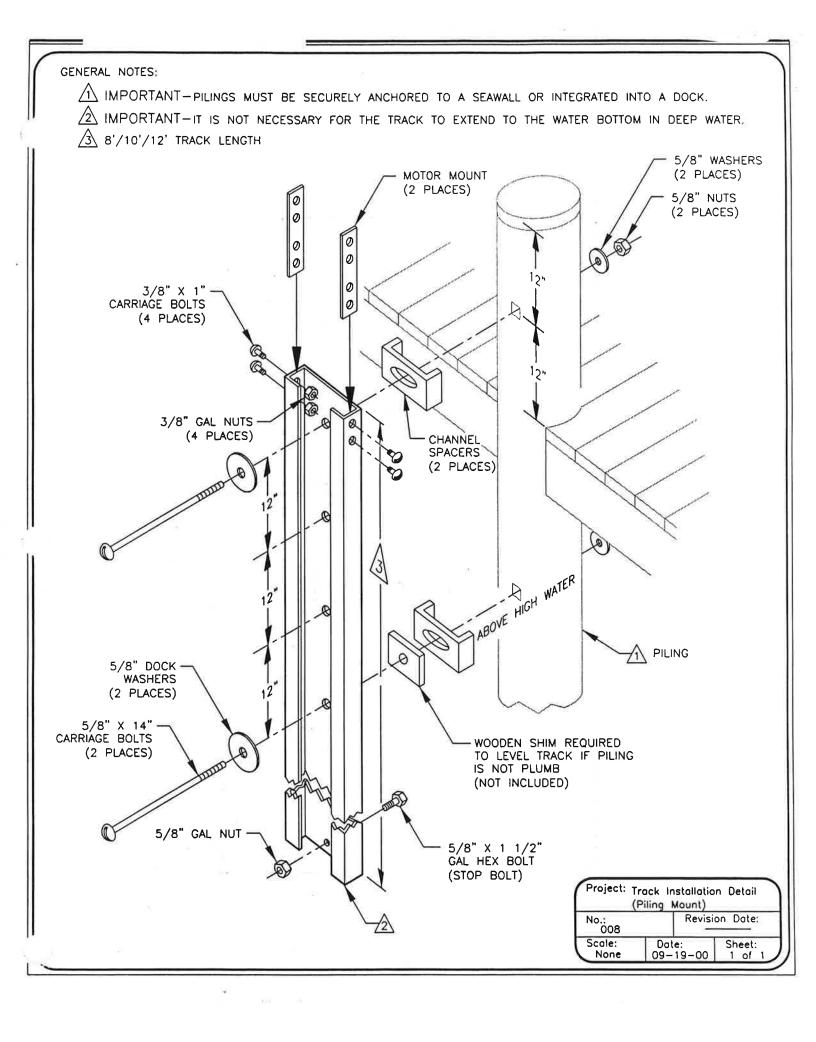

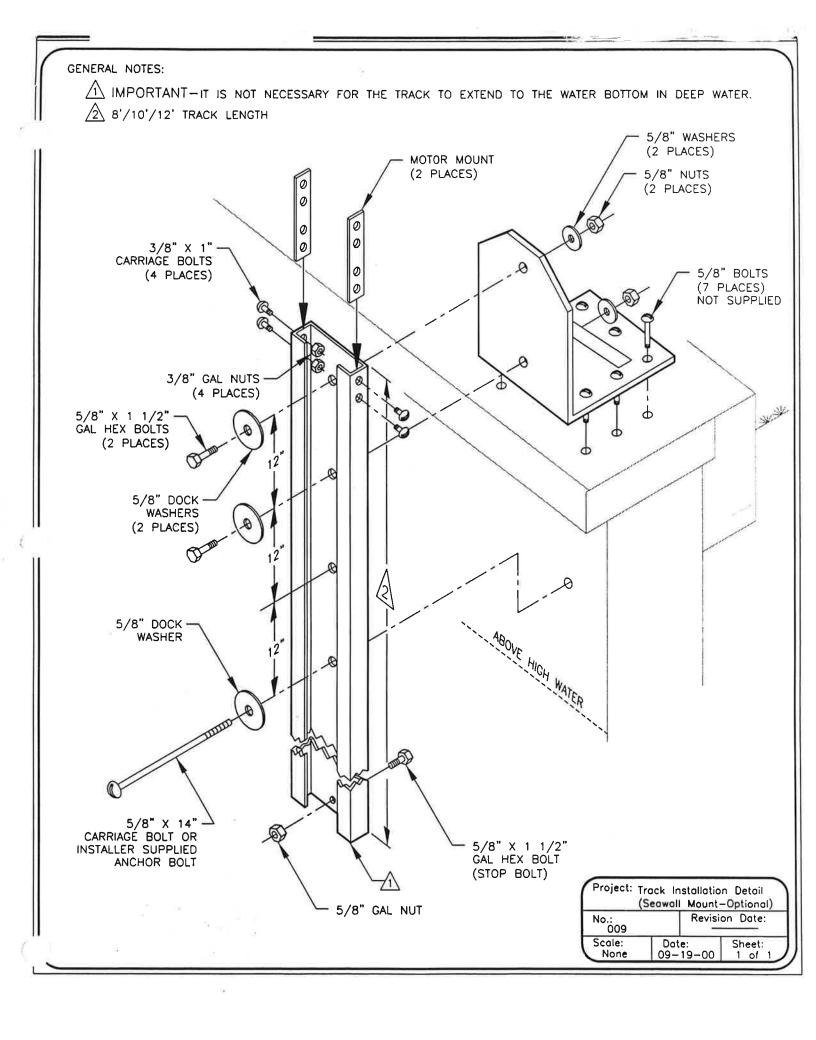


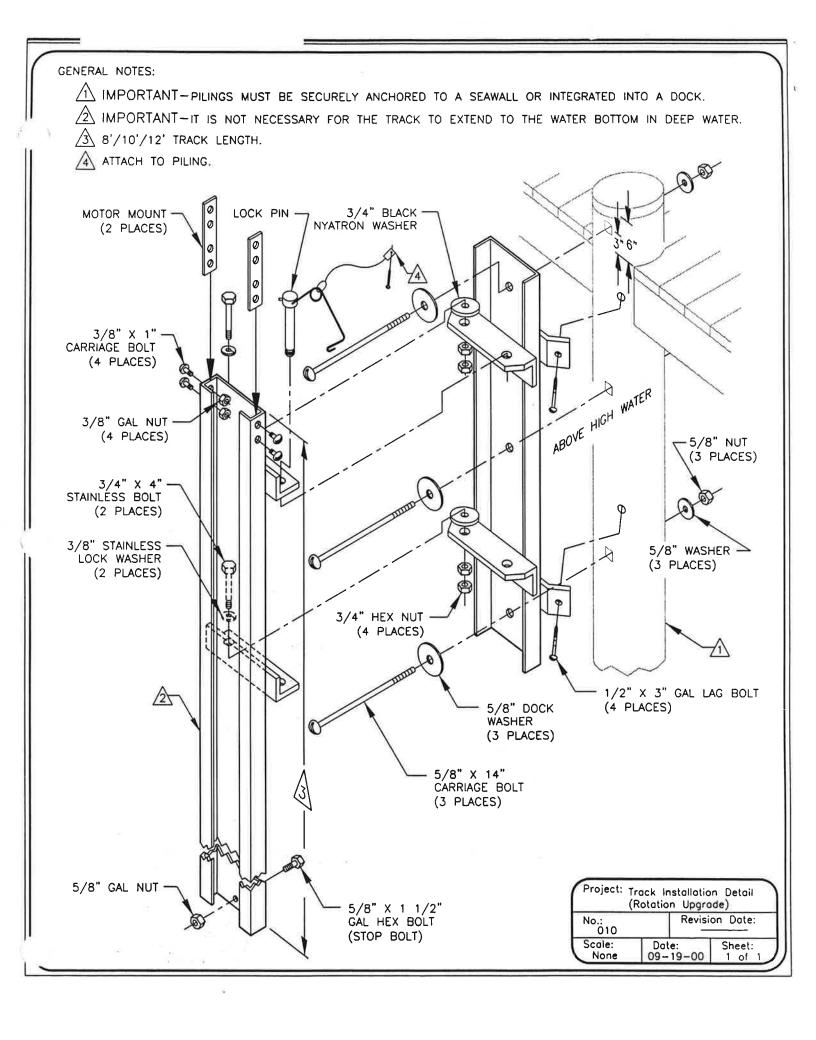

# 1. FOR OPTIMUM PERFORMANCE, EQUAL WEIGHT DISTRIBUTION IS REQUIRED OVER BOTH FORK ARMS. GENERAL NOTES:

- 2. TO OBTAIN EQUAL WEIGHT DISTRIBUTION:
- A. USE BALANCE POINT OF WATERCRAFT.

  B. DO NOT USE CENTER OF WATERCRAFT LENGTH.
- 3. POSITION THE WATERCRAFT IN THE LIFT AS CLOSE TO THE TRACK AS POSSIBLE.

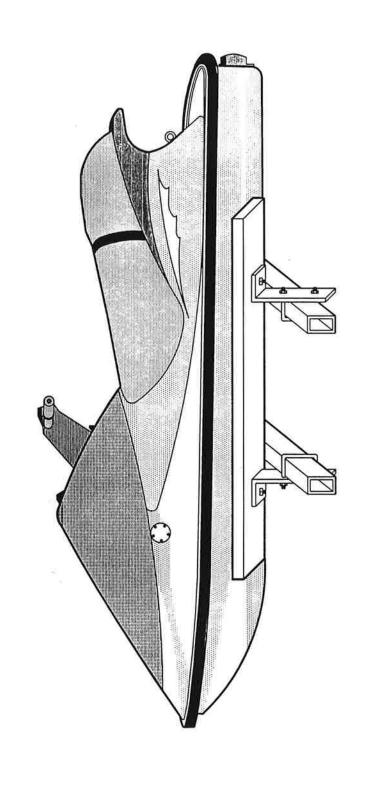

Revision Date: Project: Instructions For Weight Distribution Date: 09-19-00 No.: 011 Scale: None