The Perfect Lemonade Maker

Instruction Manual ELM-1





PLEASE READ THESE INSTRUCTIONS
CAREFULLY AND RETAIN FOR FUTURE REFERENCE.
www.smartplanethome.com

CONGRATULATIONS

You are now the proud new owner of a SMART PLANET
Perfect Lemonade Maker model no. ELM-1

Before using it for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for future reference. If you pass this Lemonade Maker to a third party, please include the operating instruction manual as well.



Electrical Specifications

Voltage	Frequency	Wattage	Capacity
120 V	60 Hz	25 W	1.0 L

CONGRATULATIONS

You are now the proud new owner of a SMART PLANET
Perfect Lemonade Maker model no. ELM-1


Before using it for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for future reference. If you pass this Lemonade Maker to a third party, please include the operating instruction manual as well.



Electrical Specifications

Voltage	Frequency	Wattage	Capacity
120 V	60 Hz	25 W	1.0 L

PARTS DESCRIPTION

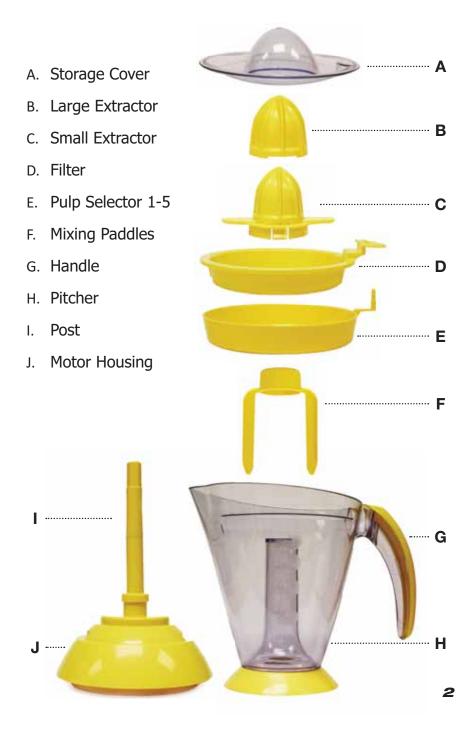

IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage when using the Lemonade Maker, basic safety precautions including the following should always be followed.

- 1. Read all instructions prior to using the Lemonade Maker.
- 2. Never leave the Lemonade Maker unattended when in use
- 3. To protect against the risk of electrical shock, never put the base, cord or plug in water or any liquids.
- Close supervision is necessary when the appliance is near children.
- 5. Switch off and unplug from outlet before changing accessories, filling, emptying, before cleaning, or when not in use.
- 6. Do not operate the Lemonade Maker with a damaged cord or plug. If this product malfunctions, or has been damaged in any manner, contact the Lemonade Maker Service Center.
- Do not use accessories with this product that are not recommended as they may cause fire, electric shock or personal injury.
- 8. The Lemonade Maker is intended for normal domestic/house-hold use only. The unit is not suitable for commercial or outdoor use.
- 9. For use only on 120V, 60HZ power supply. Use a socket with a grounded connection. Do not use three to two-way adapter on the three prong cord provided.
- 10. Do not let the power cord hang over the edge of the table or counter or to touch any hot surfaces.
- 11. Keep the Lemonade Maker away from hot objects and open flames.
- 12. A short power cord is provided with this appliance to reduce the risk of entanglement or tripping. While we do not recommend extension cords, if available they may be used if care is exercised. If an extension cord is used, the marked electrical rating of the extension cord should be at least 15 amperes. The longer cord should not hang over the countertop or tabletop where it can be pulled by children, pets or tripped over.

BEFORE FIRST USE

- 1. When using for the first time, remove all packaging materials and unwind the power cord from the bottom of the appliance.
- 2. Wash all parts except for the motor housing, in warm soapy water. Wipe the motor housing clean with a damp cloth. Never immerse the motor housing in water or any other liquids. Dry appliance completely before using.
- 3. Do not wash parts in a dishwasher.
- 4. Make sure the Lemonade Maker is at least 4-6"away from any obstacle before using.

HOW TO USE THE PERFECT LEMONADE MAKER

- 1. Select a recipe to use or prepare using one of your own recipes.
- 2. Attach all of the parts per the diagram.
- Plug the power cord into a standard 120 volt AC electrical outlet. NOTE: the plug is polarized (one prong is wider than the other) and should be used in a polarized outlet.
- 4. Choose the pulp level desired, 1-5. The "five" shift provides the most pulp and the "one" shift provides the least pulp in the juice.
- 5. This appliance comes with 2 extractor heads. The large extractor should be used with larger fruit.
- 6. Cut clean citrus fruit in half.
- 7. Hold the pitcher handle with one hand and use the other hand to place the fruit half over the extractor. Press down to extract the juice.
- 8. When it appears that all the juice has been extracted, unplug the cord from the outlet and let the unit sit for a couple of minutes so that all the juice drips into the pitcher.
- 9. Lift the motor housing and extractor off the pitcher.
- 10. Place the storage cover on the pitcher tightly.
- 11. The juice is now ready to pour.
- 12. Hold the pitcher handle as you pour.

HELPFUL TIPS

- For best results, it is recommended to clean the filter periodically to remove excess seeds and pulp. This will allow the juice to flow more efficiently.
- 2. Fruit at room temperature will provide better juice extraction than cold fruit.
- 3. For larger pieces of fruit, it is best to use the extractor cover provided.
- 4. Do not add hot water to the pitcher.

CARE AND CLEANING

- Always unplug the unit before cleaning.
- Wrap the cord under the unit for storage.
- Do not wash parts in a dishwasher.
- Remove all remaining seeds and pulp from the filter.
- Wash all parts except for the motor housing, in warm soapy water. Wipe the motor housing clean with a damp cloth. Never immerse the motor housing in water or any other liquids. Dry appliance completely before using.



Lemonade

3 cups of cold water

1 cup of ice cubes (if desired)

1/2 cup sugar

2-3 large lemons, halved

1 lemon thinly sliced

Add water, ice and sugar to the pitcher. Adjust the pulp level as desired. Juice Lemon halves and add lemon slices to the pitcher. Pour and enjoy!

Limeade

Follow recipe above for Lemonade except substitute 6 limes for the halved lemons.

Citrus Mix

3 cups of cold water

1 cup of ice cubes (if desired)

1/4 cup sugar

2 oranges

1 large lemon

½ lime

Add water, ice and sugar to the pitcher. Adjust the pulp level as desired. Juice oranges halves, lemon halves and lime half. Pour and enjoy!

Grapefruit and Orange Juice

4 large oranges

2 large grapefruits

Adjust the pulp level as desired. Juice oranges halves and grapefruit halves. Pour and enjoy!

90 DAY LIMITED WARRANTY


If there are any defects in material or workmanship during the first 90 days of purchase, we will repair/replace the product at our option. This warranty excludes any damage to the product resulting from accident or misuse. Please read instructions carefully. The warranty also excludes damage to unit caused by shipping, mishandling or unit being dropped.

To obtain service under the warranty, send an email to the Lemonade Maker Center at service@smartplanet.net for further instructions. Please include a description of the defect along with the date you purchased the product. If you are instructed to return the product the original receipt will be required. Returns without a receipt will not be accepted.



wwww.smartplanet.com
Copyright 2011 | Smart Planet | Conoga Park, CA 91304
Lemonade Maker Service Center: service@smartplanet.net
copyright v.20110321

PARTS DESCRIPTION

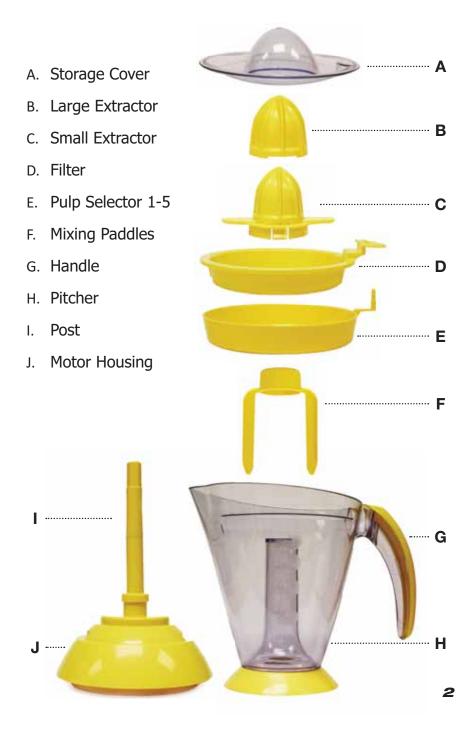

IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage when using the Lemonade Maker, basic safety precautions including the following should always be followed.

- 1. Read all instructions prior to using the Lemonade Maker.
- 2. Never leave the Lemonade Maker unattended when in use
- 3. To protect against the risk of electrical shock, never put the base, cord or plug in water or any liquids.
- Close supervision is necessary when the appliance is near children.
- 5. Switch off and unplug from outlet before changing accessories, filling, emptying, before cleaning, or when not in use.
- 6. Do not operate the Lemonade Maker with a damaged cord or plug. If this product malfunctions, or has been damaged in any manner, contact the Lemonade Maker Service Center.
- Do not use accessories with this product that are not recommended as they may cause fire, electric shock or personal injury.
- 8. The Lemonade Maker is intended for normal domestic/house-hold use only. The unit is not suitable for commercial or outdoor use.
- 9. For use only on 120V, 60HZ power supply. Use a socket with a grounded connection. Do not use three to two-way adapter on the three prong cord provided.
- 10. Do not let the power cord hang over the edge of the table or counter or to touch any hot surfaces.
- 11. Keep the Lemonade Maker away from hot objects and open flames.
- 12. A short power cord is provided with this appliance to reduce the risk of entanglement or tripping. While we do not recommend extension cords, if available they may be used if care is exercised. If an extension cord is used, the marked electrical rating of the extension cord should be at least 15 amperes. The longer cord should not hang over the countertop or tabletop where it can be pulled by children, pets or tripped over.

BEFORE FIRST USE

- 1. When using for the first time, remove all packaging materials and unwind the power cord from the bottom of the appliance.
- 2. Wash all parts except for the motor housing, in warm soapy water. Wipe the motor housing clean with a damp cloth. Never immerse the motor housing in water or any other liquids. Dry appliance completely before using.
- 3. Do not wash parts in a dishwasher.
- 4. Make sure the Lemonade Maker is at least 4-6"away from any obstacle before using.

HOW TO USE THE PERFECT LEMONADE MAKER

- 1. Select a recipe to use or prepare using one of your own recipes.
- 2. Attach all of the parts per the diagram.
- Plug the power cord into a standard 120 volt AC electrical outlet. NOTE: the plug is polarized (one prong is wider than the other) and should be used in a polarized outlet.
- 4. Choose the pulp level desired, 1-5. The "five" shift provides the most pulp and the "one" shift provides the least pulp in the juice.
- 5. This appliance comes with 2 extractor heads. The large extractor should be used with larger fruit.
- 6. Cut clean citrus fruit in half.
- 7. Hold the pitcher handle with one hand and use the other hand to place the fruit half over the extractor. Press down to extract the juice.
- 8. When it appears that all the juice has been extracted, unplug the cord from the outlet and let the unit sit for a couple of minutes so that all the juice drips into the pitcher.
- 9. Lift the motor housing and extractor off the pitcher.
- 10. Place the storage cover on the pitcher tightly.
- 11. The juice is now ready to pour.
- 12. Hold the pitcher handle as you pour.

HELPFUL TIPS

- For best results, it is recommended to clean the filter periodically to remove excess seeds and pulp. This will allow the juice to flow more efficiently.
- 2. Fruit at room temperature will provide better juice extraction than cold fruit.
- 3. For larger pieces of fruit, it is best to use the extractor cover provided.
- 4. Do not add hot water to the pitcher.

CARE AND CLEANING

- Always unplug the unit before cleaning.
- Wrap the cord under the unit for storage.
- Do not wash parts in a dishwasher.
- Remove all remaining seeds and pulp from the filter.
- Wash all parts except for the motor housing, in warm soapy water. Wipe the motor housing clean with a damp cloth. Never immerse the motor housing in water or any other liquids. Dry appliance completely before using.



Lemonade

3 cups of cold water

1 cup of ice cubes (if desired)

1/2 cup sugar

2-3 large lemons, halved

1 lemon thinly sliced

Add water, ice and sugar to the pitcher. Adjust the pulp level as desired. Juice Lemon halves and add lemon slices to the pitcher. Pour and enjoy!

Limeade

Follow recipe above for Lemonade except substitute 6 limes for the halved lemons.

Citrus Mix

3 cups of cold water

1 cup of ice cubes (if desired)

1/4 cup sugar

2 oranges

1 large lemon

½ lime

Add water, ice and sugar to the pitcher. Adjust the pulp level as desired. Juice oranges halves, lemon halves and lime half. Pour and enjoy!

Grapefruit and Orange Juice

4 large oranges

2 large grapefruits

Adjust the pulp level as desired. Juice oranges halves and grapefruit halves. Pour and enjoy!

90 DAY LIMITED WARRANTY

If there are any defects in material or workmanship during the first 90 days of purchase, we will repair/replace the product at our option. This warranty excludes any damage to the product resulting from accident or misuse. Please read instructions carefully. The warranty also excludes damage to unit caused by shipping, mishandling or unit being dropped.

To obtain service under the warranty, send an email to the Lemonade Maker Center at service@smartplanet.net for further instructions. Please include a description of the defect along with the date you purchased the product. If you are instructed to return the product the original receipt will be required. Returns without a receipt will not be accepted.



wwww.smartplanet.com
Copyright 2011 | Smart Planet | Conoga Park, CA 91304
Lemonade Maker Service Center: service@smartplanet.net
copyright v.20110321