

Nestlé
Nesquik

CUPCAKE & BROWNIE BITES MAKER



MCM-1NQ



PLEASE READ THESE INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE REFERENCE.

CONGRATULATIONS

You are now the proud, new owner of a
SMART PLANET NESTLÉ® NESQUIK®
Chocolate and Brownie Bites Maker
model no. MCM-1NQ

Before using your NESTLÉ® NESQUIK® Cupcake and Brownie Bites Maker for the first time, kindly take time to carefully read the instruction manual. Please observe all safety precautions and follow operating procedures. After reading, you should store your instruction manual in a safe place for your future reference. If you pass this appliance to a third party, please include the operating instruction manual.

PARTS DESCRIPTION

- A. Green Ready Light
- B. Red Power Light
- C. Housing
- D. Front Handle
- E. Plug
- F. Hot Plates



Electrical Specifications

VOLTAGE	FREQUENCY	WATTAGE
120 V	60Hz	1000 W

READ ALL INSTRUCTIONS BEFORE USING THE NESTLÉ® NESQUIK® CUPCAKE AND BROWNIE BITES MAKER

ELECTRICITY PRECAUTIONS

- To protect against electric shock, do not immerse cord, plugs, or any other electric parts in water or other liquids.
- Do not operate any appliance with a damaged cord or plug.
- Do not use this appliance outdoors.
- After using, unplug cord from electrical outlet.
- Do not leave the appliance plugged in when it is not being operated.
- Always unplug the appliance from electrical outlet and allow to cool before cleaning.
- Once this unit is plugged into an electrical outlet it should not be left unattended.
- A short power cord is provided with this appliance to reduce the risk of entanglement or tripping. While we do not recommend it, extension cords may be used if caution is exercised. If an extension cord is used, ensure that the marked electrical rating of the extension cord is equal to or greater than the appliance. If the plug is grounded, the extension cord must be a grounded type-3 wire cord. To avoid pulling, tripping or entanglement, position the extension cord so that it does not hang over the edge of the counter, table or other areas where it can be pulled on by a child or tripped over.

IMPORTANT SAFEGUARDS

- To avoid injury from touching hot surfaces, always use hot pads or oven mitts while handling this appliance.
- To protect against fire, electric shock or injury, do not immerse the cord, plug or appliance in water or any other liquid.
- Close supervision is necessary when this appliance is used near children.
- Before use, unwind the power cord completely and keep the cord away from the hot parts of the appliance.
- Do not let the power cord hang over the edge of a table, counter or touch hot surfaces.
- Do not place the appliance on or near hot gas, electric burners, or heated ovens.
- Do not operate the appliance if it has a damaged cord and/or plug, if the appliance has malfunctioned, or has been damaged in any manner. Contact the Smart Planet Service Center for examination, repair or replacement. Do not attempt to repair this appliance yourself.
- The use of accessories and/or attachments is not recommended and may result in fire, electric shock or injury.
- Always unplug the appliance from the electrical outlet when not in use and before cleaning to avoid accidental electrical shock. Allow appliance to cool before cleaning.
- While the appliance is hot, even if unplugged, there is a danger of getting burned. Do not touch the appliance or place it into storage while hot.
- Do not use this appliance other than for its intended use.

- For use only with 120V, 60HZ power source. Use an electrical socket with a good ground connection.
- For interior household use only. Do not use this appliance outdoors.

- **SAVE THESE INSTRUCTIONS**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

CAUTION

To prevent burns or other personal injuries, read and follow all instructions and warnings.

PRECAUTIONS FOR USE AROUND CHILDREN

- Close supervision is necessary when this appliance is operated near children.
- Do not allow cord to hang over any edge where a child can reach it. Arrange cord to avoid pulling, tripping or entanglement.

BEFORE INITIAL USE

- When using for the first time, remove all packaging materials and unwind the power cord from the appliance.
- Open the unit by lifting the front handle with an oven mitt.
- Clean the appliance with warm soapy water using a damp cloth, then dry. DO NOT immerse the unit in water at anytime.
- Before using the appliance, make sure it is at least 4-6" away from any obstacles.
- There may be a slight smell and a small amount of smoke the first time the appliance is operated. This is normal and temporary. Make sure there is sufficient ventilation.

DO NOT put the NESTLÉ® NESQUIK® Cupcake and Brownie Bites Maker into the dishwasher. This will permanently damage the product and will void the warranty.

CLEANING & CARE

- Always clean your appliance after each use to prevent build up.
- Always disconnect the power plug from the wall outlet before cleaning.
- Clean the unit only when it has completely cooled down.
- It is easiest to remove crumbs or leftovers with a very soft brush.
- Be certain to wipe off any baked on oil residue. When the non-stick cooking surfaces are thoroughly cleaned, the releasing capabilities of the coating will be retained.

- Clean the housing surface with a soft, damp cloth. If left over mix is difficult to remove, brush surface with a little oil. Allow to rest for five minutes, then wipe with a damp cloth. Do not use abrasives or metal materials for cleaning purposes because they will scratch the non-stick surface of the cooking plates.
- CAUTION: To avoid electric shock, DO NOT immerse the appliance in water or other liquids.
- Do not place the unit in the dishwasher.

HELPFUL HINTS

- There may be a slight smell and some smoke the first time the appliance is used. This is normal and temporary. Make sure there is sufficient ventilation.
- Cupcake/Brownie Bites that do not set or are not brown are due to insufficient heat or the cooking time is too short. Ensure that the NESTLÉ® NESQUIK® Cupcake and Brownie Bites Maker is fully pre-heated and the ready light is on. Use the correct measurements for the recipe.
- If the Cupcake/Brownie Bites are too brown, insufficient batter is used or the cooking time is too long. Ensure cooking plate is full or reduce cooking time before checking.
- Make sure that the plates are cleaned and lightly oiled before each use to prevent the Cupcake/Brownie Bites from sticking and ensuring easy removal.
- Use only wooden, plastic, or rubber utensils. DO NOT use sharp-edged cooking tools such as knives, forks, spoons etc. as the scratching will affect the non-stick performance.

HOW TO OPERATE

1. Before first use, wipe down all surfaces with damp cloth.
2. Find a dry, suitable, level surface near an electrical outlet.
3. The cooking plates should be lightly coated with a small amount of vegetable oil. Vegetable oil can be applied with a paper towel, brush or nonstick oil spray. The oil will help protect the nonstick quality of the cooking surface. This should be done periodically to maintain the nonstick quality.
4. Preheat the appliance by closing the lid and plugging into an electrical outlet.
5. When the power is on, the red indicator light will come on. The red indicator light will stay on while the appliance is preheating.
6. The appliance should preheat for a minimum of 5 minutes. The red indicator light will turn off and the green indicator light will turn on, as the appliance is now ready for use.
7. While the appliance is preheating, you may prepare the batter for either the Cupcakes or Brownies.
8. Using an oven mitt or pot holder, raise the lid of the appliance.
9. Fill each of the seven pastry wells in the nonstick cooking surface with mixture.
10. Close the lid using a pot holder or oven mitt. Steam may be released from appliance during cooking. For your safety, avoid contact with steam, as it is very hot and can cause burns.
11. The cooking time will range between 7-10 minutes.
12. Once the Cupcakes or Brownie Bites have completed

cooking, unlock and raise the lid with a pot holder or oven mitt. Remove the Cupcakes or Brownie Bites from the cooking plates with a plastic or wooden kitchen utensil. **DO NOT** use metal utensils, as they may scratch and damage the cooking plates.

13. When cooking more than one batch of cupcakes or brownies in a session, once the first batch is completed, lower the lid to maintain heat until ready to cook the next batch.
14. As soon as you are finished cooking, unplug appliance and allow to cool.
15. Once the appliance is cool, follow the directions in the Cleaning and Care section (Page 5) to clean your NESTLÉ® NESQUIK® Cupcake and Brownie Bites Maker



Recipes

Baking Tips

We encourage you to be creative with your NESTLÉ® NESQUIK® Cupcake and Brownie Bites Maker and develop your own delicious recipes. Feel free to start with some of the recipes below. The NESTLÉ® NESQUIK® Cupcake and Brownie Bites Maker can be used with a variety of pre-packaged mixes to make delicious treats such as:

- Cupcakes
- Brownies
- Cakes
- Muffins
- Corn bread

Simply follow the directions on the box, fill the individual sections in the lower griddle, close lid and let cook for about 7-10 minutes. Soon you will have delicious snacks and desserts ready to serve.

Try topping your treats with frosting and adding sprinkles, nuts, grated coconut, candies or chocolate chips.

The recipes in this booklet have been developed and tested by Smart Planet for your enjoyment.

The Classic Nesquik® Cupcake

Batter:

- 2/3 cup Oil, canola
- 1 1/2 cup Sugar
- 3 Eggs
- 1 1/2 cup NESTLE® NESQUIK® powder (any flavor)
- 1 cup Sour cream, about 7 oz.
- 1 cup All purpose flour
- 1 Tbsp Baking powder

- Preheat your NESTLE® NESQUIK® Cupcake and Brownie Bites Maker.
- In a bowl, combine the oil, sugar, eggs, NESTLE® NESQUIK® chocolate powder and sour cream.
- Sift the flour and baking powder together and add to the mixture. Thoroughly combine the ingredients. Please be sure to not over mix the batter.
- When the green indicator light on the unit has turned on, using a serving spoon, pour the batter into each individual pastry well. Fill the batter up to just under the edge of the pastry well.
- Close the unit and bake for 7-10 minutes. When the cupcakes have finished cooking remove the cupcakes with plastic tongs or a heat-proof spatula.

The Classic Nesquik® Brownie

Batter:

- 1 cup Sugar
- 3/4 cup Butter (melted)
- 2 tbsp Half and half
- 2 Large eggs
- 1 tsp Vanilla extract
- 1 cup All-purpose flour
- 1 cup NESTLE® NESQUIK® powder (any flavor)
- 1/2 tsp baking powder
- 1/4 tsp salt

Optional additional ingredients:

- 1 cup white chocolate chips
- 3/4 cup Chopped nuts
- Lightly coat cupcake/brownie maker pastry wells with cooking oil, butter, or margarine. You may want to use a pastry brush. Plug it in and preheat your NESTLE® NESQUIK® Cupcake and Brownie Bites Maker.
- In a bowl, combine the sugar, butter and half and half. Next, add the eggs and vanilla to the sugar mixture and whisk thoroughly.
- In a separate bowl, combine the flour, NESTLE® NESQUIK® powder, baking powder and salt. Pour in the sugar mixture and mix all together.
- If you have decided to add any additional ingredients, now is the time to thoroughly fold them into the batter. Please be sure to not over mix the batter.
- When the green indicator light on the unit has turned on, using a serving spoon, pour the batter into each individual pastry well. Fill the batter up to just under the edge of the pastry well.
- Close the unit and bake for 7-10 minutes. When the cupcakes have finished cooking remove the cupcakes with plastic tongs or a heat-proof spatula.

Nesquik® Frosting

1 cup milk
2 tbsp NESTLE® NESQUIK® powder (any flavor)
1/4 cup All purpose flour
1 cup Margarine/butter
1 cup Powdered sugar
1 tsp Vanilla extract

- In a sauce pan at medium heat, combine half of the milk, NESTLE® NESQUIK® powder, and flour until all have dissolved and begun to thicken. Add the additional half of the milk, turn off the heat and allow it to cool for approximately 10 minutes.
- In a bowl, combine the margarine and powdered sugar until it is light and fluffy.
- When the flour/milk mixture has cooled down to room temperature, apply it to the butter and mix well. Lastly, add the vanilla extract and mix thoroughly.

Nesquik® Cream Cheese Frosting

2 (8 ounce) Packages cream cheese, softened
1/2 cup Butter, softened
2 cups Powdered sugar
1 tsp Vanilla extract
2 tbsp NESTLE® NESQUIK® powder (any flavor)

- In a medium bowl, cream together the cream cheese and butter.
- Add the vanilla extract, powdered sugar, and NESTLE® NESQUIK® powder and gradually stir together.
- Store in the refrigerator after use.

Nesquik® Buttercream Frosting

- 1 cup Cooking oil
- 5 cup Powdered sugar
- 6 tbsp Milk (whole)
- 1/2 cup NESTLE® NESQUIK® powder (any flavor)
- 1 tsp Vanilla

- In a bowl, whisk the cooking oil and 1 cup of powdered sugar until it is smooth in consistency.
- In a glass, combine the milk and NESTLE® NESQUIK® powder until the powder has dissolved. Next, pour the glass into the bowl and whisk until smooth.
- Add the remaining powdered sugar gradually, whisking in between, until the frosting has reached the desired consistency. Lastly, whisk in the vanilla extract.

90 DAY LIMITED WARRANTY

Smart Planet warrants this appliance from failures in its materials and workmanship for 90 days from the date of original purchase, provided the appliance is operated and maintained in conformity with the instruction manual. Any defective part of the appliance will be repaired or replaced at Smart Planet's discretion. Customers must provide proof of purchase when submitting a warranty claim.

This warranty does not cover discoloration or any damage to the non-stick surfaces of the appliance. This warranty is null and void, as determined solely by Smart Planet, if the appliance is damaged through accident, misuse, abuse, negligence, scratching, shipping or if the appliance is altered in anyway.

If you think the appliance has failed or requires service within its warranty period, please email the Service Department at service@smartplanet.net for further instructions. Please include a description of the defect along with the date you purchased the product and the original receipt with the purchase date. A receipt proving the original purchase date will be required for all warranty claims, hand written receipts are not accepted. You may be instructed to return the appliance for inspection and evaluation. Return shipping costs are not refundable. Smart Planet is not responsible for returns lost in transit.

Valid only in USA and Canada



www.smartplanethome.com

Copyright 2012 Smart Planet Canoga Park: CA 91304

Service Center: service@smartplanet.net copyright

v.20120805

NESTLÉ® and NESQUIK® are registered trademarks of Société des Produits Nestlé S.A., Vevey, Switzerland, and are used with permission.

Check out some of our other great products.

RESTAURANT CLASSICS
Professional Quality at Home

THE ORIGINAL
KERNAL TREAT FACTORY

Make restaurant style corn dogs. Remove an entire corn dog. Soften an oil and heat.

No messy frying. Just plug in and go!
Egg headliner. Tastes corn crisp and novel. Simply prepare your favorite batter. Slip them in, and bake. You're finished in just a few uses.

RECIPE BOOK AND 24 STICKS INCLUDED

CORNDOGS AND SO MUCH MORE



RESTAURANT CLASSICS
Professional Quality at Home

THE ORIGINAL
MEATBALL FACTORY

Making Meatballs Easy as 1,2,3
Our ingenious mechanical maker will make perfect round homemade meatballs every time.

THE WORLD'S FASTEST AUTHENTIC MEATBALL MAKER

Includes recipe for Italian Sausa. 100% made in the USA!



RESTAURANT CLASSICS
Professional Quality at Home

THE ORIGINAL
CIRCUS WAFFLE MAKER

EASY TO CLEAN SUPERIOR QUALITY NON STICK COOKING SURFACE.

Save money and amaze your family!
Make delicious French Belgian waffles at home. 10 pieces for half a price in a few uses.

CIRCUS WAFFLE MAKER
MAKE YOUR OWN CIRCUS SHAPED WAFFLES IN MINUTES



RESTAURANT CLASSICS
Professional Quality at Home

THE ORIGINAL
DONUT FACTORY

Bakes delicious mini donuts without deep frying!

Make fresh mini donuts at home and save money!
Morning, will never be the same once you verify on this donut machine. Easy and convenient. Easy for itself in just a few uses.

THE PERFECT MINI DONUT MAKER
MAKES FRESH DONUTS IN UNDER 4 MINUTES



RESTAURANT CLASSICS
Professional Quality at Home

THE ORIGINAL
CUPCAKE BAKER

Easy to use. Non-stick baking. Non-release cupcake maker and makes clean-up a breeze!

Save your family time and money!
Bake incredible homemade cupcakes with less energy and in less time than ever before!

WORLD'S FASTEST ELECTRIC MINI CUPCAKE MAKER
BAKES DELICIOUS HOMEMADE CUPCAKES IN 5 MINUTES



RESTAURANT CLASSICS
Professional Quality at Home

THE ORIGINAL
QUESADILLA MAKER

Enjoy restaurant-style Tex-Mex at home!
Its fast and easy to use quesadilla maker is a great addition to any kitchen.

THE PERFECT QUESADILLA MAKER

This electric griller stays hot throughout a few uses.



