

Nestlé®
Nesquik®
CHOCOLATE FONDU FOUNTAIN
A delicious & fun way to enjoy chocolate.



NCF-1



PLEASE READ THESE INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE REFERENCE.

CONGRATULATIONS

You are now the proud new owner of a
SMART PLANET NESTLÉ® NESQUIK®
Chocolate Fondue Fountain
model no. NCF-1

Before using your NESTLÉ® NESQUIK® Chocolate Fondue Fountain for the first time, kindly take time to carefully read the instruction manual. Please observe all safety precautions and follow the operating procedures. Please store your instruction manual in a safe place for future reference. If you pass this appliance to a third party, please include the operating instruction manual.

PARTS DESCRIPTION

- A. Three Tier Fountain
- B. Stainless Steel Bowl
- C. Fountain Base
- D. Control On/Off



Electrical Specifications

VOLTAGE	FREQUENCY	WATTAGE
120 V	60Hz	40 W

IMPORTANT SAFEGUARDS

- Never touch hot surfaces with bare hands.
- To protect against fire, electric shock and injury, do not immerse the cord, the plug or the appliance in water or other liquid.
- Close supervision is necessary when this appliance is used by or near children.
- Before use, unwind the power cord completely and keep the cord away from the hot parts of the appliance.
- Do not let the power cord hang over the edge of a table, counter or touch hot surfaces.
- Do not place the appliance on or near hot gas or electric burner, or in a heated oven.
- Do not operate the appliance if it has a damaged cord and/or plug, if the appliance has malfunctioned, or has been damaged in any manner. Contact the Service Center for examination, repair or replacement. Do not attempt to repair this appliance yourself.
- The use of accessories and/or attachments is not recommended and may result in fire, electric shock or injury.
- Always unplug the appliance from the electrical outlet when not in use and before cleaning to avoid accidental electrical shock. Allow it to cool before cleaning.
- While the appliance is hot, even if unplugged, there is a danger of getting burned. Do not touch the appliance or place it into storage while hot.
- Do not use this appliance other than for its intended use.

- For use only with 120V, 60HZ power. Use an electrical socket with a good ground connection.
- For interior household use only. Do not use this appliance outdoors.
- ***SAVE THESE INSTRUCTIONS***

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

CAUTION

To prevent burns or other personal injuries to children, read and follow all instructions and warnings.

PRECAUTIONS FOR USE AROUND CHILDREN

- Close supervision is necessary when this appliance is used near children.
- Do not allow cord to hang over any edge where a child can reach it. Arrange cord to avoid pulling, tripping or entanglement.

BEFORE INITIAL USE

1. When using for the first time, remove all packaging materials and unwind the power cord from the appliance.
2. Clean the appliance with warm soapy water using a damp cloth, then dry it. DO NOT immerse the whole unit in water at anytime.
3. Set the Fondue Maker on a flat surface. Make sure it is at least 4-6” away from any obstacles.

***DO NOT put the NESTLÉ® NESQUIK®
Chocolate Fondue Fountain
into the dishwasher.
This will permanently damage the product
and will void the warranty.***

CLEANING & CARE

- Always clean your appliance after each use to prevent build up.
- Always disconnect the power plug from the wall outlet before cleaning.
- Clean the unit only when it has completely cooled down.
- Clean the inner surface and the outer surfaces of the unit with a soft, damp cloth. Do not use abrasives or metal scourers as they will scratch the fountain tiers.
- CAUTION: To avoid electric shock DO NOT immerse the appliance in water or other liquids.
- Do not place the fondue fountain in the dishwasher.

OPERATING YOUR NESTLÉ® NESQUIK® Chocolate Fondue Fountain

To melt the chocolate in the microwave, put the chocolate in a microwave safe bowl, add the oil and other ingredients and put the microwave on a **medium setting**. Time will vary depending on the type of oven. Stir frequently (every 15-30 seconds) to avoid overheating and burning. The approximate melting time is 2 minutes for 12 ounces of chocolate (1 bag).

NOTE: chocolate should be melted completely, and of a smooth consistency with no lumps before adding to the NESTLÉ® NESQUIK® Chocolate Fondue Fountain.

- NESTLÉ® NESQUIK® Chocolate Fondue Fountain must be on a level surface to flow properly.
- Prepare the chocolate following the instructions listed within the recipes.
- Microwave the bowl with the chocolate mixture for approximately 2 minutes on medium setting.
- Turn on the HEATER setting and let the appliance warm for 6 minutes.
- Turn on the MOTOR setting and pour the melted chocolate in to the base of the NESTLÉ® NESQUIK® Chocolate Fondue Fountain. The chocolate will start flowing up through the TOWER and over the CANOPIES.
- Enjoy the decadent chocolate waterfall

TROUBLESHOOTING

Chocolate is not flowing:

- Mixture is too thick; add additional oil.

Chocolate is not flowing evenly:

- Chocolate Fondue Fountain is not on a flat surface
- Chocolate mixture is not thin enough, add a small amount of oil.

Chocolate changes to a lighter color:

- This is normal.

Full waterfall effect is not achieved:

- Chocolate to oil ratio may be incorrect. Try adding more oil or more chocolate.

Chocolate Fondue Fountain suddenly stops:

- Turn all the switches to OFF, unplug the unit, check for/remove obstructions, let cool (5 minutes), plug back in, and turn the HEATER and MOTOR switches back on.



Recipes

The Classic Nesquik Chocolate Fondue

FONDUE:

- 12 oz semisweet chocolate chips
- 1/2 cup vegetable oil
- 1 tbsp NESTLÉ® NESQUIK® chocolate powder

DIPPABLE OPTIONS:

- Whole fresh strawberries
- Thick slices of banana
- Dried apricot halves
- 6 banana cut into 1-inch chunks
- Pound Cake 1"x1" cubes
- Cherries
- Grapes
- Wedge sliced apples

- In a microwave safe bowl, pour in the semisweet chocolate chips, vegetable oil and NESTLÉ® NESQUIK® chocolate powder. Place the bowl in the microwave for approximately 2 minutes on medium setting.
- Plug in the NESTLÉ® NESQUIK® Chocolate Fondue Fountain and press the preheat button. Allow the appliance to preheat for approximately 6 minutes.
- Remove the bowl from the microwave and stir the chocolate until it is of a smooth consistency with no lumps.
- Turn on the MOTOR switch and pour the chocolate onto the stainless steel base of the NESTLÉ® NESQUIK® Chocolate Fondue Fountain.
- Arrange the dippables on a platter or plates around the chocolate pot. Use a fondue fork, bamboo skewer, seafood fork, or salad fork to dip, swirl and enjoy!
- If the chocolate begins to feel a little stiff, add a tablespoon of oil and stir. It will help it go a little longer. Eventually, it will cook down though and you may need to start over.

The Nesquik Creamy Chocolate Fondue

FONDUE:

12 oz. semisweet chocolate chips
2/3 cup heavy cream
1 tbsp NESTLÉ® NESQUIK® chocolate powder
1/4 cup vegetable oil

DIPPABLE OPTIONS:

Whole fresh strawberries
Thick slices of banana
Dried apricot halves
6 banana cut into 1-inch chunks
Pound Cake 1"x1" cubes
Cherries
Grapes
Wedge sliced apples

- In a cup combine the heavy cream and NESTLÉ® NESQUIK® chocolate powder.
- In a microwave safe bowl, pour in the semisweet chocolate chips, and the NESTLÉ® NESQUIK® chocolate powder and heavy cream mix. Place the bowl in the microwave for approximately 2 minutes on medium setting.
- Plug in the NESTLÉ® NESQUIK® Chocolate Fondue Fountain and press the preheat button. Allow the appliance to preheat for approximately 6 minutes.
- Remove the bowl from the microwave and stir the chocolate until it is of a smooth consistency with no lumps. While stirring, gradually add the vegetable oil.
- Turn on the MOTOR switch and pour the chocolate onto the stainless steel base of the NESTLÉ® NESQUIK® Chocolate Fondue Fountain.
- Arrange the dippables on a platter or plates around the chocolate pot. Use a fondue fork, bamboo skewer, seafood fork, or salad fork to dip, swirl and enjoy!
- If the chocolate begins to feel a little stiff, add a tablespoon of oil and stir. It will help it go a little longer. Eventually, it will cook down though and you may need to start over.

90 DAY LIMITED WARRANTY

Smart Planet warrants this appliance from failures in its materials and workmanship for 90 days from the date of original purchase provided the appliance is operated and maintained in conformity with the instruction manual. Any defective part of the appliance will be repaired or replaced at Smart Planet's discretion. Customers must provide proof of purchase when submitting a warranty claim.

This warranty does not cover discoloration or any damage to the non-stick surfaces of the appliance. This warranty is null and void, as determined solely by Smart Planet, if the appliance is damaged through accident, misuse, abuse, negligence, scratching, shipping or if the appliance is altered in anyway.

If you think the appliance has failed or requires service within its warranty period, please email the Service Department at service@smartplanet.net for further instructions. Please include a description of the defect along with the date you purchased the product and the original receipt with the original purchase date. A receipt proving the original purchase date will be required for all warranty claims, hand written receipts are not accepted. You may be instructed to return the appliance for inspection and evaluation. Return shipping costs are not refundable. Smart Planet is not responsible for returns lost in transit.

Valid only in USA and Canada



www.smartplanethome.com

Copyright 2011 Smart Planet Canoga Park CA 91304

Service Center: service@smartplanet.net

copyright v.20120615

NESTLÉ® and NESQUIK® are registered trademarks of Société des Produits Nestlé S.A., Vevey, Switzerland, and are used with permission.

Check out some of our other great products.

