


Quick Installation Guide for Nodal Ninja Ultimate M1S

1. Install 2 anti-twisting screws on QRC-55.

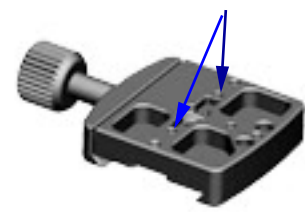


Install anti-twisting screws here



3. Attach MFR-Dovetail 35 to the end of MFR-160, by using 2 M5 screw with brass fitting.



4. Install QRC-35 to MFVR-160 by using 2 M5 screw with brass fitting.

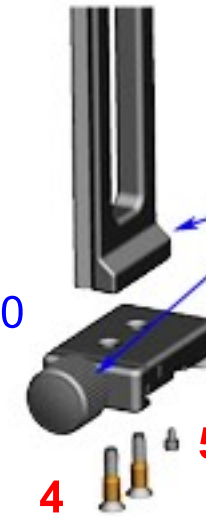


Notice the orientation of MFVR-160 and QRC-35.

2. Mount the QRC-55 to lower rotator using an M6 screw.


5. Install a machined M3 cup screw at the central socket of QRC-35 to act as a stop screw.

6. Mount the upper rotator to MFVR-160 using 4 M4 flat head screws. The 0 degree mark should be at horizontal position.

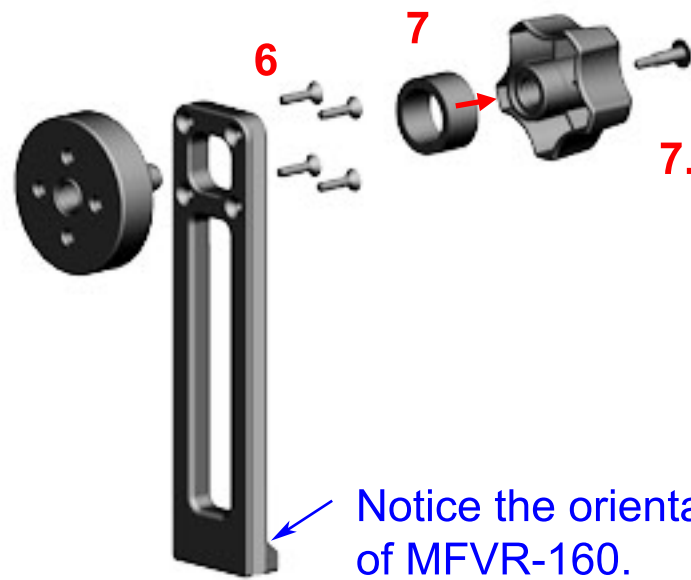

7. Press the plastic fitting to the upper rotator tightening knob. Tighten the knob to the upper rotator and then install the knob retention screw.

8. Install 2 anti-twisting screws on the QRC-55.

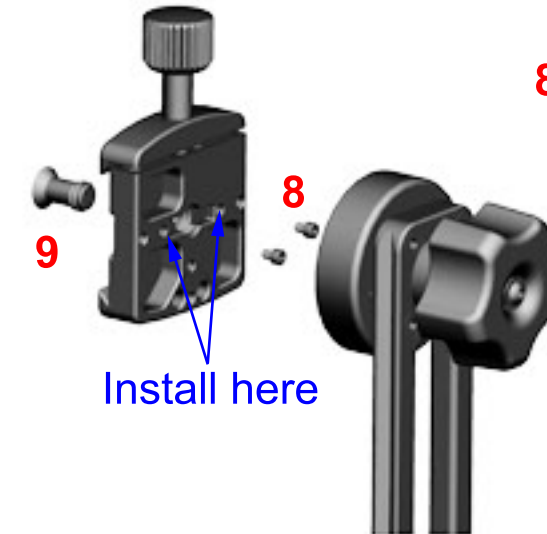


9. Mount the QRC-55 to Upper rotator using a 3/8" screw

10. Install a 3/8" to 1/4" adapter on the QRC-40A



Install an anti-twisting screws here

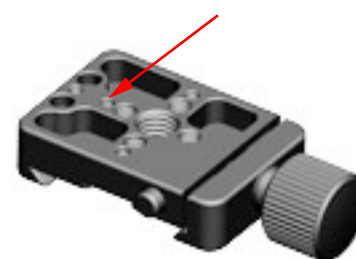

11. Install an anti-twisting screw on the QRC-40A

11




12

12. Install a 1/4" screw on MFR-160. Mount the QRC-40A to MFR-160 using the 1/4" screw while sliding the 1/4" screw to the far end.

Slide the 1/4" screw and hence QRC-40A far most

13. Slide QRC-35 to far left or right so that it is flush with plate below. Tighten the knob on QRC-35.

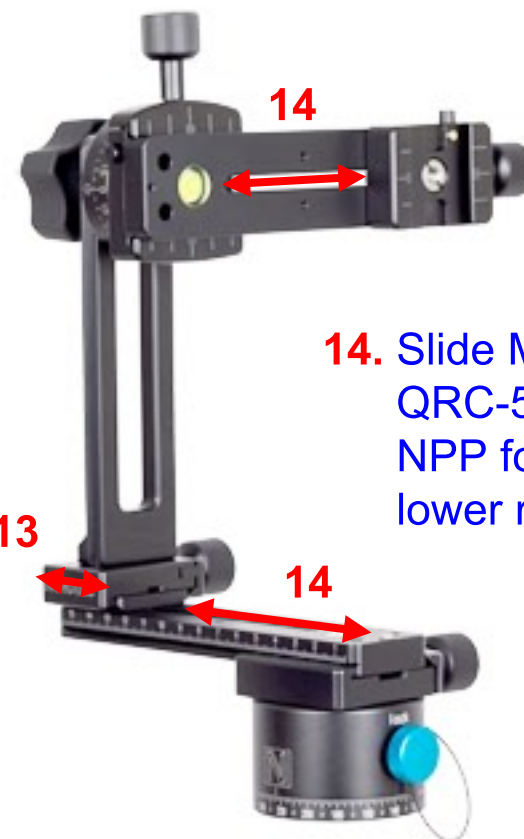

14. Slide MFR-160 along QRC-55 to set correct NPP for upper and lower rotators.