

Some printers need to be tricked into feeding thicker papers. If yours is one of these, you can try tricking it into thinking it's printing on regular paper by following these steps:



Place photo paper on regular printer paper.




Center 4x6 at top of larger sheet.



Tape left side of small sheet to larger one.



Fold tape over to back side and press firmly.

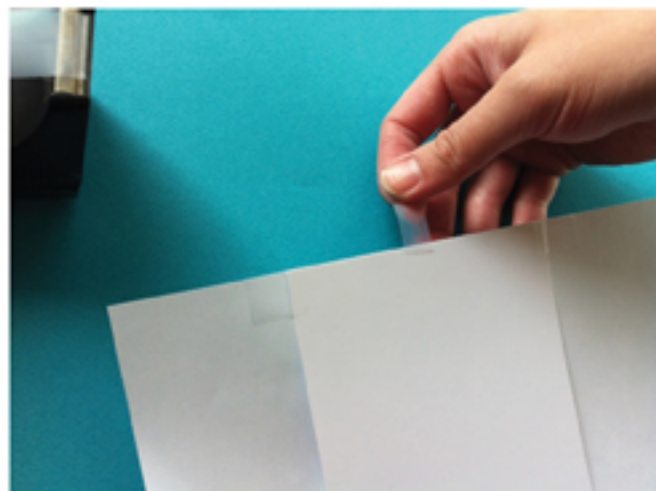


Add thin piece of tape to center and fold over.




Repeat on right side.

Now let's get your printer set up. Click "Print", and select your Paper Size as 4 x 6" Borderless.

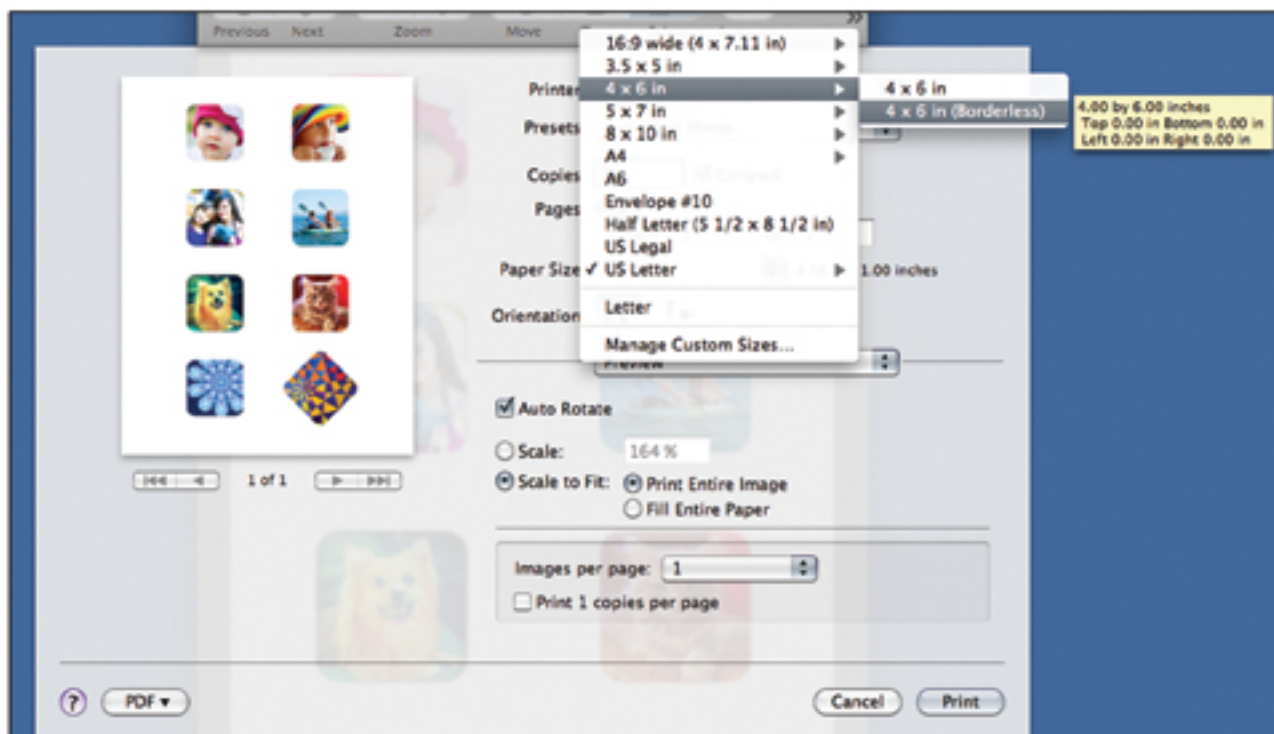


This example is for an Epson printer, but should have similar settings on other printers.

Your LittleWindows.png file is large, so to get it to fit on your 4x6" paper set your Scale to 34%

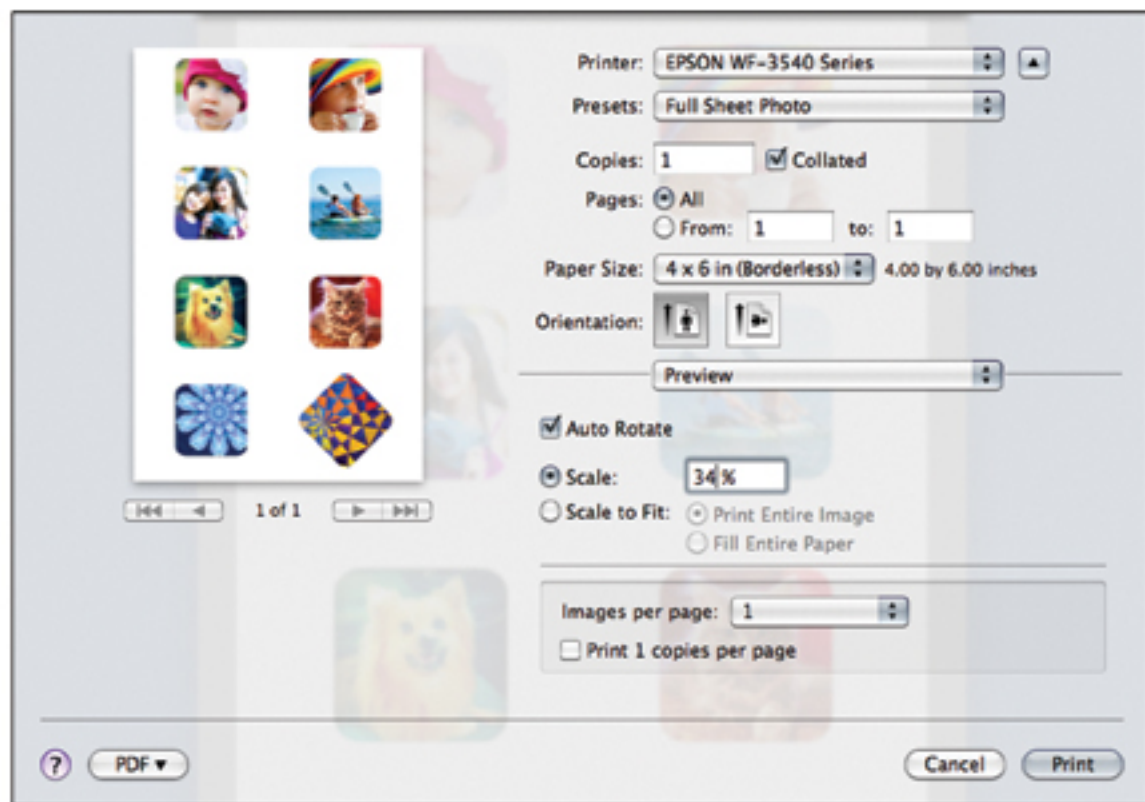



Look for "Preview" or "Print Settings"

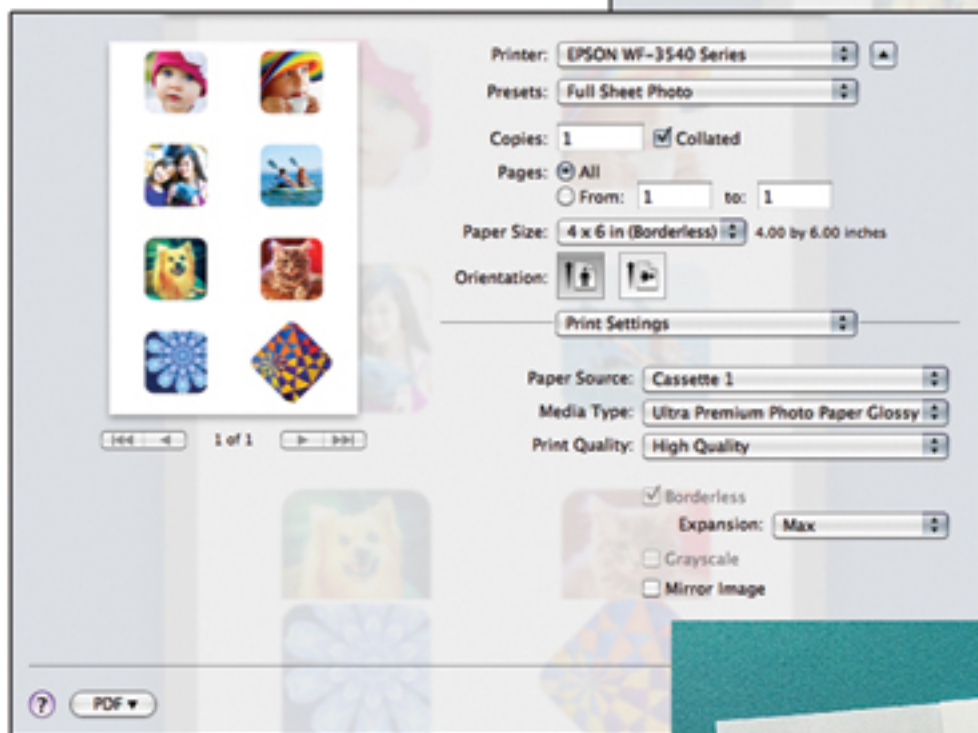

Select the right paper tray.  
Select a high-quality media (paper)  
Select the best print quality offered.

Put your paper in the correct tray and print. Your printed file should look like this, with squares measuring 1".

You can see why it's important to place the tape correctly, so the photos print around it.

