

DASH DISASSEMBLY

FORD F-150 2009-UP

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove the switch panel to the right of the cigarette lighter then remove the (1) 9/32" screw exposed. (Figure A)
- 3 Remove the rubber pad at the top of the radio trim panel then remove the (2) 9/32" screws exposed. (Figure B)
- 4 Unclip and pull the side panels containing the a/c vents away from the radio trim panel. *Note:* It is not necessary to remove the panels completely. (Figure C)
- 5 Unclip and remove the radio trim panel. (Figure D)







