

TABLE OF CONTENTS

1	MEDIA CENTER 735N (RHW)	3
2	INDEX	113

MEDIA CENTER 735N (RHW)

• USER AGREEMENT	7
• SAFETY GUIDELINES	11
• INTRODUCTION	12
• Warnings	12
• Safety References	12
• Intended Use	12
• System Care	12
• GENERAL HANDLING	14
• User Interface Elements	14
• Steering Wheel Audio Controls (If Equipped)	16
• Audio Settings	16
• GETTING STARTED	17
• Soft-keys	17
• Disclaimer for Navigation Radio	17
• Change the Language	18
• Set the Time	18

- Store Radio Presets 18
- Connect Bluetooth Phone 19
- Set Default Country 20
- Enter Home Address 21
- Change Home Address 22
- Voice Command Tutorial 23
- Uconnect™ Phone Tutorial 23
- Uconnect™ Multimedia (RADIO) 23
 - Radio Mode 23
 - Radio Settings 24
- Uconnect™ Multimedia (MEDIA) 26
 - Disc Mode 26
 - Hard Disk Drive Mode (HDD) 32
- Uconnect™ Multimedia (REMOTE DEVICES) 42
 - AUX Mode (If Equipped) 42
 - Bluetooth® Audio Streaming Mode 45
 - Video Entertainment System (VES)™ 46
 - USB Connector 49
 - AUX Mode 51
- VOICE COMMAND 52
 - Voice Command Operation 52
- Uconnect™ Phone (IF EQUIPPED) 57

- Uconnect™ Phone Overview 57
- Phone System Setup – Pairing 58
- Advanced Phone Connectivity 70
- Uconnect™ GPS Navigation 74
 - General Notes 74
 - Navigation Main Menu 74
 - Destination Input by POI 76
 - Destination Input 79
 - Route Guidance 90
 - Navigation Options 95
 - Navigation Default Settings 98
 - Map Viewer 99
 - Stop Over 100
 - Trip Planner 101
 - Traffic Message Channel 103
 - Address Book 105
- SYSTEM INFORMATION 109
 - User Data Backup 109
 - Database Updates 109
- TROUBLESHOOTING 109
 - Radio 109
 - Disc 109

- HDD 110
- iPod/Digital Device Control 110
- Navigation 110
- Voice Command 110
- Uconnect™ Phone 110
- GLOSSARY OF TERMS 110

USER AGREEMENT
art=rer-38424.tif NO TRANS

FCC ID: QNG-BE2728



IC: 6434A-BE2728

art=rer-38508.tif NO TRANS



NOTICE:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

NOTICE:

This device complies with Part 15 of the FCC Rules [and with RSS-210 of Industry Canada].

Operation is subject to the following two conditions: this device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

NOTICE:

Changes or modifications made to this equipment not expressly approved by the radio manufacturer may void the FCC authorization to operate this equipment.

FCC Declaration

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must ac-

cept any interference received, including interference that may cause undesired operation.

Modifications not expressly approved by the radio manufacturer could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - In-

crease the separation between the equipment and receiver. - Consult the dealer or an experienced radio technician for help.

Safety Information

Exposure to Radio Frequency Radiation

The radiated output power of this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 20 cm or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restric-

tions, you are encouraged to ask for authorization before turning on the wireless radio.

End User License Agreement NAVTEQ

PLEASE READ THIS END USER LICENSE AGREEMENT CAREFULLY BEFORE USING THE NAVTEQ DATABASE

NOTICE TO THE USER

THIS IS A LICENSE AGREEMENT - AND NOT AN AGREEMENT FOR SALE - BETWEEN YOU AND NAVTEQ B.V. FOR YOUR COPY OF THE NAVTEQ NAVIGABLE MAP DATABASE, INCLUDING ASSOCIATED COMPUTER SOFTWARE, MEDIA AND EXPLANATORY PRINTED DOCUMENTATION PUBLISHED BY NAVTEQ (JOINTLY "THE DATABASE"). BY USING THE DATABASE, YOU ACCEPT AND AGREE TO ALL TERMS AND CONDITIONS OF THIS END USER LICENSE AGREEMENT ("AGREEMENT"). IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY RETURN THE DATABASE, ALONG WITH ALL OTHER ACCOMPANYING ITEMS, TO YOUR SUPPLIER FOR A REFUND.

OWNERSHIP

The Database and the copyrights and intellectual property or neighboring rights therein are owned by NAVTEQ or its licensors. Ownership of the media on which the Database is contained is retained by NAVTEQ and/or your supplier until after you have paid in full any amounts due to NAVTEQ and/or your supplier pursuant to this Agreement or similar agreement(s) under which goods are provided to you.

LICENSE GRANT

NAVTEQ grants you a non-exclusive license to use the Database for your personal use or, if applicable, for use in your business' internal operations. This license does not include the right to grant sublicenses.

LIMITATIONS ON USE

The Database is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws (e.g. national laws based on the European Software Directive (91/250) and the Database Directive (96/9)), you may not extract or reutilize substantial parts of the contents of the Database nor reproduce, copy, modify, adapt,

translate, disassemble, decompile, reverse engineer any portion of the Database. If you wish to obtain interoperability information as meant in (the national laws based on) the European Software Directive, you shall grant NAVTEQ reasonable opportunity to provide said information on reasonable terms, including costs, to be determined by NAVTEQ.

TRANSFER OF LICENSE

You may not transfer the Database to third parties, except when installed in the system for which it was created or when you do not retain any copy of the Database, and provided that the transferee agrees to all terms and conditions of this Agreement and confirms this in writing to NAVTEQ. Multi-disc sets may only be transferred or sold as a complete set as provided by NAVTEQ and not as subset thereof.

LIMITED WARRANTY

NAVTEQ warrants that, subject to the warnings set out below, for a period of 12 months after acquisition of your copy of the Database, it will perform substantially in accordance with NAVTEQ's Criteria for Accuracy and Completeness existing on the date you acquired the

Database; these criteria are available from NAVTEQ at your request. If the Database does not perform in accordance with this limited warranty, NAVTEQ will use reasonable efforts to repair or replace your nonconforming copy of the Database. If these efforts do not lead to performance of the Database in accordance with the warranties set out herein, you will have the option to either receive a reasonable refund of the price you paid for the Database or to rescind this Agreement. This shall be NAVTEQ's entire liability and your sole remedy against NAVTEQ. Except as expressly provided in this section, NAVTEQ does not warrant nor make any representations regarding the use of results of the use of the Database in terms of its correctness, accuracy, reliability, or otherwise. NAVTEQ does not warrant that the Database is or will be error free. No oral or written information or advice provided by NAVTEQ, your supplier or any other person shall create a warranty or in any way increase the scope of the limited warranty described above. The limited warranty set forth in this Agreement does not affect or prejudice any statutory legal rights that you may have under the legal warranty against hidden defects.

If you did not acquire the Database from NAVTEQ directly, you may have statutory rights against the person from whom you have acquired the Database in addition to the rights granted by NAVTEQ hereunder according to the law of your jurisdiction. The above warranty of NAVTEQ shall not affect such statutory rights and you may assert such rights in addition to the warranty rights granted herein.

LIMITATION OF LIABILITY

The price of the Database does not include any consideration for assumption of risk of consequential, indirect or unlimited direct damages which may arise in connection with your use of the Database. Accordingly, in no event shall NAVTEQ be liable for any consequential or indirect damages, including without limitation, loss of revenue, data, or use, incurred by you or any third party arising out of your use of the Database, whether in an action in contract or tort or based on a warranty, even if NAVTEQ has been advised of the possibility of such damages. In any event NAVTEQ's liability for direct damages is limited to the price of your copy of the Database.

THE LIMITED WARRANTY AND LIMITATION OF LIABILITY, SET FORTH IN THIS AGREEMENT, DO NOT AFFECT OR PREJUDICE YOUR STATUTORY RIGHTS WHERE YOU HAVE ACQUIRED THE DATABASE OTHERWISE THAN IN THE COURSE OF A BUSINESS.

WARNINGS

The Database may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results. The Database does not include or reflect information on - inter alia - neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

GOVERNING LAW

This Agreement shall be governed by the laws of the jurisdiction, in which you reside at the date of acquisition of the Database. Should you at that moment reside outside the European

Union or Switzerland, the law of the jurisdiction within the European Union or Switzerland where you acquired the Database shall apply. In all other cases, or if the jurisdiction where you acquired the Database cannot be defined, the laws of the Netherlands shall apply. The courts competent at your place of residence at the time you acquired the Database shall have jurisdiction over any dispute arising out of, or relating to this Agreement, without prejudice to NAVTEQ's right to bring claims at your then current place of residence.

End-User License Agreement Gracenote

USE OF THIS PRODUCT IMPLIES ACCEPTANCE OF THE TERMS BELOW.

Gracenote® MusicID® Terms of Use

This device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to do online disc identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers ("Gracenote Servers") and to perform

other functions. You may use Gracenote Data only by means of the intended End-User functions of this device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal noncommercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You

agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote MusicID Service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote MusicID service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote MusicID Service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or

additional data types or categories that Gracenote may provide in the future and is free to discontinue its online services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACE-NOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© Gracenote 2007 Version 2.2

CD and music-related data from Gracenote, Inc., copyright © 2000-2007 Gracenote. Gracenote Software, copyright © 2000-2007 Gracenote. This product and service may practice one or more of the following U.S. Patents: #5,987,525; #6,061,680; #6,154,773, #6,161,132, #6,230,192, #6,230,207, #6,240,459, #6,330,593, and other patents is-

sued or pending. Some services supplied under license from Open Globe, Inc. for U.S. Patent: #6,304,523. Gracenote and CDDB are registered trademarks of Gracenote. The Gracenote logo and logotype, and the "Powered by Gracenote" logo are trademarks of Gracenote.

SAFETY GUIDELINES

Ensure that all persons read this manual carefully before using the navigation system. It contains instructions on how to use the system in a safe and effective manner.

WARNING!

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- When using the navigation system to route you to an emergency facility, contact the facility to verify its location.
- Not all emergency service locations are contained in the database. Please use your own judgement and ask for directions in such situations.

- Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary, pull over at a safe location.
- Road conditions and regulations take precedence over information contained on the map display. Observe actual traffic restrictions and circumstances when driving.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- There may be situations where the navigation system erroneously displays the vehicle's location. Use your own driving judgement in this situation, taking into account current driving conditions. Please be aware that in this situation the navigation system should automatically correct the vehicle position within a few minutes.
- Make certain that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

- The map database is designed to provide you with route suggestions and does not take into account the relative safety of suggested route or factors that may affect the time required to reach your destination. Use your own personal judgement if the navigation system is unable to provide you with an alternative route.

INTRODUCTION

Warnings

This manual contains WARNINGS against operating procedures that could result in an accident or bodily injury. If you do not read the entire manual you may miss important information. Observe all WARNINGS!

The information given in this manual is subject to change.

Safety References

Before operating this navigation system for the first time, please read this manual carefully. Note the safety precautions described in this manual. If you have any questions, please contact the vehicle manufacturer.

Intended Use

Generally recognized rules of navigation technology were maintained during the development and manufacture of the RHW navigation system (NTG4 Refresh). When using this product, be aware of state-specific norms and guidelines.

Visit www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com for updates, additional information, compatible phones, etc.

System Care

Software Update

Both navigation data and Gracenote® data are software updatable. Visit www.chrysler.com, www.jeep.com, www.dodge.com, www.ramtrucks.com or contact your authorized dealer for the latest available software.

Safe Usage of the Radio Navigation System

Read all instructions in this manual carefully before using your radio system to ensure proper usage!

Your radio is a sophisticated electronic device. Do not let young children use your radio unsupervised.

Permanent hearing loss may occur if you play your music at the highest volumes. Exercise caution when setting the volume on your radio.

Driving is a complex activity that requires your full attention. If you're engaged in driving or any activity that requires your full attention, we recommend that you not use your radio navigation system.

NOTE:

Many features of this radio are speed dependent. For your own safety it is not possible to use the press screen keyboard to enter a name (e.g., street name), while the vehicle is in motion. Pull over at a safe location to complete your task.

Keep drinks, rain, and other sources of moisture away from your radio. Besides damage to your radio, moisture can cause electric shocks with any electronic device.

NOTE:

In a convertible vehicle, the system performance may be compromised with roof top down.

Connections

Never force any connector into the ports of your radio. Make sure your connectors are the correct shape and size before you connect.

Any attached cable should be routed so that it will not apply any pressure to the connection.

Do not use a USB device which will interfere with the operation of opening the display.

Touch Screen

Do not touch the screen with any hard or sharp objects, which could scratch the touch screen surface (pen, USB stick, jewelry, etc.)!

NOTE:

It is possible to use a plastic stylus for press screen enabled devices such as PDA and Pocket PCs.

Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touch screen.

If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol, or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow solvent manufacturer's precautions and directions.

CD/DVD Drive

Do not insert any damaged, warped, scratched or dirty CDs or DVDs into the CD/DVD player.

Discs that have been modified with an adhesive label should not be used in the CD/DVD player.

Do not insert more than one CD/DVD at a time into the drive slot.

Do not insert anything other than the supported CD/DVD formats. See **Disc Mode** section for information on supported CD/DVD formats.

GPS Navigation Antenna

The antenna for the navigation GPS system is mounted in various locations (depending on the vehicle model) within the dashboard. Do

not place items on the dashboard around the GPS antenna location. Objects placed within the line of sight of the antenna will decrease performance. Do not place items directly on or above the antenna.

Other Electronic Devices

You may bring other electronic devices into your vehicle (e.g., PDA, iPod, laptop computer, CB Radios, etc.). Some of these devices may cause electromagnetic interference with the GPS. If a degradation in the navigation system is observed, turn the devices off, or keep them as far away from the GPS antenna as possible.

GENERAL HANDLING

User Interface Elements

art=rew-39184.tif NO TRANS



Power to operate the navigation radio is supplied through the ignition switch, which must be in the ON, ACC or in ACC Delay mode in order to operate the navigation radio.

Soft-Keys

Soft-keys are accessible on the touch screen.

Hard-Keys

Hard-keys are on the left and right side of the radio faceplate.

(1) OPEN/CLOSE

To open or close the display, press the OPEN/CLOSE hard-key (1).

After opening the display, it takes a few seconds to eject a CD/DVD, if one was in the slot.

When inserting a disc, make sure the label is facing up.

The display will close automatically after inserting the disc.

NOTE:

- It may take several seconds to recognize the type of inserted disc (CD, DVD, MP3, etc.).
- If a CD or DVD will not eject from the player when the OPEN/CLOSE hard-key is pressed, the user can perform the following eject override procedure:

1. Press the OPEN/CLOSE hard-key to open the display door.
2. If the display door will not open when the hard-key is pressed, manually open the display door by gently pulling out on the bottom of the display door.

3. While the display door is open, simultaneously press and hold the SEEK UP, SEEK DOWN and NAV hard-keys.

4. The CD or DVD will eject from the player.

(2) SEEK UP/SEEK DOWN

Press the SEEK up and the SEEK down hard-key (2) to seek through radio stations in MW, LW, or FM bands. Seek through tracks in CD or iPod® modes or through songs in the HDD playlist.

(3) RADIO/MEDIA

Press the RADIO/MEDIA hard-key (3) to toggle between RADIO and MEDIA mode.

(4) ON/OFF VOLUME


It is possible to set the unit in standby mode during driving by pressing the ON/OFF VOLUME rotary knob (4).

NOTE:

If the ignition is switched Off with the radio in standby mode, the radio memorizes the standby state when the ignition is switched on again. Press the (4) On/Off VOLUME rotary knob to switch the radio On. The navigation software is always working when

the ignition is switched On, even if the radio is in standby mode. It is possible to eject the CD and to display the time if the unit is switched off.


(5) Voice Command

 Press the Voice Command hard-key (5) and wait for the confirmation beep before you say a voice command.

NOTE:

Some vehicles may be equipped with a Voice Command button on the steering wheel.


(6) Uconnect™ Phone (optional)

 Press the Uconnect™ Phone hard-key (6) to either activate the Uconnect™ Phone system or to cancel an active phone call.

NOTE:

• If you are in one of the navigation menus (NAV Menu, MAP display, etc.), you need

to press the Uconnect™ Phone hard-key twice to end an active call.

- Some vehicles may be equipped with a Uconnect™ Phone  button on the steering wheel.

(7) MENU

Press the MENU hard-key (7) to access the system settings menu.

NOTE:

Press the MENU hard-key in an active mode in order to change mode specific settings.

(8) NAV

Press the NAV hard-key (8) either to switch to the navigation mode or to toggle between the navigation menu and the map viewer menu.

(9) USB Connector

Connect a supported device into the USB Connector (9) in order to copy files to the internal hard disk drive, or audio stream with a digital audio device..

NOTE:

See USB Connector section for information on supported device.

(10) Auxiliary Jack

Connect an external audio device into the AUX Input (10) (e.g., MP3 player, video-game), to play the device audio through the car audio system.

Electronic Vehicle Information Center (EVIC)

Some vehicles feature an Electronic Vehicle Information Center (EVIC) with driver-interactive display. The EVIC is normally located in the instrument cluster or overhead. It can display radio station preset frequencies, CD disc number, satellite radio channel, and navigation system information.

Steering Wheel Audio Controls (If Equipped)

The steering wheel audio controls are located on the rear surface of the steering wheel. Please refer to the vehicle specific owner's manual for detailed information.

The following describes general steering wheel functionality:

1. The VOLUME rocker switch, located on the right, controls the volume of the sound system. Pressing the top of the rocker switch will in-

crease the volume and pressing the bottom of the rocker switch will decrease the volume.

2. The MODE ADVANCED button, located in the center of the right rocker switch, changes the mode of the navigation radio between the various modes available (MW, LW, FM, CD, DVD, NAV etc.).

3. The FUNCTION SELECT button, located in the center of the left rocker switch, advances the navigation radio to the next preset, changes the current disc when in disc mode, etc. The function is different depending upon which mode is in use.

4. The SCROLL rocker switch, located on the left, changes selections such as radio station, CD track, and satellite radio channel, depending upon the current mode.

The following describes the operation of the SCROLL switch in each mode:

LW/MW/FM Operation

Pressing the top of the rocker switch will seek up for the next available station and pressing the bottom of the rocker switch will seek down for the next available station.

HDD/Disc/iPod® Operation

Pressing the top of the rocker switch will go to the next track on the disc, and pressing the bottom of the rocker switch will go to the beginning of the current track, or to the beginning of the previous track, if it is within one second of the start of the current track.

Video Entertainment System™ Operation

If equipped with a remote video player, this control will function the same way as in disc mode.

Audio Settings

Volume


Use the ON/OFF VOLUME rotary knob (4) to adjust the volume of the currently playing audio source. While you adjust the volume, the name of the audio source and a volume indicator is displayed in the lower left corner of the display.

Audio Control Menu

Press the MENU hard-key (7) on the right side of the radio. Then press the Audio Control soft-key to get to the audio control menu.



Use either the arrow soft-keys or the cross-hair on the screen to change Balance and Fade. The CENTER soft-key resets the settings.

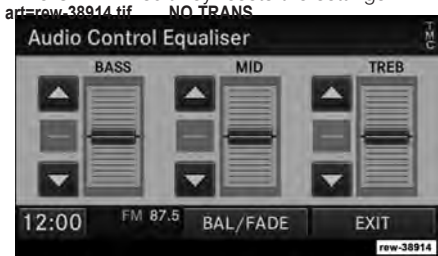

Press the Equalizer soft-key and use either the arrow soft-keys or the sliders on the screen to adjust BASS, MID, and/or TREBLE.

GETTING STARTED

NOTE:

The ignition switch must be in the ON or ACC position to operate the navigation radio.

If the unit is off, switch it on using the ON/OFF Volume rotary knob.

Soft-keys

art=rer-38306.tif NO TRANS

The BACK soft-key always takes you to the previous screen.




art=rer-38289.tif NO TRANS

The EXIT soft-key always takes you to the main menu.



Disclaimer for Navigation Radio

art=rew-38915.tif NO TRANS

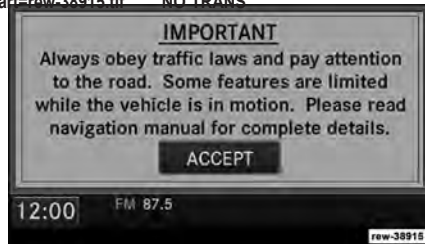

Before using the navigation radio read and accept the disclaimer. The disclaimer will be activated after the ignition is turned on.

Change the Language

The navigation radio will conform to the vehicle language set in the Electronic Vehicle Information Center (EVIC), if equipped.

If you change the language in the navigation radio, the system will change the language for all display information.

To change the language with the navigation radio:

1. Press the MENU hard-key on the right side of the radio.
2. Then press the System Setup soft-key to get to the System Setup menu.



3. Press the Language soft-key and select a language.

Set the Time

1. Press the Time Display soft-key in the lower left corner of the screen.



The minutes are set by the GPS system.

2. Press the Set Time Zone soft-key to change to the desired time zone.
3. Press the Daylight Savings soft-key to switch Daylight Savings on or off.

It is possible to set the time manually (ahead or behind actual GPS time), by pressing the USER CLOCK soft-key.

Store Radio Presets

1. Press the Radio Media hard-key repeatedly until MW LW FM is displayed in the upper left corner of the screen.



2. Select the radio band by touching either the MW, LW or FM soft-key.
3. Either press the SEEK up/down hard-keys, or touch the SCAN soft-key, DIRECT TUNE soft-key, or the left and right arrows to change the currently playing station.
4. Touch and hold one of the station preset soft-keys for two seconds and you will see the highlighted soft-key change from green to beige. You will also see the radio station stored

in the highlighted soft-key, and you will hear a confirmation beep when the station is saved.

NOTE:

If the preset list is not displayed press the PRESETS soft-key, located in the bottom line of the screen, repeatedly until the preset list is displayed..

You can use the PRESETS soft-key to toggle between:

art=rer-38297.tif NO TRANS To turn the preset list off.



art=rer-38295.tif NO TRANS To turn the preset artist list on.



art=rer-38299.tif NO TRANS To turn the preset song title list on.



art=rer-38298.tif NO TRANS To turn the preset station list on.



You can use the PAGE Up and Down soft-keys to scroll through the list of presets.

art=rer-38329.tif NO TRANS You can use the FULLSCREEN soft-key to toggle between fullscreen and splitscreen mode. Long preset names are displayed in fullscreen mode.




Connect Bluetooth Phone

NOTE:

Visit www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com for a list of compatible phones/devices.


1. Press the MENU hard-key on the right side of the radio.

2. Then touch the System Setup soft-key to get to the System Setup menu.
3. Touch the Phone Pairing soft-key to access the Bluetooth Devices menu.

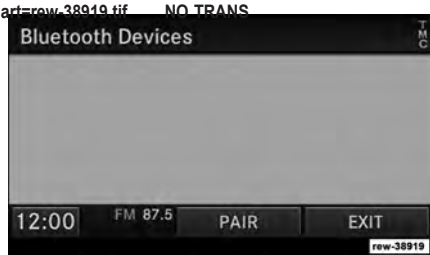


This menu lists all paired Bluetooth devices.

4. Press the PAIR soft-key to start a new pairing.

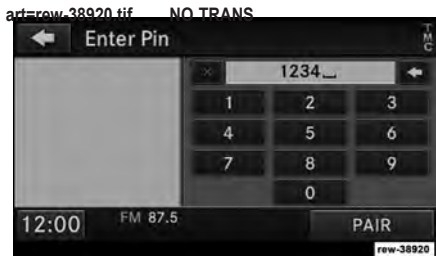

5. You can use the BACK soft-key to switch to the previous menu.

6. Enter any 4 Digit Security PIN and touch the PAIR soft-key again.

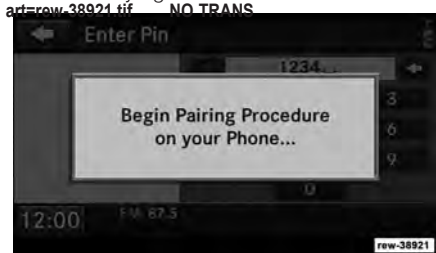

7. The pairing procedure starts. Refer to the user's manual of your phone to complete the procedure.

8. You will then be asked to set a priority for the paired phone. If there is more than one paired phone available, the navigation radio will try to connect to the phone with the highest priority setting.

NOTE:

If the phone book download feature is supported by your cell phone, only the first 1000 contacts will be automatically copied to the radio. Contacts will be downloaded from your SIM card first and then copied from your phones default phone book.

Set Default Country

1. Press the NAV hard-key on the right side of the radio.



2. Press the MENU hard-key.
3. Touch the NAV Settings soft-key
4. Touch the Set Default Country soft-key to select your default country.
5. Touch the SAVE soft-key to save the change.

Enter Home Address

1. Press the NAV hard-key on the right side of the radio. If the radio does not display the NAV - Main Menu, press the NAV hard-key again.
2. Touch the Guide Me Home soft-key to enter your home address.



- If no home address has been set, touch YES to access the Enter Home Address menu.
3. Touch Street Address to enter your address.




4. Touch the Input Street soft-key and enter your street name into the speller.

NOTE:

Read more about destination input and the predictive speller in the Navigation section of this manual.

5. Once the street name has been input, touch continue to confirm.
 6. Enter the house number into the next screen. If more than one city has this address, you will then need to select your city from a list.
- Once the address is entered completely, the system shows a map of your home address area.

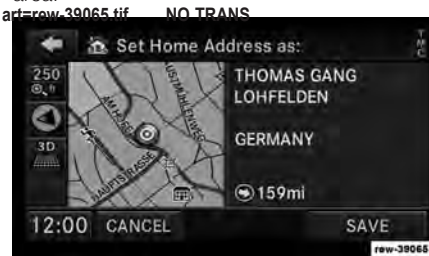

7. Touch the SAVE soft-key to confirm the address.

After you have entered your home address, the system will start a route guidance to your home every time you press the Guide Me Home soft-key.

Change Home Address

This procedure will allow you to change your Home Address if one has already been entered.


1. Press the MENU hard-key.



2. Touch the My Files soft-key.



3. Touch the My Address Book soft-key.

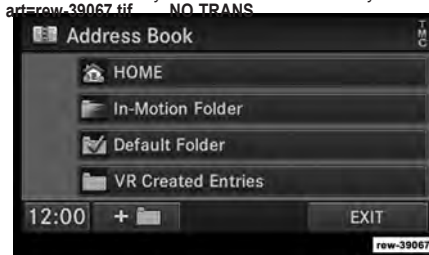

4. Touch the Home soft-key.

5. Touch the Edit Contact soft-key.

6. Touch the Change Address soft-key.



7. Touch the Street Address soft-key



8. Touch the Input Street soft-key and enter your street name into the speller.

NOTE:

- **If the Country needs to be changed, touch the appropriate soft-key to edit the setting.**
- **There may be instances when entering a city first prior to the address will locate the correct address more accurately.**

9. Enter the house number into the next screen. If more than one city has this address, you will then need to select your city from a list.

Once the address is entered completely, the system shows a map of your home address area.

10. Touch the SAVE soft-key to confirm the address.

After you have changed your home address, the system will start a route guidance to your home every time you press the Guide Me Home soft-key.

Voice Command Tutorial

When you press the Voice Command hard-key, you will hear a beep. The beep is your signal to give a command. Say TUTORIAL to listen to a Voice Command tutorial.

Press any hard-key or touch the display to cancel the tutorial.

Uconnect™ Phone Tutorial

When you press the Uconnect™ Phone hard-key, you will hear a beep. The beep is your signal to give a command. Say TUTORIAL to listen to a Uconnect™ Phone system tutorial.

Press any hard-key or touch the display to cancel the tutorial.

Uconnect™ Multimedia (RADIO)

Radio Mode

Overview

The navigation radio is equipped with three different tuners:

- FM 87.5 MHz - 108.0 MHz (RDS capable)
- MW 531 kHz - 1611 kHz
- LW 153 kHz - 282 kHz

Toggle between the radio and the media menus by pressing the RADIO/MEDIA hard-key. The different tuner modes can be selected via the tabs in the radio screen.

Station Presets

There are 12 station presets available for storing the radio stations in each tuner range.

In order to store the desired station, touch and hold one of the station preset soft-keys for two seconds and you will see the highlighted soft-key change from green to beige. You will also see the radio station stored in the highlighted soft-key, and you will hear a confirmation beep when the station is saved.

Change a Channel or Frequency

Press the SEEK up or the SEEK down hard-key to play the next available station or channel.

Select DIRECT TUNE to enter a frequency or a channel number, and confirm your selection by pressing the GO soft-key.

Touch the arrows to the left and right of the DIRECT TUNE soft-key to step manually through the frequency or channel roster.

Select the SCAN soft-key for a five second preview of each listenable station in the frequency band. Touch the SCAN soft-key again to stop the scan function and to select a radio station.

Radio Data System (RDS)

This radio navigation system is capable of receiving RDS signals in the FM band. RDS is a technology used for transmitting textual information about the music type, song and artist for FM band music. This information is shown on the display.

NOTE:

Not all radio stations support RDS.

The RDS information is displayed below the frequency reading of the currently playing radio station.

Radio Text Information

art=rer-38324.tif NO TRANS




Select the INFO soft-key to display additional radio text information in the right half of the screen.

art=rer-38325.tif NO TRANS



Select the CLOSE INFO soft-key to hide additional radio text information.

MUSIC TYPE (Program Type Filter)

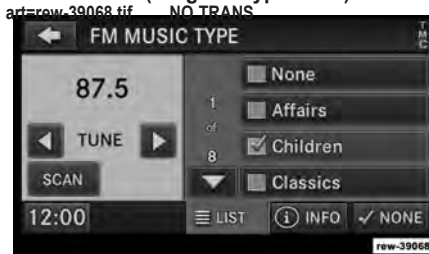

Program Type (PTY) is only available in FM mode. Radio stations are grouped according to their program (e.g., Soft Rock, Rhythm & Blues, etc.).

Select MUSIC TYPE to enable and/or disable desired program types. The SEEK and SCAN function will then only display stations with matching program types.

RDS (FM) Program Types

News, Current affairs, Information, Sport, Education, Drama, Culture, Science, Varied, Pop Music, Rock Music, M.O.R. Music, Light classical, Serious classical, Other Music, Weather,

Finance, Children's programmes, Social Affairs, Religion, Phone In, Travel, Leisure, Jazz Music, Country Music, National Music, Oldies Music, Folk Music, Documentary, Alarm Test, Alarm

Radio Settings

LW / MW / FM MENU

There are no specific settings for this mode.

Display Settings

Press the MENU hard-key and touch the Display Settings soft-key to access the Display Settings menu.

art=row-39069.tif NO TRANS



Select the Daytime Colors soft-key to switch to manual daytime mode and to adjust the brightness of the display using daytime colors.

Select the Nighttime Colors soft-key to switch to manual nighttime mode and to adjust the brightness of the display using nighttime colors.

Select the Auto Color soft-key to switch to automatic daytime/ nighttime mode and to control the brightness of the display using the dimmer switch of the vehicle.

Touch the EXIT soft-key to save your settings and to return to the LW/MW/FM Menu.


Screen-saver

To activate the screen-saver press the MENU hard-key and touch the Screen Off soft-key.

Once the screen saver is active, press any hard-key or touch the display to deactivate it.

View Settings

Press the MENU hard-key to display a radio menu.

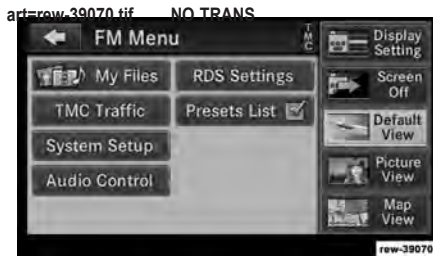

Touch the Default View soft-key to enable the default view mode, where the vehicle brand logo is displayed in the right half of the screen.

Touch the Picture View soft-key to enable the picture view mode, where a picture can be displayed on the right half of the radio screen. Refer to the Hard Disc Drive section of this manual for a detailed example.

Touch the Map View soft-key to enable the map view mode.



In Map View mode the navigation map or turn-by-turn navigation (as shown above) can be displayed on the right half of the radio screen (see Navigation View Settings for more information).

ParkView® Rear Back Up Camera (if equipped)



When equipped with ParkView®, the radio display shows the rear view camera picture as soon as the shifter is in the R position for vehicles with automatic transmission. In vehicles with manual transmission the reverse gear must be engaged.


Touch the Camera button in the System Setup menu to disable or enable ParkView®.

Uconnect™ Multimedia (MEDIA)

Disc Mode

Overview

The navigation radio is equipped with a CD/DVD player.

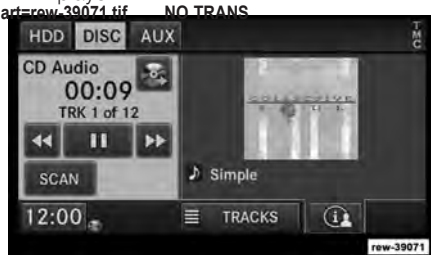

Toggle between the media and the radio menu by pressing the RADIO/MEDIA hard-key. The different media modes can be selected via the tabs in the radio screen.

Disc Requirements

CAUTION!

This disc player will accept a 4 3/4 in (12 cm) disc only. The use of other sized discs may damage the disc player mechanism.

The radio is capable of playing compact discs (CD), recordable compact discs (CD-R and CD+R), rewritable compact discs (CD-RW and CD+RW), recordable DVD-R, DVD+R, DVD-RW, and DVD+RW compact discs.

Your radio will play the following formats:

MP3, WMA, CD Audio, DVD Audio, and DVD Video, DVD-ROM, DVD Plus, DualDisc, SA-CD (CD Layer).

Do not insert anything other than the supported CD/DVD formats.

SACD (SACD layer) VCD, SVCD, VCD format on DVD and MPEG-4 are not supported.

A complete list of supported CD/DVD formats is available at www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com.

Inserting a Disc

1. Press the OPEN/CLOSE hard-key once.
2. With the printed side upwards, insert the disc into the disc slot of the radio. The radio pulls the disc in automatically and closes the flip screen. The radio selects the appropriate mode after the disc is recognized, and starts playing the first track. The display shows "Reading..." during this process.

NOTE:

A faulty CD is NOT automatically ejected. Use only standard size discs. Discs that have been modified with an adhesive label should not be used in the CD/DVD player.

High definition content and media (e.g., HD-DVD, Blu-ray Disc) is not supported.

If the user does not remove an ejected CD within approximately 10 seconds, the CD will reload.

NOTE:

On MP3 and WMA CDs with a large number of songs, it may take several seconds to read, play, and display information for all songs on the disc.

NOTE:

Recording your own CD on a home computer at a lower write speed will result in a more consistent quality.

Removing a Disc

1. Press the OPEN/CLOSE hard-key.
2. The disc is ejected and can be removed.

NOTE:

If the disc is not removed within approximately 10 seconds, the unit pulls it back into the slot (park position). The disc may be ejected when the ignition is OFF.

3. Press the OPEN/CLOSE hard-key to close the display. The display will close automatically within 30 seconds after the disc is removed.

Selecting Disc Mode

Toggle between the media and the radio menus by pressing the RADIO/MEDIA hard-

key. The disc mode can be selected by touching the Disc tab soft-key.

NOTE:

When a disc is inserted, the appropriate mode is automatically selected once the disc is recognized.

Scan Search

Touch the SCAN soft-key.

The individual tracks of the disc will be played in succession for ten seconds each.

Select STOP SCAN soft-key to stop the scan function.

Next Track

Press the SEEK up hard-key. The next track on the disc is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track.

Previous Track

Pressing the SEEK down hard-key plays the previous track. If the first track has been reached in the backward direction, the unit will switch from the first track to the last track. If a track has been playing for more than one

second when the SEEK down hard-key is pressed, the unit will skip back to the beginning of the current track.

Fast Forward Track

art=rer00030.tif NO TRANS



Touch and hold the fast forward soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast-forward by releasing the fast forward soft-key.

Rewind Track

art=rer00031.tif NO TRANS



Touch and hold the fast reverse soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the fast reverse soft-key.

Displaying the Elapsed Title Time

The elapsed title time of the current playing track is displayed in the left center of the screen.

Select Title from List

Select LIST to display a list of the titles of the currently playing disc. Select the desired track you wish to play.

Select HIDE LIST to hide the list.

Disc Info

Select INFO to display Title, Artist, Album, Genre information in the right half of the screen.

Select CLOSE INFO to close the information.

Gracenote® Music Recognition Technology

art=rer-38334.tif NO TRANS



This navigation radio is equipped with the Gracenote® Music Recognition Service, with an embedded database to look up album, song title, genre and artist information. Data will be found for most Audio CDs (CDA discs). Data will not be found for DVDs or data discs (those with MP3 or WMA files).

Music recognition technology and related data are provided by Gracenote®. Gracenote® is the industry standard in music recognition technology and related content delivery. For more information visit www.gracenote.com.

NOTE:

Visit www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com for update information.

Copying Complete Disc to Hard-Drive

Read about copying selective songs in the Hard Disk Drive section of this manual.

Insert an Audio-CD or a disc with MP3 or WMA files.

art=rer-39072.tif NO TRANS



art-ror-38506.tif NO TRANS



Touch the COPY soft-key to start the copy process.

art-row-39073.tif NO TRANS



The copy progress is shown in the display. It is possible to listen to radio modes during this process. Copying time is greater than 5x the normal playback rate.

art-ror-38507.tif NO TRANS



Touch the STOP COPY soft-key to stop the copy process at any time.

Disc Menu

While in disc mode with inserted audio disc, press the MENU hard-key to access the Disc Menu.

Select Random to play the titles on the disc in random order. Select Random again to turn Random off.


Select Rpt. TRK to repeat the currently playing title. Touch the Rpt. TRK soft-key again to stop the repeat mode.

Select Repeat Folder to repeat all songs in the currently playing folder (MP3/WMA disc only). Touch the Repeat Folder soft-key again to stop the repeat mode.

Playing a MP3/WMA Disc

1. Press the OPEN/CLOSE hard-key once.
2. With the printed side upwards, insert the disc into the disc slot of the radio. The radio pulls the disc in automatically and closes the flip screen. The radio selects the appropriate mode after the disc is recognized, and starts playing the first track. The display shows "Reading..." during this process.

art-row-39074.tif NO TRANS

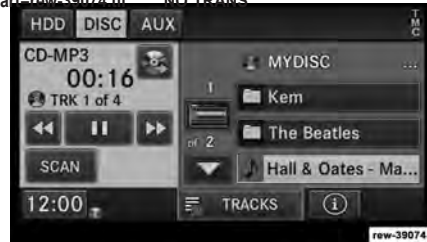

A MP3/WMA disc may contain audio files in a folder structure. The folder, if any, is shown in the list view.

Touch the TRACKS soft-key if the list is not displayed.

3. Touch the soft-key with a folder symbol to open a folder.



art=rer-39075.tif NO TRANS



Touch the UP soft-key to go up one folder.

Playing a Video DVD

NOTE:

To view a DVD video on the radio screen, the vehicle must be stopped, and the shifter must be in P position for vehicles with automatic transmission. In vehicles with manual transmission, the parking brake must be engaged also.

Insert a video DVD first.



The playback starts automatically after the DVD video is recognized by the disc drive.

Touch the CHAPTERS soft-key to display a list of available chapters or tracks. Touch a chapter or track soft-key in the list to start playback from the selected section.

Touch the VIEW VIDEO soft-key to view the video on the screen.

DVD Menu Controls

If you insert a DVD video disc that contains a top menu, a menu may appear.



Touch the cursor arrow soft-keys to select the title you want to view, then touch the ENTER soft-key to start playback.

Touch the soft-key to move the controls to the right part of the screen.

art=rer-00037.tif NO TRANS

Touch the soft-key to close the DVD Menu Controls.

DVD Playback Controls

In video playback mode, touch anywhere on the screen to show the DVD playback controls.



Touch the PREV soft-key to start playback from the beginning of the current chapter or track. When you press twice in quick succession, playback starts from the beginning of the preceding chapter or track.



art=rer00044.tif NO TRANS

Touch the soft-key to move the controls to the right part of the screen.



art=rer00045.tif NO TRANS

Touch the soft-key to close the DVD MENU Controls.



art=rer00040.tif NO TRANS

Touch the soft-key to pause playback.



art=rer00041.tif NO TRANS

Touch the soft-key to stop playback.



art=rer00042.tif NO TRANS

Touch the soft-key during playback to fast reverse playback.



art=rer00043.tif NO TRANS

Touch the soft-key during playback to fast forward playback.

Touch the NEXT soft-key to locate succeeding chapters or tracks.

DVD Video Menu

While in disc mode with inserted video DVD, press the MENU hard-key to access the DVD Video Menu.



Touch the DVD Setup soft-key to access the DVD Setup menu.



In the DVD Setup menu you may select Menu Language, Audio Language, Subtitle, Camera Angle, Aspect Ratio, and Brightness settings by pressing the corresponding soft-key. Some of the soft-keys are disabled if the inserted disc does not support the functionality.

Disc Skipping

Skipping is typically caused by a damaged (scratched) disc. This will result in a 10 second jump forward until the damaged area is passed.

Temperature Protection

If the temperature of the disc reader during operation becomes too high, a popup message will inform the user of an over temperature situation. The unit switches to radio mode until the disc reader temperature has dropped to a normal level.

Hard Disk Drive Mode (HDD)

The HDD mode gives you access to the audio files on the internal hard disk drive. It functions similar to a CD player, with the exception that the internal HDD can hold more tracks. It can hold approximately 3,000 four-minute CD-quality songs.

Before using the HDD mode, you will need to copy tracks to the internal hard drive.

The files will be stored on the internal hard disk drive and can be used in the HDD mode.

Copy Audio Disc to Hard-Drive

1. Insert a disc. Press the COPY soft-key or follow the following steps.




2. While in the DISC mode, press the MENU hard-key to access the Settings Menu.

3. Touch the My Files soft-key.



4. Select My Music

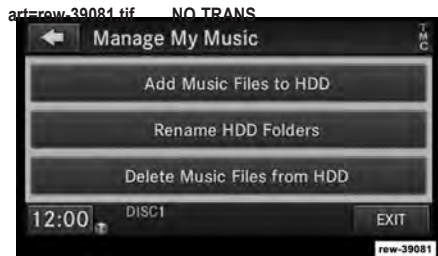


5. Touch the Add Music Files to HDD soft-key.

6. Touch the From DISC soft-key in the next screen to copy music tracks of the inserted disc to the hard disk drive.



During the copy process, the disc player cannot play audio.

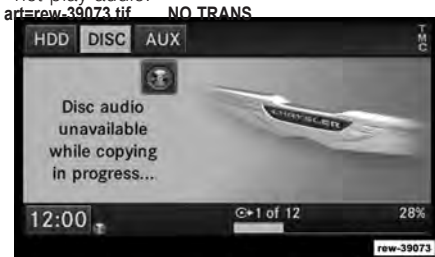

The copy progress is shown in the display.

It is possible to listen to radio modes during this process. Copying time is greater than 5x the normal playback rate.

NOTE:

When copying CD Audio to HDD, audio files are converted from CD Audio to WMA. DVD-Audio cannot be copied to the HDD.

Copy WMA/MP3 Files to Hard-Drive

You can copy MP3 and WMA formatted compressed audio files from a disc or via USB (e.g., USB stick)

It is recommended to sort music files into folders.



Songs located in the root level (top level) of the disc or USB device are displayed in a folder named Disc (or the physical disc name) for disc media or USB or USB sticks.

Once the songs are copied, the playlist will be named Disc_Playlist (for Disc) or USB_Playlist (for USB stick).

For the example above the list on the HDD will show the following:

<Disc Name>

- Song 1.mp3 (First song in Playlist 1)
- Song 2.mp3 (Second song in Playlist 1)
- Song 3.wma (Third song in Playlist 1)

Disc_Playlist


- Song 1.mp3 (First song in Playlist 2)
- Song 2.mp3 (Second song in Playlist 2)
- Song 3.mp3 (Third song in Playlist 2)

Selective Song Copying from Disc

You can select specific songs on a WMA/MP3 disc using the following procedure:




1. While in the DISC mode, press the MENU hard-key to access the Settings menu.

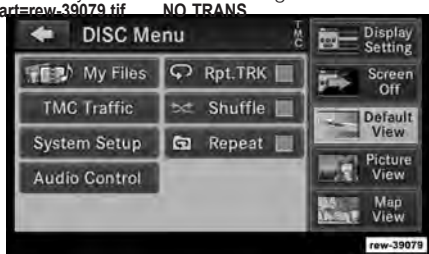

2. Touch the My Files soft-key.




3. Select My Music.

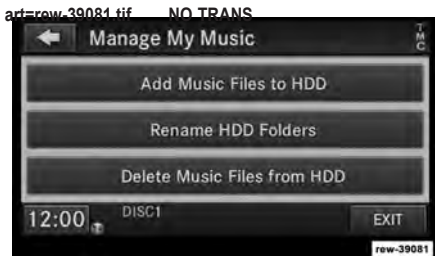

4. Touch the Add Music Files soft-key.

5. Touch the From DISC soft-key in the next screen.

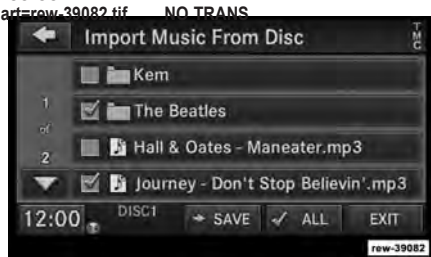

6. Select the folders or titles you would like to copy, by touching the checkbox.

A red check mark indicates the selected songs and/or folders. Touch the ALL soft-key to select all files and folders at once.

NOTE:

You may touch a folder icon, to open the folder and select specific songs inside the folder.

7. Touch the SAVE soft-key to start the copy process.

The copy process is shown on the display. It is possible to listen to radio modes during this process.

 
If you unplug or eject the media before the copying process is finished, the process will be interrupted. You may restart the copying process by repeating the steps above.

Copying from USB


1. Insert a USB device.



Wait until the radio starts playing the music from the USB device.



2. Touch the COPY FROM USB soft-key.

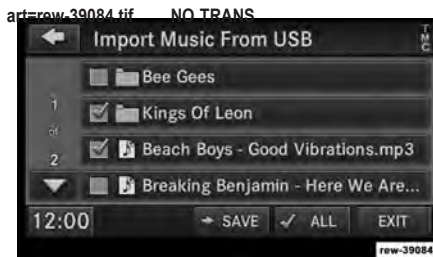

3. Select the folders or titles you would like to copy.

A red check mark indicates the selected songs and/or folders. Touch the ALL soft-key to select all files and folders at once.

NOTE:

You may touch a folder icon, to open the folder and select specific songs inside the folder.

4. Touch the SAVE soft-key to start the copy process.



The copy process is shown on the display. It is possible to listen to radio modes during this process.

Playing Audio Files from an external USB device

You can play songs directly from an external USB device, by connecting the device to the radio, or to the secondary USB port (if equipped, typically located in the glove box or center console). The radio will find the music files and starts playing automatically.

NOTE:

Refer to www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com for device compatibility list and functionality support.

Playing Audio Files from the Hard Disk Drive

Press the RADIO/MEDIA hard-key and select the HDD tab. You can play songs directly from the internal hard disk drive.




art=rer-38331.tif NO TRANS




Touch the SEARCH/BROWSE soft-key to select an available category.

The navigation radio can sort the files by artist, by album, by song, by genre, from a folder, or from Favorites.

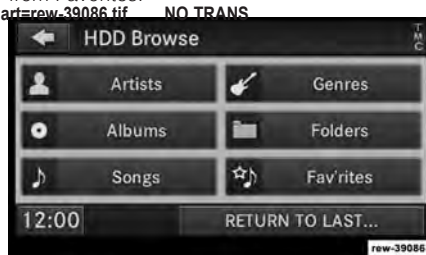

1. For this example, touch the Albums soft-key.

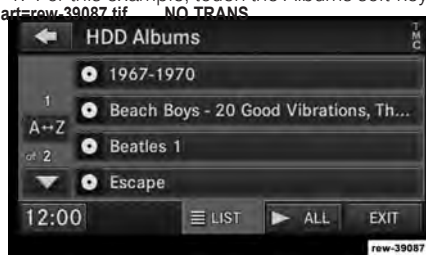

2. Touch a soft-key with the desired album name to play an album.

Touch the PLAY ALL ALBUMS soft-key to play all available albums.

Next Track

Press the SEEK up hard-key. The next track of the current album is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track.

Previous Track

Press the SEEK down hard-key. The previous track of the current playlist is played. If the first track has been reached in the backward direction to the last track. If a track has been playing for more than one second when the SEEK down hard-key is pressed, the unit will skip back to the beginning of the current track.

Fast Forward Track

Touch and hold the fast forward soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast forward by releasing the fast forward soft-key.

Rewind Track

art=rew00079.tif NO TRANS

Touch and hold the fast reverse soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the fast reverse soft-key.

Displaying the Elapsed Title Time

The elapsed title time of the current playing track is displayed on the left side of the screen.

HDD Menu

While in HDD mode, press the MENU hard-key to access the HDD Menu.

Shuffle

The shuffle function plays random tracks from the hard disk drive. Touch the Shuffle soft-key to switch the random play function on or off. A red check mark indicates the shuffle function is active.

Repeat Track


The repeat track function repeats the currently played track. Touch the Rpt. TRK soft-key to switch the repeat track function on or off.

A red check mark indicates the repeat track function is active.

Favourite Playlists on the Hard Disk Drive


You may save links to favorite playlists in the Favourite Playlists list.

art=rew39085.tif NO TRANS

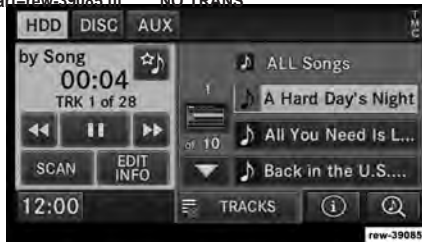

1. While in HDD mode touch the Browse soft-key to access the Browse Categories menu.

art=rew39086.tif NO TRANS

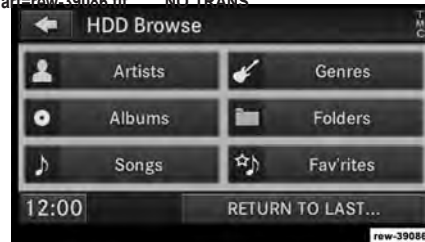


2. Touch the Favourite soft-key to display a list of favorite playlists.

art=rew39088.tif NO TRANS



3. Touch one of the ADD FAVOURITE soft-keys.

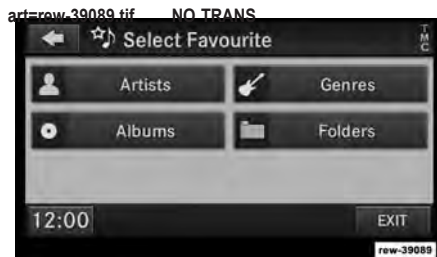

4. You may favor an artist, an album, a genre, or a playlist (folder). For this example select the Albums category.



A link to the selected playlist is now saved in the Favourite Playlists list.

NOTE:

The link to the favourite playlist will be removed, after a playlist was removed from the My Playlists menu. Refer to Editing Playlists on the Hard Disk Drive in this manual.

You may now edit the list by touching the EDIT soft-key, or exit the list by touching the EXIT soft-key.


Managing Playlists on the Hard Disk Drive (Folders)




1. While in the HDD mode, press the MENU hard-key to access the HDD Menu.



2. Touch the My Files soft-key.

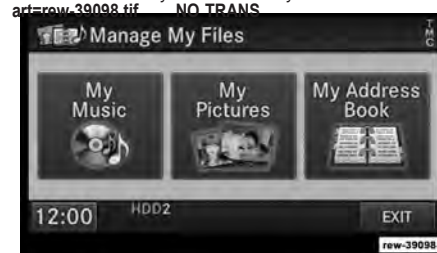

3. Select My Music.

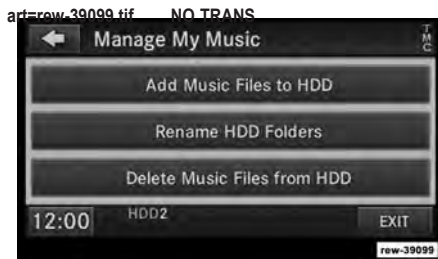

You may now add music files, delete music files, or rename folders on the HDD.

Deleting All Playlists from the Hard Disk Drive

1. Press the MENU hard-key on the right side of the radio.
2. Touch the System Setup soft-key to access the System Setup menu.
3. Touch the Manage Hard Drive soft-key to access the Manage Hard Drive menu.



This menu displays the available space on the hard disk drive, and allows you to delete pictures, music files, and address book entries.

Importing Pictures

It is possible to import display pictures to the internal hard disk drive. The pictures can be displayed on the right half of the radio screen.

WARNING!

It is not possible to copy pictures from a USB device or CD while the vehicle is in motion.



In the default mode, the vehicle brand logo is displayed in the right half of the screen. Press the Menu hard-key on the right side of the radio to access one of the Setting menus.

It is recommended to change the picture dimensions on a PC or Digital Camera to 240 by 158 pixels before the import.

NOTE:

USB devices (e.g., camera memory USB adaptors, etc.) must comply with the MSD (Mass Storage Device) standard. This USB terminal can provide power to the inserted device. The device's current limitation may be less or equal to 1A.


1. Insert either a CD or a USB device containing your pictures.



2. Touch the My Files soft-key to go to the Manage My Files screen.



3. Touch the My Pictures soft-key to get an overview of the currently stored images.

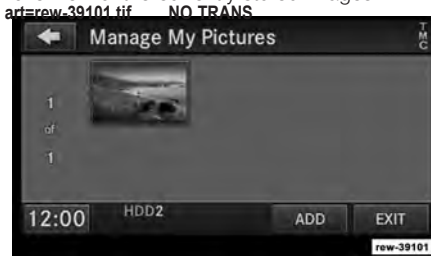

4. Press one of the ADD soft-key.

NOTE:

Only JPEG format will be recognized.

art:rew_39102.tif NO TRANS




5. Select the type of media inserted.

6. Use the PAGE soft-keys to page through a list of pictures and press the picture you would like to import.

art:rew_39103.tif NO TRANS




7. Confirm your selection by touching the SAVE soft-key.

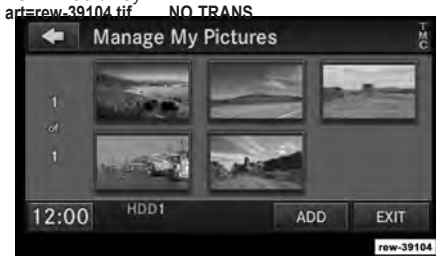

The imported picture is now available in the Manage My Pictures screen.

8. In order to display the imported picture in the radio screen, touch the desired picture soft-key.

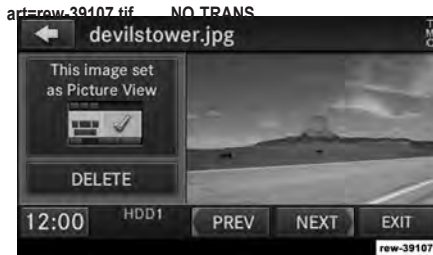

9. Select this picture by pressing the Picture View soft-key. A check mark indicates the currently used picture.

Use the PREV or NEXT soft-key to step through the list of available pictures.

Touch the DELETE soft-key to delete the picture from the hard disk drive.



10. Press the MENU hard-key twice and then touch the Picture View soft-key to enable the picture view.



The picture is now displayed on the right half of the screen.

Uconnect™ Multimedia (REMOTE DEVICES)

AUX Mode (If Equipped)


The AUX mode gives you access to the audio files on an external digital player device. It functions as a remote control for the currently connected mobile digital device, and you can play audio from the device through the vehicles speaker system. Before using the AUX mode, you will need to connect your device to the USB connector.

NOTE:

- **It is recommended that you use the latest available software for your digital device. See device manufacturer website for updates.**
- **Visit www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com for a list of compatible phones/devices.**

Playing Audio Files from the Mobile Digital Player Device

You can play songs directly from the device. For this example we used an iPod®.

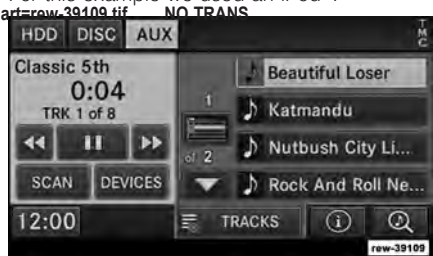

Touch the TRACKS soft-key to display a list view.

Touch the soft-key with the desired list item to select and play the item.

Touch the HIDE LIST soft-key to hide the list.


Touch the SEARCH/BROWSE soft-key to browse by categories.

NOTE:


- **Depending on the amount of songs and on the performance of the digital player device, it may take some time before the SEARCH/BROWSE soft-key is displayed.**
- **USB sticks or any other external storage device (hard drives) do not support the Search/Browse feature.**

Select an iPod® Category

The iPod® can sort the files by playlists, by song names, by artists, by composers, by genres, by albums, by podcasts or by audio books.

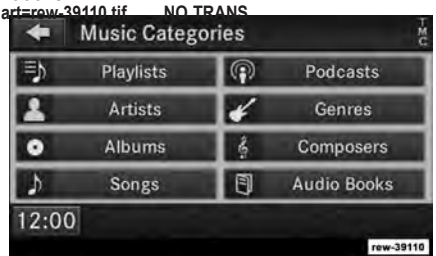

Touch the Artists soft-key for this example.

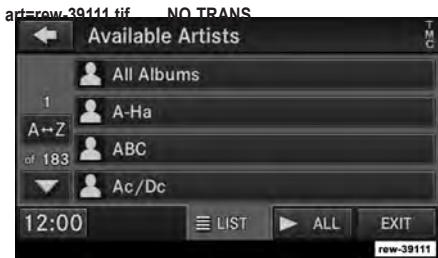

Touch a soft-key with the desired artist's name to play songs from this artist.

Touch the PLAY ALL soft-key to play songs from all available artists.

Touch the PAGE UP or PAGE DOWN soft-key to navigate through the list of artists.

iPod® or Smart Player Devices


Different generations of players will support different levels of features (Scan, FF, RW, Play/Pause, etc.). For devices that do not support these features, the radio will not display the soft keys.

Please refer to the following websites for a listing of supported devices and device spe-

cific supported features: www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com.


List Jump

If you encounter a very long list, it may be helpful to touch the A to Z soft-key to go to the List Jump menu.

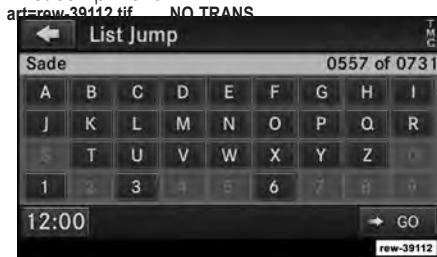

For this example we entered the first letter of the desired artist.

Touch the GO soft-key to jump to the desired artist.

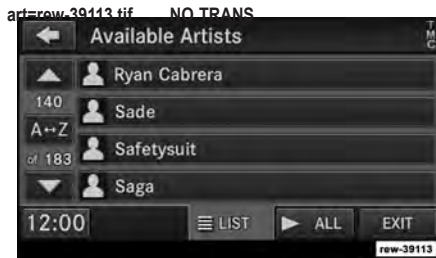

Touch a soft-key with the desired artist's name to play songs from this artist.

Next Track


Press the SEEK up hard-key. The next track of the current album is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track.

Previous Track


Press the SEEK down hard-key. The previous track of the current album is played. If the first track has been reached in the backward direction, the unit will switch from the first track to the last track. If a track has been playing for more than 10 seconds when the SEEK down hard-

key is pressed, the unit will skip back to the beginning of the current track.

Fast Forward Track

 Touch the fast forward soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast forward by releasing the fast forward soft-key.

Rewind Track

 Touch the fast reverse soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the fast reverse soft-key.

Pause

Touch the PAUSE soft-key to pause the playback.

Play

Touch the PLAY soft-key to start the playback.

Displaying the Elapsed Title Time

The elapsed title time of the currently playing track is displayed on the left side of the screen.

Scan Search

Touch the SCAN soft-key.


The individual tracks will be played in succession for eight seconds each.

Select STOP SCAN soft-key to stop the scan function.

Track Info

Touch the INFO soft-key.

Information on the currently playing track, if available, will be displayed on the right half of the screen.

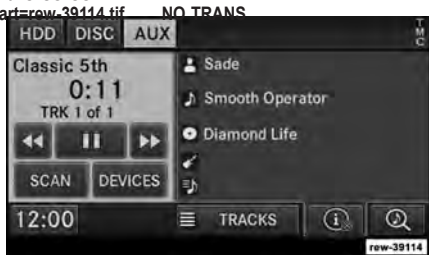


If additional information is available, the NEXT soft-key will be displayed. Touch the NEXT soft-key to show the additional information.

Switch Device

Touch the DEVICES soft-key to switch to other connected devices.

AUX Menu

While in AUX mode, press the MENU hard-key to access the AUX Menu.

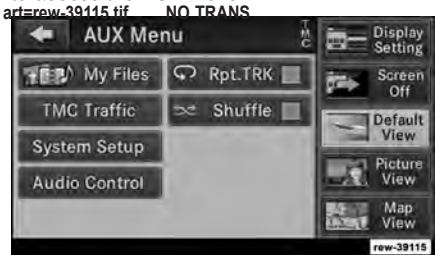

Random Playback

The random playback function plays random tracks from the iPod® device. Touch the Random soft-key to switch the random play function on or off.

A red check mark indicates the random play function is active.

Repeat Track

The repeat track function repeats the currently played track. Touch the Rpt. TRK soft-key to switch the repeat track function on or off.

A red check mark indicates the repeat track function is active.

Bluetooth® Audio Streaming Mode

The Bluetooth® Audio Streaming mode gives you access to the audio files on the external Bluetooth® device. The radio functions as a sound system for the currently connected Bluetooth® device, and you can play audio from the device through the vehicle's speaker system.

Before using the Bluetooth® Audio Streaming mode, you will need to pair your compatible Bluetooth® device to the radio. (See Connecting Bluetooth® Devices chapter.)

NOTE:

- **The files will not be stored on the internal hard disk drive and cannot be used in the HDD mode.**
- **It is recommended that you use the latest available software for your Bluetooth® device.**
- **Not all Bluetooth® devices are capable of Bluetooth® audio streaming.**
- **Not all functions of a Bluetooth® device can be controlled by the radio. See the Bluetooth® device manufacturer website for updates.**
- **Different generations of Bluetooth® devices will support different levels of features (Scan, FF, RW, Play/Pause, etc.). For devices that do not support these features, the radio will not display the soft keys. Please refer to the following websites for a listing of supported devices and device specific supported features: www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com.**

See the Bluetooth® device manufacturer website for updates.

Playing Audio Files from the iPod Device

You can play songs directly from the iPod device.


art-rw-39114.tif NO TRANS



The Bluetooth® logo indicates a connected Bluetooth® device. While in AUX mode, touch the DEVICES soft-key to see the connected devices.



Select the desired device. The Bluetooth® logo indicates a Bluetooth® device. For this example touch the myPhone soft-key.

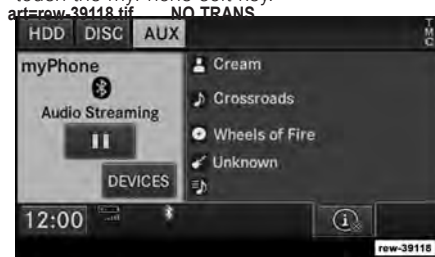

PAUSE

Touch the PAUSE soft-key to pause the Bluetooth® audio stream.

PLAY

Touch the PLAY soft-key to start the Bluetooth® audio stream.

Video Entertainment System (VES)™


The navigation radio can remotely control the VES™. Refer to the VES™ user's manual for more information.

Receiving Audio/Video from the VES™

You can play audio from the VES™ through the vehicle's speaker system. If you have a VES™ with a video player, you can also see the video on the radios display if the vehicle is parked.



The VES tab becomes available after the VES™ system is turned on. Touch the VES MODES soft-key to select the VES™ audio source.

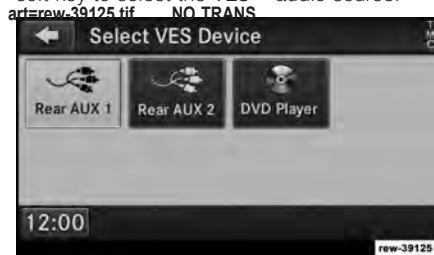

Touch the soft-key with the desired source to play in the vehicle cabin.

Availability of the DVD Player soft-key, the Rear AUX 1 soft-key, and the Rear AUX 2 is based on the type of VES™ in the vehicle.

DVD Player is not available if there is no DVD player in the VES™ or there is no DVD in the player.

A device must be plugged into the AUX jack of the VES™ to be available.

A disabled soft-key indicates an unavailable source.


Sending Audio/Video and controlling the VES™

The navigation radio can also control the VES™.

All sources are played through the VES™ headphones.

Refer to the VES™ user's manual for more information on controlling the rear VES™ through the remote control.

To access the rear VES™, press the MENU hard-key on the right side of the radio.

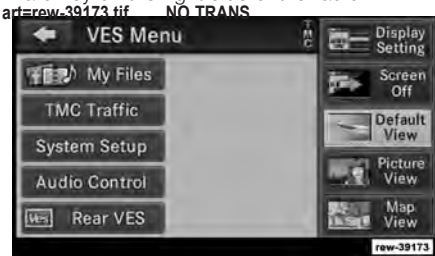

Touch the Rear VES soft-key to display the Rear VES™ Controls.



The Rear VES Controls are displayed in the right half of the screen.

NOTE:

Press the HIDE LIST soft-key, and/or the CLOSE INFO soft-key, if you cannot see the Rear VES Controls.

The first column controls VES™ on/off and the headset audio channels 1, or 2.

A VES™ headset can listen to either audio channel 1 or audio channel 2.



 
Touch the soft-key tab 1 to select Channel 1. In this example Channel one plays the MW RADIO tuner audio.

The left half of the screen displays the audio source information, which in this case, is the radio frequency 531 kHz of Preset 1.

Touch the LIST soft-key to display the selected source details.

In this case the MW preset list within the selected tuner is displayed.

You may touch a preset soft-key to change the station, or touch the DIRECT TUNE soft-key to enter a frequency, or press the SEEK up or SEEK down hard-keys to change the radio station.



Touch the 2 soft-key tab to set the desired audio source for the second VES™ audio channel. In this example channel two plays MEDIA from the HDD.



The left half of the screen displays the audio source information, which, in this case, is track 1 of a playlist on the HDD of the navigation radio.

Touch the LIST soft-key to display the selected source details.



In this case the songs within the selected playlist are displayed.



The RADIO column controls the MW, LW, and FM tuner of the navigation radio.

NOTE:

The navigation radio cannot play both AM or FM at the same time.

The MEDIA column controls the HDD, DISC, and AUX audio source of the navigation radio.

The VES column controls the DVD Player, Rear AUX 1, and Rear AUX 2 of the VES™ system.

Touch the on/off soft-key-tab to show the VES™ ON/OFF display.



Touch the Turn Rear VES OFF soft-key to shut the VES™ off.

Touch the Turn Rear VES ON soft-key to turn the VES™ on.

VEST™ LOCK


Press the LOCK soft-key to disable the controls on the VEST™ remote control unit. Once the VEST™ is locked, it is not possible to use the VEST™ controls or the VEST™ remote control.

VEST™ UNLOCK

Press the UNLOCK soft-key to enable the controls on the VEST™ remote control unit.


Playing a Video DVD for the Rear VEST™

1. To view a DVD video on the Rear VEST™ radio screen, insert a video DVD.

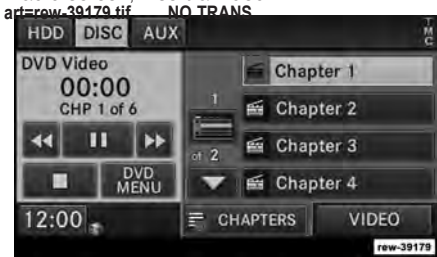

The playback starts automatically after the DVD video is recognized by the disc drive.

2. Press the MENU hard-key on the right side of the radio.

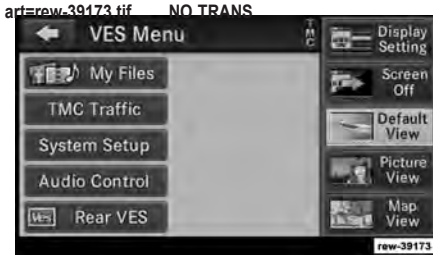

3. Touch the Rear VES soft-key to display the Rear VEST™ Controls.



4. Touch the 1 soft-key tab to select audio channel 1.



5. Touch the DISC soft-key in the MEDIA column to select the disc player.

6. Touch the PLAY VIDEO soft-key to start the video playback.

USB Connector

It is possible to transfer audio files or pictures files to the navigation radio. Files can be on a disc or on a USB device (e.g., USB stick). The USB connector is covered by a small cover which protects the connector from dust or damage.

NOTE:

- **USB on the front of the radio and the one either in the glove box (if equipped) or center console (if equipped) have identical functions.**
- **USB devices (e.g., camera memory USB adaptors, etc.) must comply with the MSD (Mass Storage Device) standard. This USB terminal can provide power to the inserted device. The device's current limitation must be less or equal to 1A.**

The transfer speed for this USB connector is approximately two megabytes per second.

Some player devices cannot be controlled through the USB connector. Some player devices save music files in MP4 format, which cannot be played in this radio. Some copy protected music (e.g., downloads from the internet) cannot be played on this radio.

Compatible Devices

Please see your authorized dealer or visit www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com for supported devices.

NOTE:

Some MP3 players do not allow songs to be copied into other devices.

How to open the cover

art=rer00123.tif NO TRANS



1. Place finger under the pull arrow.

art=rer00124.tif NO TRANS



2. Pull forward.

NOTE:

The flap is attached and should not be removed! Do not pull the flap off of the frame. Do not use a tool (e.g., screw driver, nail file, etc.) to open the flap, as this could cause damage to the face of the radio.

How to Close the Cover
art=rer00125.tif NO TRANS



1. Using your thumb and index finger, grasp the flap. Notice the hooks (1), which must first be inserted into the frame.

art=rer00126.tif NO TRANS



2. Hook the top hooks (1) into the frame first.
art=rer00127.tif NO TRANS



3. Then push on the bottom of the flap to secure in place.

CAUTION!

Never force any connector into the ports of your radio. Make sure your connectors are the identical shape and size before you connect.

AUX Mode

The AUX jack allows you to connect the headset output of an audio device (e.g., MP3 player) to the navigation radio. The audio of the connected device will then be played through the navigation radio sound system.

art=rer00128.tif NO TRANS



Connect a 3.5 mm *stereo* mini-jack cable as shown above (not provided with the radio) to the AUX jack on the navigation radio and to the earphone connector of your audio device.

The display will switch automatically to the AUX mode, when a 3.5 mm *stereo* mini-jack cable has been connected. The radio screen will revert back to MW/LW/FM mode when the cable is unplugged.

To change radio modes while the cable is connected to the unit, press the RADIO/MEDIA hard-key until the AUX tab is displayed on the top of the screen. Touch the AUX tab to return to the AUX mode.

Adjust the volume with the ON/OFF VOLUME rotary knob, or with the volume of the attached device.

The control of the external device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead.

NOTE:

Inserting of a *mono* jack will result in improper audio playback.

VOICE COMMAND

Voice Command Operation

Voice Command allows you to control your MW, LW, and FM radio, disc player, navigation system, hard disk drive storage, AUX mode devices (digital music player devices) and a memo recorder.

NOTE:

Take care to speak into Voice Command as calmly and normally as possible. The ability of Voice Command to recognize user voice commands may be negatively affected by rapid speaking or a raised voice level.

WARNING!

Any voice commanded system should be used only in safe driving conditions and all attention should be kept on the roadway ahead. Failure to do so may result in an accident causing serious injury or death.

art=rer-38601.tif



NO TRANS

When you press the Voice Command hard-key, you will hear a beep. The beep is your signal to give a command.

NOTE:

If you do not say a command within a few seconds, the system will present you with a list of options.

If you ever wish to interrupt the system while it lists options, press the Voice Command hard-key, listen for the beep, and say your command.

Pressing the Voice Command hard-key while the system is speaking is known as "barging in." The system will be interrupted and you can add or change commands. This will become helpful once you start to learn the options.

NOTE:

At any time you can say the words CANCEL, REPEAT, HELP, or MAIN MENU.

These commands are universal and can be used from any menu or screen. For other universal commands, refer to the command section in this manual.

All other commands can be used depending upon the active application.

For example: If you are in the navigation menu and you are listening to FM radio, you can speak commands from the navigation menu or from the FM radio menu.

Certain commands displayed 2 or 3 levels deep can be used immediately after pressing the VR button for quicker result. For example.....Sat audio > Select Name > Sirius Hits 1.... can be shortened toSat Audio>Sirius Hits 1


When using this system, you should speak clearly and at a normal speaking volume.

The system will best recognize your speech if the windows are closed, and the heater/air-conditioning fan is set to low.

At any point, if the system does not recognize one of your commands, you will be prompted to repeat it.


NOTE:

At any time you can say the words CANCEL, REPEAT, HELP, or MAIN MENU. These commands are universal and can be used from any menu or screen. All other commands can be used depending upon the active application. When using this system, you should speak clearly and at a normal speaking volume. The system will best recognize your speech if the windows are closed and the heater/air-conditioning fan is set to low. At any point, if the system does not recognize one of your commands, you will be prompted to repeat it.

To hear the first available Menu, press the Voice Command  hard-key and say HELP or MAIN MENU.

Display Menu


In addition to audible help, the navigation radio is able to display the most important available commands on the screen.

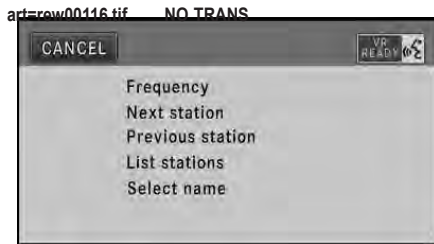


Commands

Voice Command understands two types of commands. Universal commands are available at all times. Local commands are available if the supported radio mode is active.

Changing the Volume

1. Start a dialogue by pressing the Voice Command  hard-key.
2. Say a command (e.g., HELP).
3. Use the ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while Voice Command is speaking.

Main Menu

Start a dialogue by pressing the Voice Command  hard-key.

You may say MAIN MENU to switch to the main menu.

- In this mode you can say the following commands:
- RADIO (to switch to the radio mode)
- HARD DRIVE (to switch to the HDD mode)
- DISC (to switch to the disc mode)
- VES (to switch to the VES™ mode)
- MEMO (to switch to the memo recorder)
- NAVIGATION (to switch to the navigation mode)
- SYSTEM SETUP (to display the system setup menu)

Radio Menu

You may say RADIO to switch to LW, MW, or FM.

Say RADIO MENU.

- In this mode you may say the following commands:
- RADIO LW (to switch to the LW band)
- RADIO MW (to switch to the MW band)
- RADIO FM (to switch to the FM band)

Radio LW

To switch to the LW band say LW or RADIO LW.

In this mode you may say the following commands:

- FREQUENCY (to change the frequency)
- NEXT STATION (to select the next station)
- PREVIOUS STATION (to select the previous station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Radio MW

To switch to the MW band say MW or RADIO MW.

In this mode you may say the following commands:

- FREQUENCY (to change the frequency)

- NEXT STATION (to select the next station)
- PREVIOUS STATION (to select the previous station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Radio FM

To switch to the FM band say FM or RADIO FM.

In this mode you may say the following commands:

- FREQUENCY (to change the frequency)
- NEXT STATION (to select the next station)
- PREVIOUS STATION (to select the previous station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Disc

To switch to the disc mode say DISC.

In this mode you may say the following commands:

- TRACK (1-250) (to change the track)

- NEXT TRACK (to play the next track)
- PREVIOUS TRACK (to play the previous track)
- MAIN MENU (to switch to the main menu)

Hard Drive

To switch to the HDD mode say HARD DRIVE.

In this mode you may say the following commands:

- TRACK (1-250) (to change the track)
- NEXT TRACK (to play the next track)
- PREVIOUS TRACK (to play the previous track)
- MAIN MENU (to switch to the main menu)

VES™

To switch to the VES™ mode say V E S.

In this mode you may say the following commands:


- VES
- VES REMOTE LOCK (to lock the VES™ remote)

Memo

To switch to the voice recorder mode say MEMO.


In this mode you may say the following commands:

- NEW MEMO (to record a new memo)

During the recording you may press the Voice Command  hard-key to stop recording. You proceed by saying one of the following commands:

- SAVE (to save the memo)
- CONTINUE (to continue recording)
- DELETE (to delete the recording)

- PLAY MEMOS (to play previously recorded memos)


During the playback you may press the Voice Command  hard-key to stop playing memos. You proceed by saying one of the following commands:

- REPEAT (to repeat a memo)
- NEXT (to play the next memo)

- PREVIOUS (to play the previous memo)
- DELETE (to delete a memo)

- DELETE ALL (to delete all memos)

NOTE:

Keep in mind that you have to press the Voice Command  hard-key first and wait for the beep, before speaking the “barge in” commands.

Navigation

To switch to the navigation mode say NAVIGATION.

NOTE:

Not all commands will be available at all times, depending upon the system context.

NOTE:

Read the navigation chapter first, to help you understand the functionality of the available commands.

You may say:

- DESTINATION ENTRY
 - GUIDE ME TO A NAME

- STREET ADDRESS
 - INPUT COUNTRY
 - INPUT CITY NAME
 - INPUT STREET NAME
 - INPUT HOUSE NUMBER
- INTERSECTION
- POINT OF INTEREST
 - FIND NEARBY POI
 - FIND POI NEAR DESTINATION
 - FIND WITHIN A CITY
 - INPUT PHONE NUMBER
 - SELECT POI ICONS
 - FIND POI (Say POI name if known)
- ADVANCED INPUT
 - INPUT ZIP CODE
 - INTERSECTION
 - CANCEL DESTINATION ENTRY
- RECENT DESTINATIONS
- ROUTING OPTIONS
 - GO
 - STOP ROUTING
 - MUTE GUIDANCE
 - REPEAT GUIDANCE
 - CHANGE METHOD
 - FASTER ROUTE
 - SHORTER ROUTE
 - TRAVEL INFO
 - MAP OPTIONS
 - MAP
 - ZOOM IN
 - ZOOM OUT
 - ADDRESS BOOK
 - NEW ENTRY
 - NAVIGATE TO A NAME
 - DELETE
 - ERASE ALL

System Setup


To switch to the system setup say SETUP.

You can say:

- LANGUAGE
 - ENGLISH
 - SPANISH
 - FRENCH
 - GERMAN
 - ITALIAN
 - DUTCH
- VOICE TRAINING
- HELP SCREEN
 - ON
 - OFF
- TUTORIAL

Voice Training

For users experiencing difficulty with the system recognizing their voice commands or numbers, the Uconnect™ Phone system Voice Training feature may be used.

1. Press the Voice Command  hard-key, say "SYSTEM SETUP" and once you are in that menu then say "VOICE TRAINING."

This will train your own voice to the system and will improve recognition.

2. Repeat the words and phrases when prompted by the Uconnect™ Phone. For best results, the Voice Training session should be completed when the vehicle is parked, engine running, all windows closed, and the blower fan switched off.

This procedure may be repeated with a new user. The system will adapt to the last trained voice only.

If the system does not understand the words VOICE TRAINING:

1. Press the MENU hard-key.


2. Press System Setup.

3. Press the Voice Command  hard-key to access the Voice Command menu.

NOTE:

Voice Training does not alter the capability of the system to recognize other people's

voices. It gives the Voice Command system additional information about your voice.

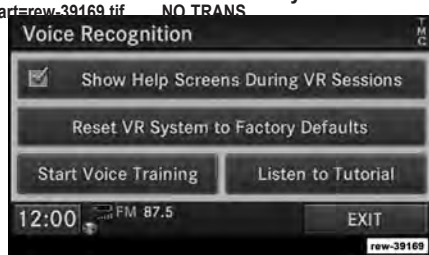

- Touch the Show Help Screens During VR Sessions to show or hide the help screens when using the speech dialog system.
- Touch the Reset VR System to Factory Defaults when you would like to restore the Voice Command system to factory default settings.
- Touch the Start Voice Training soft-key to train the Voice Command system.
- Touch the Listen to Tutorial soft-key to hear instructions on voice training.

NOTE:

With rolled down windows, the system performance may be compromised.


In a convertible vehicle, the system performance may be compromised with roof top down.

The rear view mirror top should be at least 1/2 inch below the overhead console.

Uconnect™ Phone (IF EQUIPPED)

Uconnect™ Phone Overview

Uconnect™ Phone is a voice-activated, hands-free, in-vehicle communications system.

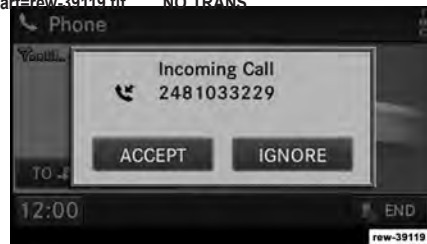

The Uconnect™ Phone system is fully integrated with the vehicle's audio system. The radio display will be used for visual prompts from Uconnect™ Phone such as phone battery status, signal strength, caller ID, and call type. Uconnect™ Phone allows you to dial a phone number with your cellular phone using simple voice commands (e.g., "Call" ... "Jim" ... "Work" or "Dial" ... "248-555-1212"). Your cellular phone's audio is transmitted through your vehicle's audio system; the system will automatically mute your radio when using the Uconnect™ Phone system.

NOTE:

Your phone may not support all available Uconnect™ Phone features.

Phone System Setup – Pairing


1. Press the MENU hard-key on the right side of the radio.



2. Then touch the System Setup soft-key to get to the System Setup menu.




3. Touch the Device Pairing soft-key to access the Bluetooth Devices menu.

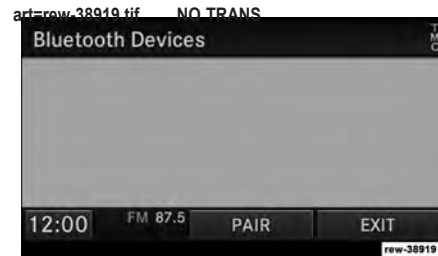


This menu lists all paired Bluetooth devices.

4. Press the PAIR soft-key to start a new pairing.

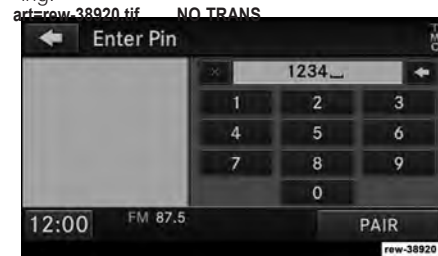


5. You can use the BACK soft-key to switch to the previous menu.

6. Enter any 4 Digit Security PIN and touch the PAIR soft-key again.

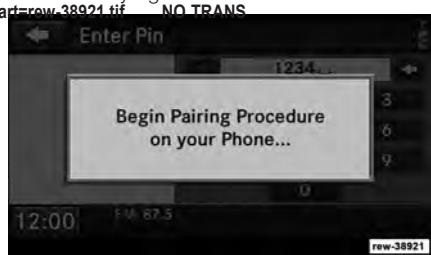

7. The pairing procedure starts. Refer to the user's manual of your Bluetooth phone to complete the procedure on your phone. During this process you need to enter your Security Pin into the phone.

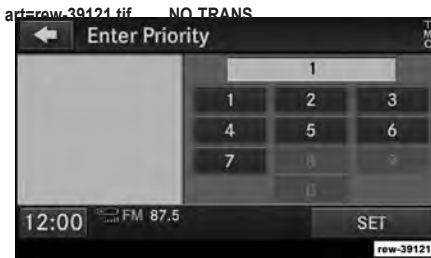

8. You will then be asked to set a priority for the paired phone. If there is more than one paired phone available, the navigation radio will try to connect to the phone with the highest priority setting.



9. You may now change the device name.

NOTE:

Note: You can enter up to 20 characters.

10. Touch the SAVE soft-key to confirm the device name.



11. You may rename the device, set it as active phone, if more than one device is connected, modify the phone priority, or delete the pairing.

12. Touch the phonebook update soft-key to download the phone book into the radio.

NOTE:

If the phone book download feature is supported by your cell phone, only the first 1000

contacts will be automatically copied to the radio. Contacts will be downloaded from your SIM card first and then copied from your phones default phone book. The phone book will automatically download upon initial pairing, after the phone is paired once you may use the download soft-key to update the phone book in the radio.

Compatible Phones

See the Uconnect™ Phone site on www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com for a current list of compatible cellular phones and any limitations your phone might have.

WARNING!

Any voice commanded system should only be used in safe driving conditions and your attention should be kept on the road ahead.

If your cellular phone supports a different profile (e.g., Headset Profile), you may not be able to use any Uconnect™ Phone features. Refer to your cellular service provider or the phone manufacturer for details.

The Uconnect™ Phone system is fully integrated with the vehicle's navigation radio audio system. The volume of the Uconnect™ Phone system can either be adjusted from the radio volume rotary knob, or from the steering wheel radio control, if so equipped.

The radio display will be used for visual prompts from Uconnect™ Phone such as "Incoming Call," duration of the call, or caller ID.

Uconnect™ Phone allows you to transfer calls between the system and your cellular phone as you enter or exit your vehicle, and enables you to mute the system's microphone for private conversations.

The Uconnect™ Phone book enables you to store up to 500 names and four numbers per name. In addition, if equipped and supported by the connected phone, Uconnect™ Phone automatically downloads the connected mobile phone's phone book.

Bluetooth®

This system is driven through your Bluetooth® Hands-Free profile cellular phone. Uconnect™ Phone features Bluetooth® technology – the global standard that enables different elec-

tronic devices to connect to each other without wires or a docking station, so Uconnect™ Phone works no matter where you stow your cellular phone (be it in your purse, pocket, or briefcase), as long as your phone is turned on and has been paired to the vehicle's Uconnect™ Phone system. Uconnect™ Phone allows up to seven cellular phones to be linked to the system. Only one linked (or paired) cellular phone can be used with the system at a time.

See <http://www.bluetooth.org> for more information on Bluetooth®.


Uconnect™ Phone Microphone

The rearview mirror contains the microphone for the system and the radio has the two control hard-keys that will enable you to access the system.

Please remember, Uconnect™ Phone works best when you talk in a normal conversational tone, as if speaking to some one sitting up to eight feet away from you.

Say phone numbers as you normally would with a pause between the sets of digits. Speak aloud names as you would normally.

If the system does not recognize one of your commands, you will be prompted to repeat it.

If you have trouble with recognition, you should press the Voice Command  hard-key, then say Voice Training. This will train your own voice to the system and will improve recognition.

You may always exit the system by saying CANCEL. Other universal commands include HELP and MAIN MENU.


Operations


Voice commands can be used to operate the Uconnect™ Phone system and to navigate through the Uconnect™ Phone menu structure. Voice commands are required after most Uconnect™ Phone prompts. You will be prompted for a specific command and then guided through the available options.

Uconnect™ Phone Hard-key

art=010109482.tif NO TRANS



When you press the Uconnect™ Phone  hard-key you will hear the word Uconnect followed by a BEEP. The beep is your signal to give a command.

 
The first time the Uconnect™ Phone  hard-key is pressed during a drive cycle, the connected phone will be announced. Ex. "Uconnect, Jerry's phone is connected."



NOTE:

If nothing is said within a few seconds, the system will present a list of menu options.

Listen to the choices and give your command after the beep.



Barge In – Overriding Prompts

 The "Voice Command" button can be used when you wish to skip part of a prompt and issue your Voice Command command immediately. For example, if a prompt is playing "Would you like to pair a phone, clear a...", you could press the Voice Command  hard-key and say "Pair a Phone" to select that option without having to listen to the rest of the voice prompts.

Pressing the Voice Command  hard-key while the system is speaking is known as "barging-in". Barging-in must be done with the Voice Command  hard-key.

Help Command

If you need assistance at any prompt or if you want to know what your options are at any prompt, say "Help" following the beep. The Uconnect™ Phone system will play all the options at any prompt if you ask for help.

To activate the Uconnect™ system from idle, simply press the Uconnect™ Phone  hard-key and follow audible prompts for directions. All Uconnect® system sessions begin with a press of the Uconnect™ Phone  hard-key.

Cancel Command

At any prompt, after the beep, you can say "Cancel" and you will be returned to the main menu. However, in a few instances the system will take you back to the previous menu.

Pair (Link) to a Cellular Phone

To begin using your Uconnect™ Phone system, you must pair your compatible Uconnect™ enabled cellular phone (refer to "Introduction" section to learn about the phone type). To complete the pairing process, you will need to reference your cellular phone owner's manual.

The following website may also provide detailed instructions for pairing with the brand of phone that you have:


www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtrucks.com

Phone pairing can either be done using the touch screen (see Getting Started section in this manual) or using voice commands.

Pairing will walk you through a series of steps that will establish a connection between your handset and the Uconnect™ Phone system in the vehicle.

Once set up, you do not need to re-pair your phone with each use. However, every new phone must be paired before it can be used.

The following are general phone to Uconnect™ Phone voice pairing instructions:

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say PHONE PAIRING.

4. When prompted, after the beep, say PAIR A PHONE and follow the audible prompts.

5. You will be asked to say a four-digit pin number which you will later need to enter into your cellular phone. You can enter any four-digit pin number. You will not need to remember this pin number after the initial pairing process.

6. Uconnect™ Phone will then prompt you to begin the cellular phone pairing process on your cellular phone. Before attempting to pair phone, please see your cellular phone's user manual (Bluetooth® section) for instructions on how to complete this step.

7. For identification purposes, you will be prompted to give the Uconnect™ Phone system a name for your cellular phone. Each cellular phone that is paired should be given a unique phone name.


8. You will then be asked to give your cellular phone a priority level between 1 and 7, 1 being the highest priority.

You can pair up to seven cellular phones to your Uconnect™ Phone system. However, at any given time, only one cellular phone can be

in use, connected to your Uconnect™ Phone system. The priority allows the Uconnect™ Phone system to know which cellular phone to use if multiple cellular phones are in the vehicle at the same time.

For example, if priority 3 and priority 5 phones are present in the vehicle, Uconnect™ Phone will use the priority 3 cellular phone when you make a call. You can select to use a lower priority cellular phone at any time (refer to "Advanced Phone Connectivity" section).

Dial by Saying a Number


1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say DIAL.
4. When prompted, after the beep, say the number you want to call.

For example, you can say "234-567-8901." The phone number that you enter must be of valid length and combination. Based on the country in which the vehicle is purchased, Uconnect™ Phone limits the user from dialing invalid com-

bination of numbers. For example, in USA, 234-457-890 is nine digits long, which is not a valid USA phone number - the closest valid phone number has ten digits.

5. Uconnect™ Phone will ask you to confirm the phone number and then dial. The number will appear in the display of the navigation radio.

Call by Saying a Name

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say CALL.
4. When prompted, after the beep, say the name of the person you want call.

For example, you can say "John Doe," where John Doe is a previously stored name entry in the Uconnect™ Phone book. Refer to section "Add Names to Phone Book," to learn how to store a name in the phone book.

5. Uconnect™ Phone will ask you to confirm the name and then dial the corresponding phone number, which will appear in the display of the navigation radio.

Phone Book


Accessing the phone book can either be done using the touch screen (see Address Book section in this manual) or using voice commands.

The Uconnect™ PHONE BOOK accesses the same database as the navigation radios ADDRESS BOOK.

Automated Phone Book Download (if supported by phone)

If a connected phone supports this function, the phone book of the phone is automatically copied to the radio's address book.

As soon as the phone is connected via Bluetooth®, the download of the phone book starts. Maximum of 1000 entries per phone will be downloaded.

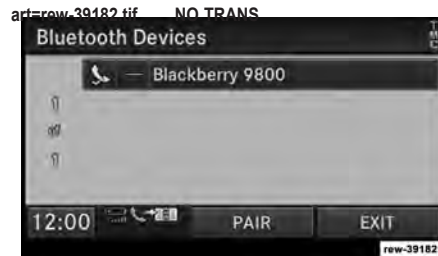

The download is indicated by the download icon in the status bar of the radio.

The download phone book will be updated every time the phone connects to the radio. Only the phone book of the connected mobile phone is accessible.

NOTE:

Only the entries of the phone's internal memory, and not the numbers saved on i.e. SIM card are copied.

NOTE:

Call logs e.g. incoming calls, outgoing call, missed calls etc. are not supported.



Once the download has successfully finished, the finished download icon will be displayed in the status bar of the radio, and an additional folder with the name of the phone is displayed in the address book (Refer to the address book in the navigation section of this manual for more information on address book folders).

All entries in the phone book folders are available to the Uconnect™ Phone system. You may use the previously described Call by Saying a Name function to call the contacts in the phone folder.

NOTE:

If the additional folder is not available after approximately two minutes, the download was not successful and may not be supported by the connected mobile phone.

It is possible to copy phone book entries from the default folder into the RHW address book, but the downloaded phone book entries cannot be edited or deleted.

1. Press the MENU hard-key.
2. Touch the My Files soft-key.
3. Select My Address Book.
4. Select the folder with your phone's name.
5. Select the desired contact.



6. Touch the copy to folder soft-key in the status line.
7. Select the desired folder from the list.

The contact information from the phone book folder is now copied to the selected folder in the RHW address book.

NOTE:

To be able to select the contact while the vehicle is in motion, the entry has to be linked to the In-Motion Folder.

Add Names to Phone Book

Adding names to phone book is recommended when the vehicle is not in motion.

1. Press the Uconnect™ Phone  hard-key to begin.

2. Wait for the beep.

3. Say PHONE BOOK.

4. When prompted, after the beep, say NEW ENTRY.

Use of long names helps the Voice Command and is recommended. For example, say "Robert Smith" or "Robert" instead of "Bob."

5. When prompted, enter the number designation (e.g.: "Home," "Work," "Mobile," or "Pager"). This will allow you to store multiple numbers for each phone book entry, if desired.

6. When prompted, confirm the phone number for the phone book entry that you are adding.

7. After you are finished adding an entry into the phone book, you will be given the opportunity to add more phone numbers to the current entry or to return to the main menu.

The navigation radio will allow you to enter up to 500 names in the phone book with each name having addresses, and up to four associated phone numbers, and designations. In addition,

up to 1000 entries are automatically downloaded from the connected mobile phone's phone book, if supported.

Voice Tags

In step 4 of the Add Names to Phone book section, the navigation radio is recording your voice. The recording is called Voice Tag. You may edit, delete, or listen to the voice tag in the contact information menu (refer to the Address Book section in this manual for more details).

NOTE:

Only voice tags are saved in regards to the currently selected system language setting. If you switch the language, your voice tag may not be available.

Edit Phone Book Entries

Editing names in the phone book is recommended when the vehicle is not in motion.

1. Press the Uconnect™ Phone  hard-key to begin.

2. Wait for the beep.

3. Say PHONE BOOK.

4. When prompted, after the beep, say EDIT ENTRY.

5. You will then be asked for the name of the phone book entry that you wish to edit.


6. Next, choose the number designation (home, work, mobile, or pager) that you wish to edit.

7. When prompted, recite the new phone number for the phone book entry that you are editing.

After you are finished editing an entry in the phone book, you will be given the opportunities to edit another entry in the phone book, call the number you just edited, or return to the main menu.


"Phone book Edit" can be used to add another phone number to a name entry that already exists in the phone book. For example, the entry John Doe may have a mobile and a home number, but you can add John Doe's work number later using the "Phone book Edit" feature.

Delete Phone Book Entry

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say PHONE BOOK.
4. When prompted, after the beep, say DELETE ENTRY.

5. After you enter the Phone Book Delete menu, you will then be asked for the name of the entry that you wish to delete.


You can either say the name of a phone book entry that you wish to delete or you can say "List Names" to hear a list of the entries in the phone book from which you choose.

6. To select one of the entries from the list, press the "Voice Command"  hard-key while the Uconnect™ Phone is speaking the desired entry and say DELETE.

After you enter the name, Uconnect™ Phone will ask you which designation you wish to delete: home, work, mobile, pager or all.

7. Say the designation you wish to delete.


Delete/Erase "All" Phone Book Entries

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say PHONE BOOK.
4. When prompted, after the beep, say ERASE ALL.

 
5. Uconnect™ Phone will ask you to verify that you wish to delete all the entries from the phone book.

After confirmation, the phone book entries will be deleted.

List All Phone Book Names

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say PHONE BOOK.
4. When prompted, after the beep, say LIST NAMES.

Uconnect™ Phone will play the names of the phone book entries.

5. To call one of the names in the list, press the Voice Command  hard-key during the playing of the desired name and say CALL.

NOTE:

You can also exercise "Edit" or "Delete" options at this point.

6. Uconnect™ Phone will then prompt you as to the number designation you wish to call.
7. The selected number will be dialed.

Phone Call Features

The following features can be accessed through Uconnect™ Phone if the feature(s) are available on your cellular service plan. For example, if your cellular service plan provides three-way calling, this feature can be accessed through Uconnect™ Phone. Check with your cellular service provider for the features that you have.

Answer or Reject an Incoming Call:

When no Call Currently is in Progress: When you receive a call on your cellular phone, Uconnect™ Phone will interrupt the vehicle audio system, and will ask if you would like to answer the call.

1. Press the Uconnect™ Phone button to accept the call.
2. To reject the call, press and hold the Uconnect™ Phone button until you hear a single beep indicating that the incoming call was rejected.

When another Call is in Progress: If a call is currently in progress and you have another incoming call, you will hear the same network tones for call waiting that you normally hear when using your cell phone.


Press the Uconnect™ Phone button to place the current call on hold and answer the incoming call.

NOTE:

The Uconnect™ Phone system compatible phones in market today do not support rejecting an incoming call when another call is in progress. Therefore, the user can only either answer an incoming call or ignore it.

Make a Second Call

While Another Call is in Progress:

1. To make a second call while you are currently in a call, press the Voice Command  hard-key.
2. Say DIAL or CALL followed by the phone number or phone book entry you wish to call.
3. The first call will be on hold while the second call is in progress. To go back to the first call, refer to section "Toggling Between Calls."
4. To combine two calls, refer to section "Conference Call."

Place / Retrieve a Call from Hold

1. To put a call on hold, press the Uconnect™ Phone button until you hear a single beep which will indicate that the call has been placed on hold.
2. To bring the call back from hold, press and hold the Uconnect™ Phone button until you hear a single beep.

Toggle between Calls


If two calls are in progress (one active and one on hold), press the Uconnect™ Phone button until you hear a single beep indicating that the

active and hold status of the two calls have switched. Only one call can be placed on hold at one time.

Conference Call

When two calls are in progress (one active and one on hold), press and hold the Uconnect™ Phone button until you hear a double beep indicating that the two calls have been joined into one conference call.

Three-Way Call

1. To initiate three-way calling, press the Voice Command  hard-key while a call is in progress.
2. Make a second phone call as described in section "Making a Second Call while Current Call in Progress."
3. After the second call has been established, press and hold the Uconnect™ Phone button until you hear a double beep indicating that the two calls have been joined into one conference call.

Call Termination

1. To end a call in progress, momentarily press the Uconnect™ Phone button.

Only the active call/s will be terminated and if there is a call on hold, it will become the new active call.

2. If the active call is terminated by the far end, a call on hold may not become active automatically. This is cell phone dependent.

3. To bring the call back from hold, press and hold the Uconnect™ Phone button until you hear a single beep.

Redial

1. Press the Uconnect™ Phone  hard-key to begin.

2. Wait for the beep.

3. Say REDIAL.

4. Uconnect™ Phone will call the last number that was dialed on your cellular phone.

NOTE:

This may not be the last number dialed from the Uconnect™ Phone system.

Call Continuation

Call continuation is progression of a phone call on Uconnect™ Phone after the vehicle ignition key has been switched to OFF. Call continuation functionality available on the vehicle can be any one of three types:

1. After the ignition key is switched OFF, a call can continue on the Uconnect™ Phone system either until the call ends or until the vehicle battery condition dictates cessation of the call on the Uconnect™ Phone system and transfer of the call to the mobile phone.

2. After the ignition key is switched to OFF, a call can continue on Uconnect™ Phone for certain duration, after which the call is automatically transferred from Uconnect™ Phone to the mobile phone.

3. An active call is automatically transferred to the mobile phone after ignition key is switched to OFF.

Emergency Assistance

If you are in an emergency and the mobile phone is reachable:

1. Pick up the phone and manually dial the emergency number for your area.

2. If the phone is not reachable and the Uconnect™ Phone system is operational, you may reach the emergency number as follows:

3. Press the Uconnect™ Phone  hard-key to begin.

4. Wait for the beep.

5. Say EMERGENCY.

Uconnect™ Phone will instruct the paired cellular phone to call the emergency number.

NOTE:

The emergency number dialed is based on the country where the vehicle is purchased. The number dialed may not be applicable with the available cellular service and area.

NOTE:

To change the emergency number to a number of your choice, say Uconnect SETUP, and then EMERGENCY.

NOTE:


Uconnect™ Phone does slightly lower your chances of successfully making a phone call as to that for the cell phone directly.

WARNING!

Your phone must be turned on and paired to the Uconnect™ Phone system to allow use of this vehicle feature in emergency situations when the cell phone has network coverage and stays paired to the Uconnect™ Phone system.

Breakdown Service

If you need Breakdown Service:

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say BREAKDOWN SERVICE.

NOTE:

The Breakdown Service number dialed is based on the Country where the vehicle is purchased.

Please refer to the 24-Hour Breakdown Service coverage details in the Chrysler Group LLC 24-Hour Breakdown Service Program Guide.

Paging

To learn how to page, refer to section "Working with Automated Systems." Paging works properly except for pagers of certain companies which timeout a little too soon to work properly with Uconnect™ Phone.


Voice Mail Calling

To learn how to access your voice mail, refer to section "Working with Automated Systems."

Working with Automated Systems

This method is designed to be used in instances where one generally has to press numbers on the cellular phone keypad while navigating through an automated telephony system.

You can use your Uconnect™ Phone system to access a voicemail system or an automated service, such as, paging service or automated customer service. Some services require immediate response selection, in some instances, that may be too quick for use of the Uconnect™ Phone system.

When calling a number with your Uconnect™ Phone that normally requires you to enter in a touch-tone sequence on your cellular phone keypad, you can push the Voice Command  hard-key and say the sequence you wish to enter followed by the word "Send."


For example, if required to enter your pin number followed with a pound 3 7 4 6 #:

1. Press the Voice Command button
2. Say 3 7 4 6 # SEND.

Saying a number, or sequence of numbers, followed by SEND is also to be used to navigate through an automated customer service center menu structure and to leave a number on a pager.

Turning Confirmation Prompts On/Off

Turning confirmation prompts off will stop the system from confirming your choices (e.g. Uconnect™ Phone will not repeat a phone number before you dial it).

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.

3. Say Uconnect SETUP.
4. After the "Ready" prompt and the following beep, say CONFIRMATION PROMPTS.
5. Uconnect™ Phone will play the current confirmation prompt status and you will be given the choice to change it.

Phone and Network Status Indicators

If available on the radio and/or on a premium display such as the instrument panel cluster, and supported by your cell phone, Uconnect™ Phone will provide notification to inform you of your phone and network status when you are attempting to make a phone call using Uconnect™ Phone. The status is given for roaming, network signal strength, phone battery strength, etc.

Dial Using the Cellular Phone Keypad

You can dial a phone number with your cellular phone keypad and still use Uconnect™ Phone (while dialing via the cell phone keypad, the user must exercise caution and take precautionary safety measures). By dialing a number with your paired Bluetooth® cellular phone, the audio will be played through your vehicle's

audio system. Uconnect™ Phone will work the same as if you dial the number using Voice Command.


NOTE:

Certain brands of mobile phones do not send the dial ring to the Uconnect™ Phone system to play it on the vehicle audio system, so you will not hear it. Under this situation, after successfully dialing a number, the user may feel that the call did not go through even though the call is in progress. Once your call is answered, you will hear the audio.


Mute/Un-mute (Mute off)

When you mute Uconnect™ Phone, you will still be able to hear the conversation coming from the other party, but the other party will not be able to hear you.

In order to mute Uconnect™ Phone:

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say MUTE or MUTE ON.

In order to un-mute Uconnect™ Phone:

 
1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say UNMUTE or MUTE OFF.

Advanced Phone Connectivity

Transfer Call to Cellular Phone

The Uconnect® system allows ongoing calls to be transferred to your cellular phone without terminating the call.

To transfer an ongoing call from the Uconnect™ Phone system to your Uconnect™ paired cellular phone:

1. Press the Voice Command  hard-key (barge in).
2. Say TRANSFER CALL


The navigation radio starts playing the last used audio source, and you can continue your call on the cellphone.

Transfer Call to Uconnect™ Phone

If you have an ongoing call on a cellphone which was paired with the Uconnect™ Phone

system before, and it's call was transferred to the cellphone, Uconnect™ Phone allows ongoing calls to be transferred back to the Uconnect™ Phone system without terminating the call.

To transfer an ongoing call from your Uconnect™ paired cellphone to the Uconnect™ Phone system.


1. Press the Voice Command  hard-key.
2. Say TRANSFER CALL


The navigation radio transfers the call immediately, and you can continue your call on the Uconnect™ Phone system.

Automatic Transfer Call to Uconnect® System

If you have an ongoing call on a cellphone which was paired with Uconnect™ Phone before, and the navigation radio is off, turn on the ignition and allow Uconnect™ Phone to automatically transfer the call. This may take a few seconds.

List All Paired Cellular Phone Names

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say Uconnect SETUP.
4. After the following beep, say PHONE PAIRING.
5. After the following beep, say LIST PAIRED PHONES.
6. Uconnect™ Phone will play the phone names of all paired cellular phones in order from the highest to the lowest priority.


To "select" or "delete" a paired phone being announced, press the Voice Command  hard-key and say SELECT or DELETE. Also, see the next two sections for alternative ways of doing this.

Select another Cellular Phone


You may select phones via touch screen in the Paired Devices menu. (Refer to the Getting Started section in this manual for more details).

This feature allows you to select and start using another phone with the Uconnect™ Phone system.

The phone must have been previously paired to the Uconnect™ Phone system that you want to use it with.

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say Uconnect SETUP.
4. After the following beep, say SELECT PHONE.

The phone names along with priority numbers will be announced.

5. When prompted say the priority number of the cellular phone you wish to select.
6. You can also press the Voice Command  hard-key anytime while the list is being played.
7. Say the priority number of the phone that you wish to select.

The selected phone will be used for the next phone call. If the selected phone is not avail-


able, Uconnect™ Phone will return to using the highest priority phone present in or near (approximately within 30 feet) the vehicle.

Delete Uconnect™ Phone Paired Cellular Phones

You may delete phones via touch screen in the Paired Devices menu. (Refer to the Getting Started section in this manual for more details).


This feature allows you to delete a phone from the Uconnect™ Phone system.

The phone must have been previously paired to the Uconnect™ Phone system that you want to delete it from.

1. Press the Uconnect™ Phone  hard-key to begin.
2. Wait for the beep.
3. Say Uconnect SETUP.
4. After the following beep, say DELETE PHONE.

The phone names along with priority numbers will be announced.

5. When prompted say the priority number of the cellular phone you wish to delete.

6. You can also press the Voice Command  hard-key anytime while the list is being played.

7. Say the priority number of the phone that you wish to delete.

Things You Should Know About Voice Command

- Always wait for the beep before speaking
- Speak normally, without pausing, just as you would speak to a person sitting approximately eight feet away from you.
- Make sure that no one other than you is speaking during a Voice Command period.
- Performance is maximized under:
 - low-to-medium blower setting,
 - low-to-medium vehicle speed,
 - low road noise,
 - smooth road surface,
 - fully closed windows, and
 - dry weather conditions.

- Even though the system is designed for users speaking in different accents, the system may not always work for some.
- When navigating through an automated system, such as, voice mail, or when sending a page, at the end of speaking the digit string, make sure to say SEND.
- Storing names in phone book when vehicle is not in motion is recommended.
- It is not recommended to store similar sounding names in the Uconnect™ Phone book.
- Uconnect™ Phone book name tag recognition rate is optimized for the person who stored the name in the phone book.
- You may say “O” (letter “O”) for “0” (zero). “800” may be spoken EIGHT OH OH or EIGHT ZERO ZERO.
- Even though international dialing for most number combinations is supported, some shortcut dialing number combinations may not be supported.

Far End Audio Performance

- Audio quality is maximized under
 - low-to-medium blower setting,
 - low-to-medium vehicle speed,
 - low road noise,
 - smooth road surface,
 - fully closed windows, and
 - dry weather conditions.
- operation from driver seat.
- Performance, such as audio clarity, echo, and loudness to a large degree, relies on the phone and network, and not the Uconnect™ Phone system.
- Echo at the far end can sometime be reduced by lowering the in-vehicle audio volume.

Bluetooth® Communication Link

Cellular phones have been found to occasionally loose connection to the Uconnect™ Phone system. When this happens, the connection can generally be re-established by switching

the phone off/on. Your cell phone is recommended to remain in Bluetooth® "on" mode.

Power-Up

After switching the ignition key from OFF to either the ON or ACC position, or after a language change reset, you must wait a few seconds prior to using the system.

Voice Tree - Main Menu

To initiate Uconnect™ Phone, press the Uconnect™ Phone  hard-key.

In this menu you may say the following commands:

- CALL
 - NAME
 - NUMBER
 - EMERGENCY
 - BREAKDOWN SERVICE
- DIAL
 - NAME
 - NUMBER
 - EMERGENCY

– BREAKDOWN SERVICE

- PHONE BOOK
 - NEW ENTRY
 - EDIT ENTRY
 - LIST NAMES
 - DELETE
 - ERASE ALL

- REDIAL
- EMERGENCY
- BREAKDOWN SERVICE
- Uconnect SETUP

Voice Tree - Setup Menu

To initiate Uconnect™ Phone, press Uconnect™ Phone  hard-key. After the system beep, say Uconnect SETUP.

In this menu you may say the following commands:

- PHONE PAIRING
 - PAIR A PHONE
 - DELETE PHONE

- LIST PAIRED PHONES
- CONFIRMATION PROMPTS
 - ON
 - OFF
- SELECT PHONE
- EMERGENCY
- BREAKDOWN SERVICE

Uconnect™ GPS Navigation

General Notes

System Overview

Your navigation system receives GPS signals from up to 16 satellites to display the position of your vehicle. Map and database information is supplied through a hard disk drive. A gyroscope and the vehicles speed sensor enable the system to display the present vehicle position even in locations where GPS signals may be blocked.

When you input a destination, the navigation system uses map data from the hard disk drive to quickly calculate a route. As you drive along

your chosen route, you are guided with pictorial displays and voice prompts.

Navigation Software

This navigation radio requires digital data from a Navigation Database. The data in the Navigation Database is licensed from Navigation Technologies®. Not all roads are digitized.

Navigation Database

The navigation unit is provided with a navigation database on the internal hard drive. The database contains data for the ALBANIA, ANDORRA, AUSTRIA, BELGIUM, BOZANIA+HERZEG., BULGARIA, CROATIA, CZECH REPUBLIC, DENMARK, ESTONIA, FINLAND, FRANCE, GERMANY, GIBRALTAR, GREAT BRITAIN, GREECE, HUNGARY, IRELAND, ITALY, LATVIA, LIECHTENSTEIN, LITHUANIA, LUXEMBOURG, MACEDONIA, MONACO, NETHERLANDS, NORWAY, POLAND, PORTUGAL, ROMANIA, SAN MARINO, SERBIA+MONTEN., SLOVAKIA, SLOVENIA, SPAIN, SWEDEN, SWITZERLAND, THE VATICAN.

WARNING!

Drive with caution, paying attention to the road, obeying all traffic laws!

System Limitations

The map data that is included with your system is the most recent available at the time of production. Because of changes in streets, neighborhoods, and business locations, there may be situations where the navigation system is not able to route you to your desired destination by the entry method you have chosen. If this occurs, choose another entry method.

Selecting Navigation Mode Press the NAV hard-key to toggle between Navigation MAIN MENU and Navigation MAP.

Navigation Main Menu

Selecting NAV Main Menu

1. If not already done, press the ACCEPT soft-key to agree to the Navigation Disclaimer.
2. Press the NAV hard-key to switch to the navigation menu and toggle between Map Viewer and Navigation Main Menu.



- New Destination

Touch this soft-key when you want to program a destination. (See the Destination Input section for details.)

- Recent Places

Touch this soft-key when you want to route to a destination you programmed before. (See the Destination Input section for details.)

- My Trips

Touch this soft-key when you want to program or save trips with multiple destinations. (See the Navigation Default Settings section for details.)

- Guide Me Home

Touch this soft-key when you want to route to your home destination. (See the Guide Me Home section for details.)

- Point of Interest

Touch this soft-key when you want to route to a point of interest. (See the POI section for details.)

- Favourite POI's

Touch this soft-key when you want to enter a point of interest from a preselected favourite POI category list, which is also available while the vehicle is in motion. (See the Favourite POI section for details.)

- Emergency Info

Touch this soft-key when you want to route to an emergency facility near to the current location of your vehicle. You may list fire stations, police stations, hospitals and Chrysler dealerships. (See the Emergency Info section for details.)

- Where Am I Now?

Touch this soft-key when you want to find out where you are, and when you need to search for available points of interest near to your current vehicle position. (See the Where Am I Now section for details.)

- MAP

Touch this soft-key when you want to display a map of your current position. (See the Map Viewer section for details.)

Inputting Information

Names (e.g., city names or street names) are entered with a smart speller.



It is possible to spell only names contained in the database. Unavailable letters are in a

lighter color and are not selectable. If the desired street name is shown completely touch the CONTINUE soft-key to proceed. If there are only a few choices left, you may touch the LIST soft-key to display a list of street names.

IMPORTANT NOTE: Use the space symbol as a space between words (e.g., FRANKFURT_AM_MAIN).

NOTE:

Touch the DEL soft-key to delete a misspelled letter or press the NAV hard-key to go back to the navigation main menu.

NOTE:

Touch the 0-9 soft-key to access numbers, and touch the MORE... soft-key to access special characters, if needed.

WARNING!

For your own safety and the safety of others, it is not possible to use the speller while the vehicle is in motion.

Destination Input by POI

The Point of Interest database allows you to select a destination from a list of locations and public places, or points of interest (POI).

Press the NAV hard-key to access the NAV - Main Menu




A point of interest (POI) can be found in different ways. Close to the current vehicle position (POI Local Area), close to the currently active destination (Nearby Destination), within the map database (POI in Map Area), by POI name, by phone number, and within a city.

POI Local Area

For this example we will continue by entering a Gas Station close to the vehicle location.



1. While you are in the NAV - Main Menu touch the Where AM I Now? soft-key. The navigation radio displays your current location on a map, and the location information (e.g. latitude, longitude, elevation, road name, city, if available).
2. Touch the NEARBY POI soft-key.

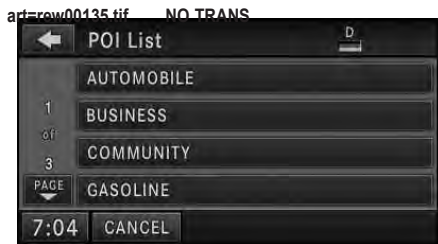

NOTE:

Nearest POI can also be found by simply selecting “Point of Interest” instead of the “Where Am I Now?” soft key.

Select a POI category. For this example select Gasoline.



NOTE:

Some categories may be disabled while the vehicle is in motion.

The POI list shows the POI address, the distance to the POI (direct distance - as the crow flies), and a directional arrow.



3. Select one of the Gas Stations from the list and confirm your route by touching the GO soft-key in the confirmation screen.

POI Nearby Destination

For this example we will continue by entering a gas station close to the currently entered destination.



1. While the system is in guidance mode, touch the OPTIONS soft-key.



2. Touch the Destination Info soft-key to select the destination info menu.



3. Touch the Find POI Near destination soft-key and select a category, pick a gas station from the list and confirm the destination. This is the same process as described in the POI Local Area section.

POI in Map Area

To select a POI from anywhere on the navigation database map area, select Point of Interest in the Destination Entry screen.



You can find POI's by the POI name, by type, by the phone number, or by entering a city name.

POI by Type

To select a POI by type, select Point of Interest in the Destination Entry screen, and then touch the Select Type from List soft-key.

Touch the soft-key with the desired category to display a list of Points of Interest.

NOTE:

The length of the lists are limited to 5 pages while the vehicle is in motion.

Favourite POI Categories


NOTE:

For your safety, the number of displayed POI's may be limited in certain screens, while the vehicle is in motion.

For easier access to POI's while the vehicle is in motion, you may define your own POI category list.



1. Touch the Favourite POI's soft-key in the NAV- Main Menu.

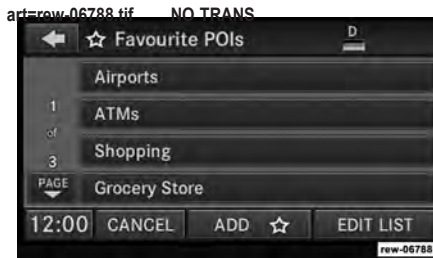

The Favourite POI's screen shows the available categories.

2. You may select ADD to add more categories.

You may select EDIT LIST to either clear all, clear selected, or move POI categories in the list.



3. Select CLEAR ALL to delete all categories from the list.

Edit a category soft-key by touching the soft-key with the category you would like to edit. If you select Clear in the next screen the soft-key will be removed from the list. If you select Move, you may change the position of the soft-key in the list.

Destination Input

Press the NAV hard-key to access the Nav - Main Menu.



Touch the Destination Entry soft-key to get to the Destination Entry screen.

NOTE:

Once you start the destination input you can touch the CANCEL soft-key to cancel the destination input process.



At this point, you need to decide what type of destination you would like to enter.

Use **Favourite Places** and **Address Book** to access previously saved addresses or locations. Review the Address Book section in this manual to learn more about the address book.

Point on Map allows quick and easy selection of a destination directly from the Map screen. By selecting a street segment or icon, you can quickly enter a destination without the need to input the city name or street.

Use **Saved Trail** to access previously saved trails. Review the Trails section in this manual to learn more about saving a trail.

A **Street Address** or a street name with house number.

NOTE:

If you select a street without knowing a house number or the house number cannot be entered, the navigation radio will guide you to the closest end location on the entered street.

Intersection allows you to enter two street names.

Use **City Center** if you want directions to a particular city. The navigation system will calculate a route with the destination at the center of the city.

Geo Coordinates

A geo coordinate is a coordinate used in geography.

You can determine a geo coordinate with the help of a handheld GPS receiver, a map, or the navigation system.

Destination Input by Street Address

For this example we will continue by entering the following address 14 AVENUE DES CHAMPS ELYSEES, PARIS, FRANCE.

1. Touch the Street Address soft-key to get to the Street Address menu.



This menu shows the default country and settings.


Changing Country

If your destination is not in the displayed country touch the soft-key with the name of the currently selected country in this menu (COUNTRY soft-key).

NOTE:

- A pop-up will appear asking whether or not you would like the new state, province, or country to be the default.
- It is recommended to change the default country, if you plan to enter more than 1 destination in the destination area (e.g. vacation, business travel, etc.).

1. For example touch the GERMANY soft-key.
2. Change the country to FRANCE.

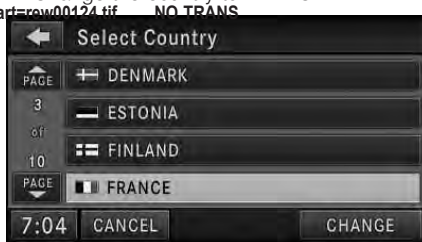

3. Select a country from the list. Once selected, a CHANGE soft-key will appear in the lower right corner of the screen.
4. Touch CHANGE to confirm your selection.


5. Once the country is set to FRANCE, touch the Input Street soft-key in the Street Address screen. This will allow you to input the street name in France.



6. Enter the letters CHAMPS [SPACE] ELYSEES in the speller. In the upper right corner, the number of possible roads decreases.
7. Touch the LIST soft-key to display a list of possible street names.



8. Select CHAMPS ELYSEES, AVENUE DES from the list to get to the Input Number menu.

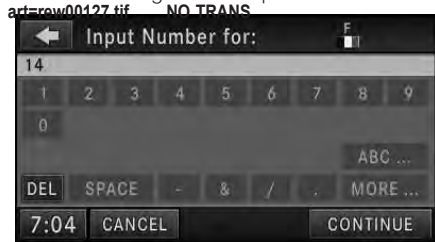

9. The speller displays only numbers contained in the digital map.

10. In this example we have entered 14 as the house number.

11. Touch the CONTINUE soft-key to get to the Confirm Route screen.

If you touch the CONTINUE soft-key without entering a number, the navigation system will guide you to a section of the entered street which is the closest to your current location.



In the Confirm Route screen the navigation radio displays the complete address, a map of the destination area, and the current routing method for you to verify.

NOTE:


- If the displayed address is not the desired address, you can either touch the **BACK** soft-key in the upper left corner of the screen to step back to the previous screens, press the **NAV** hard-key to start over from the **NAV - Main Menu**, or touch **CANCEL** to cancel the destination input.
- Pressing the **Option** soft key while in the Confirm Screen will also allow you to select alternative routes. You will have an option to choose **1 of 2 quickest routes or 1 of 2 shortest routes (depending on the route method currently selected)**.

12. Touch the **GO** soft-key to activate the route guidance. To read more about the **OPTIONS** soft-key in this menu, see the **NAV Options** section of this manual.

Destination Input by Intersection

For this example we will continue by entering the following intersection: Celsiusstraße and Fahrenheitstraße, in Berlin, Germany.

1. From the Destination Entry menu touch the **Intersection** soft-key to get to the **Find Intersection** menu.

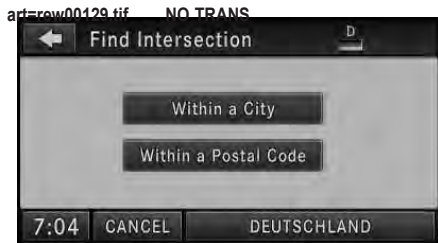

NOTE:

If Germany is not your default country refer to the change country section to learn how to change the country.


It is possible to select the intersection within a city, or a ZIP code area.

2. For this example touch the Within A City soft-key.



3. Touch the Enter Name of Street 1 soft-key to enter the first street.

4. Enter "CELSIUSSTRASSE" into the speller and confirm the name.

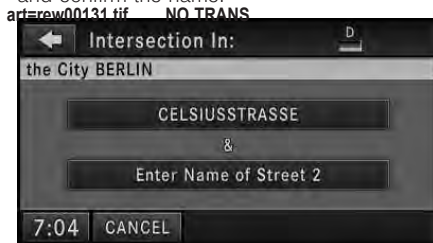

5. Touch the Enter Name of Street 2 soft-key to enter the second street. The navigation radio will display a list of possible cross streets of the initially entered street.



6. Select "FAHRENHEITSTRASSE" for this example.



If you wish to change your mind and prefer to select a different cross street, you can touch the soft-key with the cross street name to select another cross street.

7. Touch CONTINUE to confirm the intersection and touch GO in the Confirm Route To screen to start the route guidance.

Destination Input by Geo Coordinate

Touch the Geo Coordinate soft-key in the Destination Entry screen.



To enter a Geo Coordinate as a destination, simply touch the Lat: soft-key and enter the latitude, then touch the Long: soft-key to enter the longitude.

Destination Input by Favourite Places

Touch the Favourite Places soft-key in the Destination Entry Menu.

NOTE:

The Favourite Places soft-key is disabled if the favorite places memory is empty. To fill the favourite places memory, you must save a location as a Favourite Place from the Where Am I Now? Menu or by saving current destination in the NAV options screen in after a destination has already been entered.



Touch the soft-key with the name of the desired destination and confirm the route with GO to start the route guidance.

Touch the EDIT LIST soft-key to delete either all or single entries off the recent destination list. To exit the Edit Recent Destinations menu touch the EXIT soft-key. To go back to the Main Menu touch the back soft-key in the upper left corner of the screen.

Destination Input by Address Book

Touch the Address Book soft-key in the Destination Entry screen.



Select a folder or touch SEARCH to search for the desired contact to enter the destination (see the Address Book section in this manual for more information).

Destination Input by Point on Map

This feature allows quick and easy selection of a destination directly from the map screen. By selecting a street segment or POI icon, you can quickly enter a destination without the need to input the city name or street.

1. Touch the MAP soft-key in the NAV - Main Menu to access the map.



After touching the map on the screen, a set of arrows appears.

2. Use the arrows to navigate the center of the cross over the desired destination.
3. Either touch the SELECT soft-key to select the destination, or touch the POI'S soft-key to see a list of POI's in the selected area.

Destination Input by Saved Trails

Touch the Saved Trails soft-key in the Destination Entry menu.

NOTE:


The Saved Trails soft-key is disabled if the trails memory is empty. To fill the trails memory, you must save a trail.



See the Record New Trail section in this manual for more information.

Destination Input by Recent Places

Touch the Recent Places soft-key in the NAV Main Menu.

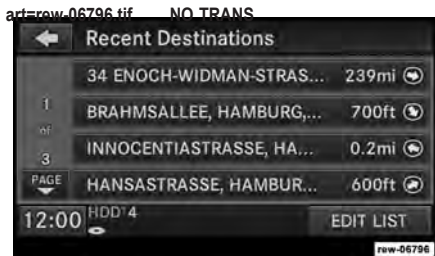


Touch the soft-key with the name of the desired destination and confirm the route with GO to start the route guidance.

Touch the EDIT LIST soft-key to delete either all or single entries off the recent destination list. To exit the Edit Recent Destinations menu touch the EXIT soft-key. To go back to the Main Menu touch the back soft-key in the upper left corner of the screen.

Destination Input by Voice

Read the section Voice Command for details.

1. Press the Voice Command  hard-key. Wait for the beep and say NAVIGATION.

The navigation radio will respond, saying: "Navigation." The navigation radio has switched to the navigation mode and is now ready to receive navigation-related voice commands. For this example, the default country is set to the US and the default country is set to Germany.

2. Press the Voice Command  hard-key, wait for the beep. Say INPUT STREET.

The navigation radio will respond: "for Germany. Please say the name of the street."

3. Wait for the beep and say, HAUPTSTRASSE (example).

The radio will respond: "Do you mean HAUPTSTRASSE?"

4. Wait for the beep and say YES.

The radio will respond: "Line one. Now, do you want to enter a city?"

5. Wait for the beep and say YES.

The radio will respond: "For HAUPTSTRASSE. The only city that could be found is BERLIN. Do you want to use this city?"

6. Wait for the beep and say, YES.


The radio will respond: "City name has been accepted. Now, do you want to enter a house number?"

7. Wait for the beep and say NO.

The radio will respond: "Now, do you want to start route guidance?"

8. Wait for the beep and say YES.

The radio will start the route guidance to Hauptstrasse, in Berlin, Germany.

While you drive towards the destination, you may press the Voice Command  hard-key, wait for the beep and say TRAVEL INFO.

The radio will respond with your estimated time of arrival and the distance to the entered destination.

Guide Me Home

Touch the Guide Me Home soft-key in the NAV - Main Menu, and touch the GO soft-key to confirm the route to the home address saved in the address book.

See the Address Book section in this manual for information on how to save, clear, or edit the home address.

Where Am I Now?

The Where Am I Now? menu displays location information for the current vehicle position.

Touch the NEARBY POI soft-key to search for a local POI.

Touch the SAVE LOCATION soft-key to save the current location in the Saved Locations memory.

api-rhw00149.tif NO TRANS



Save the current location in the Favourite Places folder of the Saved Locations memory, in the Address Book, in the My Trips memory, or as the home address.

Emergency Info

Use this function to locate Emergency Points of Interest, e.g. Hospitals/Medical Facilities, or Dealerships.

1. Touch the Emergency Information soft-key in the NAV - Main Menu.
2. Select Hospitals or Dealerships.
3. Read and confirm the disclaimer.

WARNING!

The distances displayed in the Emergency facility lists are aerial distances. In some cases the road distance to the facility may vary. Actual road distances will be displayed after a specific destination is selected and the route planning is completed. In unverified areas the route selected may not be the quickest route to your destination!

The distances displayed in the Emergency facility lists are air distances (as the crow flies). In some cases the road distance to the facility may vary (e.g. across a river or mountain).

Record New Trail

The trail function is a feature that allows you to log and save a trail in non-digitized areas.

NOTE:

It is recommended to start the trail into a non-digitized area from a digitized road.


1. Touch the MAP soft-key in the NAV Main Menu to access the map.

NOTE:

The Start/Stop Trail button is in the lower right corner of the screen.

NOTE:

The Start/Stop Trail button is not visible during intersection zoom and when the map view settings are set to Turn by Turn.

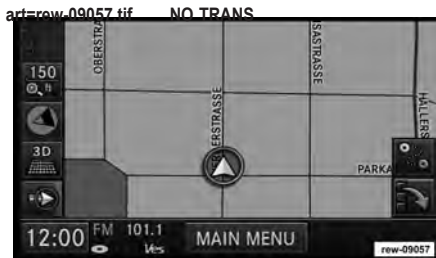

2. Touch the Record Trail soft-key in the lower right corner of the map viewer screen to record a route.




The Record Trail soft-key will switch to the Stop Trail soft-key and the trail appears as a yellow line on the map screen while you drive along a route. Maneuver points (bread crumbs) are marked as yellow dots. The start point is marked with a green dot, the stop point is marked with a red dot.

3. Touch the Stop Trail soft-key to stop the trail recording.



- Touch Discard Current Trail to discard the trail and stop the recording.
- Touch Continue Recording Trail to continue the recording.

4. Touch Stop and Save Current Trail.

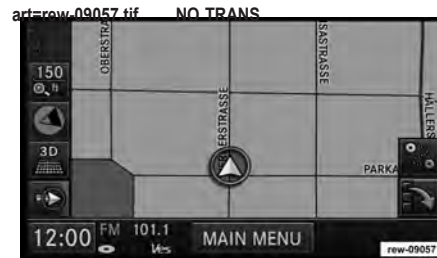

The trail will be named with time and date of the recording.

5. Touch the Change Name soft-key to edit the trail name.

6. Touch the EXIT soft-key to save the trail recording without changing the name.

The trail recording is now saved in the Saved Trails Memory.

NOTE:


You can save up to 12 trails. If the trail memory is full, you must discard one of the previous recorded trails in order to record a new trail.

Route Guidance to a Recorded Trail

The Saved Trails Memory is accessible in the Destination Entry menu. The route guidance will allow you a choice to route to the start or end of the pre-recorded trail.




Touch the Saved Trails soft-key.

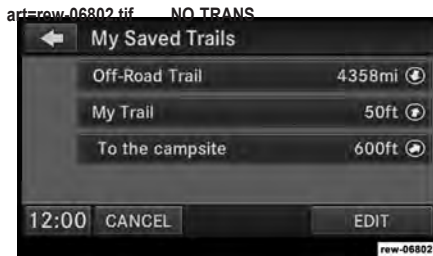

You may touch the EDIT soft-key to change the trail name or to delete trails from the My Saved Trails list.

Select the desired trail and confirm the destination entry.

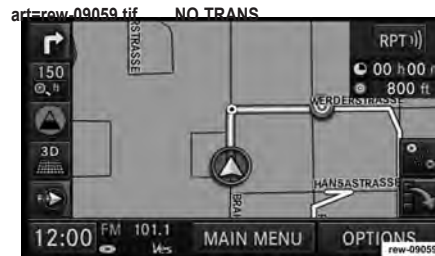


Once you arrive at the destination (green dot, destination icon), the route guidance will end.



You may now follow the trail on the screen. The trail will be displayed until you touch the STOP TRAIL soft-key in the Navigation Main Menu.

Route Guidance

After starting route guidance, the system calculates the route and announces: "Follow the arrows on the display." You will receive navigation recommendations by voice messages and screen displays.

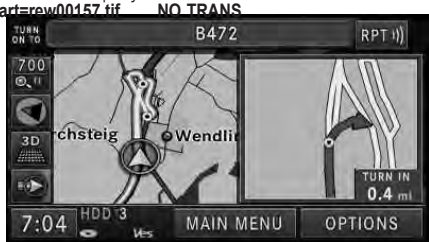

Navigation View Settings

Press the MENU hard-key to select the NAV Menu.



Touch the Full Map soft-key to display a full map during route guidance.

Touch the Turn by Turn soft-key to display turn arrows and intersection zooms on the right half of the screen.

Touch the Turn List soft-key to display a list of upcoming turns on the right half of the screen.

NOTE:

Touch the Map View soft-key in any Radio Menu screen to enable the map view mode, where the navigation map or turn-by-turn navigation can be displayed on the right half of the radio screen (See Display Settings for more information).

Map Items

Press the Map Items soft-key in the NAV Menu to access the Display Items on Map menu.



- Touch the Map Buttons soft-key to show or hide the Zoom, Map Heading, and the 2D/3D View soft-key.
- Touch the Next Turn Info soft-key to show or hide the next turn soft-key and the next turn information bar.
- Touch the Current Road Info soft-key to show or hide the NOW ON soft-key and the current road information bar.

- Touch the Time Remaining soft-key to show or hide the estimated time remaining until you reach your destination.
- Touch the Time of Arrival soft-key to show or hide the estimated time of arrival at your destination.

Touch the SAVE soft-key to save your changes.

POI Icons on the Map

The navigation radio is able to display available points of interest on the map. Touch the Select POI Icons soft-key to show a list of point of interest icons.

art=rer-38510.tif NO TRANS




rer-38510

Touch the Select POI Icons soft-key to show a list of point of interest icons



Touch the icon soft-key to show or hide an icon on the map.

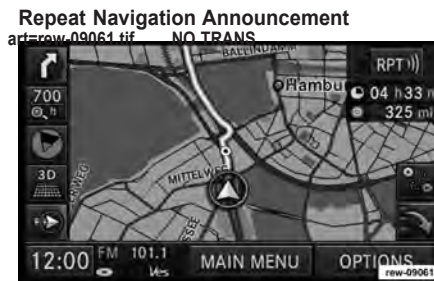


Touch the RPT soft-key in the upper right corner of the navigation screen to hear the current navigation announcement.

Automatic Re-Routing

If you miss a turn while navigating, the navigation radio will automatically adjust your route.

Route Options

After pressing the OPTIONS soft-key in the Route Guidance Menu, the following information is displayed:

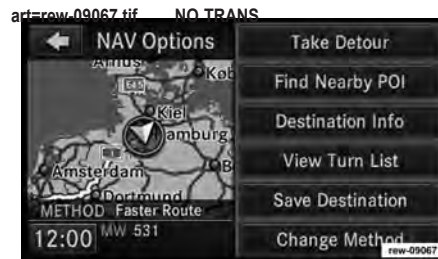

In the left half of the screen, the current position and the current routing method are displayed.

The Take Detour soft-key will allow you to calculate a different route.

The Find Nearby POI will allow you to search for a nearby point of interest.

The Destination Info soft-key displays destination information.

The View Turn List soft-key list streets utilized for the current route.

The Save Destination soft-key will allow you to save the destination address.

The Change Method soft-key will allow you to change the routing method.

Canceling Route Guidance

The current route guidance can be aborted at any time by pressing the STOP ROUTING soft-key in the NAV -Main Menu.



Touch the YES soft-key to confirm the cancellation, or touch the NO soft-key to keep the route guidance.

Unverified Navigation Database Area

Unverified areas are roads that are included in the database but have not been verified.

Route guidance in an unverified area is different from the guidance you receive in a detailed,

verified area. When traveling in an unverified area, turn-by-turn guidance and voice prompts cannot be provided.

The navigation system will suggest a route highlighted in green. This is only a route suggestion. In an unverified map area, the navigation system is unaware of turning restrictions e.g. one way roads, or where turns are not permitted.


Notes on Route Guidance

During navigation you will receive voice recommendations to help guide you. The following explains some guidance messages you may receive.

WARNING!
Danger of Accident! DO NOT IGNORE TRAFFIC LAWS. If a driving recommendation contradicts the traffic laws, the laws ALWAYS take precedence!

"Make a U-turn if possible." - You are driving in the wrong direction and should turn around at the earliest legal opportunity.

"Follow the arrows on the display." - This display tells you that you are currently in an area, such as a parking lot, garage, etc., that is not contained on the digital street map. The arrow indicates the actual geographic direction to the destination.

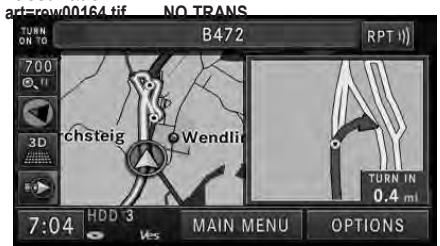


"Please take a right in 0.4 miles." - The red arrow points in the direction you should turn. The dot indicates a manoeuvre point.



"Follow the road." - You should continue driving on the current road for the distance shown.

"Prepare to take a left" or "Keep left in one mile." - Keep left does not mean to use HOV lanes or express lanes. You should note that there is an upcoming turn and prepare to make any lane changes needed to safely make the turn. As always, road safety must be observed when making a lane change.

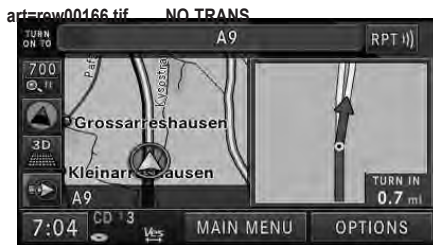

"Take the second exit to the right." - This means to pass the first exit after this announcement is given.

"Take the second turn on the right." - This arrow shows you which exit you should take from a traffic circle.

NOTE:

At intersections and traffic circles, only the ends of the roads to be passed are displayed.



"Keep right in half a mile." - "Keep right" means that the street will fork and you should follow the indicated direction.

"You have reached your destination." - The specified destination has been reached and route guidance is terminated. The display will switch back after few seconds.

Navigation Options

Options Before Activating the Route Guidance

Before confirming the route with the GO soft-key, it is possible to select options different from the default route settings.

Touch the **OPTIONS** soft-key in the Confirm Route screen to get to the NAV options screen.



Press **View Route Choices** to view alternative routing.




Touch the **Destination Info** soft-key in the NAV Options menu to find a map of the destination area, the complete address or coordinate of your destination.



Touch the Find POI Near Destination soft-key to exchange the destination with a POI near to the desired destination. Read more about POI in the POI section of this manual.

Press **Simulate Route** to simulate the route.

View Turn List to see a list of turns on the route.

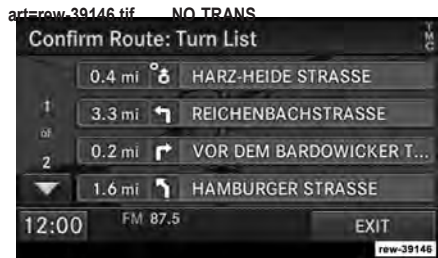


Use the page soft-keys to scroll through the list of turns. The turn soft-keys display the length of the route segment, direction of turn, and the name of the street.

Touch a street in the list either to avoid the street or to preview the turn in the map view.



Touch the Avoid This Road soft-key to avoid the selected turn in the list. The route will be recalculated, if an alternate route is possible.

Touch the Show This Turn soft-key to display a map of the area surrounding the selected turn.

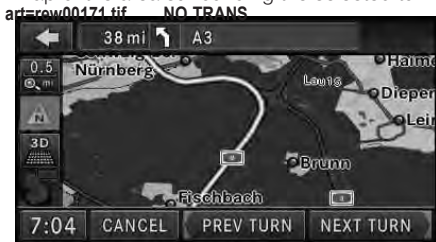

The turn will be displayed in the center of the map. Touch the NEXT TURN soft-key to show a map of the area close to the next turn in the turn list, touch the PREV TURN soft-key to show a map of the area close to the previous turn in the turn list.

Touch the back soft-key to go back to the Turn List menu.

Press **Save Destination** to save the destination address.

Touch the **Change Method** soft-key in the NAV Options menu to change the default routing method.



After you touch one of the method soft-keys in this menu the CHANGE soft-key will appear for confirmation of the method change.

NOTE:


Since toll roads, tunnels and ferries are built for the purpose of shortening travel distances, avoiding these road types may increase distance and travel time.

Options During Route Guidance

During active route guidance the Simulate Route soft-key is replaced by the Take Detour soft-key.




Touch the Take Detour soft-key to access the Detour From Route menu.

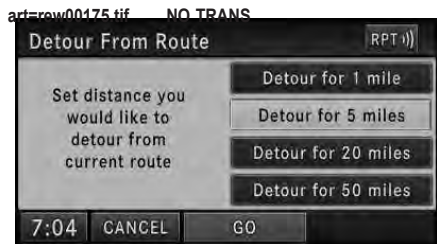

Select a distance and touch the GO soft-key to confirm. The navigation will avoid the roads in the turn list for the selected distance and calculate an alternate route.

Navigation Default Settings

Touch the NAV Settings soft-key in the Navigation Main Menu to select the preferred measurement, set default routing method, view GPS information, and adjust guidance prompt volume.

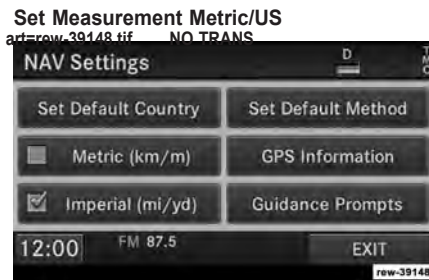

From the Navigation Main Menu touch NAV Settings and then select either mi/ft or km/m.



Mark or unmark route parameters and then touch the SAVE soft-key to confirm the changes. Press the NAV hard-key to cancel without change.

NOTE:

Avoiding freeways, toll roads, tunnels or ferries may result in very long routes.

GPS Information



The GPS Information menu displays Current Location, Coordinates in degrees, minutes and seconds (touch the DECIMAL soft-key to switch to Decimal degrees), number of used satellites, a map of the calculated position, and elevation.

Press the NAV hard-key to exit to the NAV Main Menu.

Guidance Prompts



Select and adjust the navigation guidance prompts in this menu.

Touch the SAMPLE VOL soft-key to listen to the current volume setting.

Once satisfied with the volume, touch the SAVE soft-key to save the settings. Touch the CANCEL soft-key to exit the menu without saving the settings.

Map Viewer

Press the NAV hard-key to switch to the navigation MAIN MENU.

Press the NAV hard-key again to toggle between navigation MAIN MENU and navigation MAP.



The tip of the arrow in the circle in the center shows your vehicle's position on the map. The square soft-keys on the left show the map zoom factor, the map orientation, the display mode, and the current location soft-key.

Map Zoom Level

Press the Zoom soft-key to change the zoom level.



Touch the slider or the IN and OUT soft-keys to change the zoom level. Roads with lower functional classification are not shown in higher zoom levels (e.g. residential streets, lightly-traveled county roads).

Map Orientation

Touch the soft-key with the compass arrow to toggle between a map oriented to the North, or oriented parallel to the vehicle heading.

NOTE:

Map orientation to the North is not available in 3D mode.

3D Map Viewer

Touch the soft-key with the 2D/3D symbol to toggle between 2D or 3D map views.

Minimize Button

Touch the Minimize button on the lower right of the map to hide/show all the other buttons on the map.

Route Lines

The navigation radio displays recorded trail lines as yellow lines on top of the road map. (See Record New Trail section for more details.)

Suggested routes are displayed as bright green lines on top of the road map, when the route guidance is active.

NOTE:

Suggested route (green) have a higher priority than recorded trails and may overwrite recorded trail lines.

Stop Over



When the route guidance is active, press the Add Stop Over soft-key, to add multiple destinations. After you confirm a stop over, you may either go to the entered stop over first, or to add it to a destination list.

Touch the ADD soft-key to confirm the stop over destination.

NOTE:

Once you reach a destination, the system will automatically guide you to the next destination on the list.

To review the destination list, touch the OPTIONS soft-key in the Route Guidance screen and touch the VIEW DESTINATIONS soft-key.

To show the destinations information touch the desired destinations soft-key.

Touch the EXIT soft-key to exit the Destination Info menu.

Trip Planner

If you are traveling to multiple destinations, the My Trip function will allow you to calculate and save the route to each destination.


1. Touch the My Trips soft-key in the NAV - Main Menu.



2. Touch the PLAN NEW TRIP soft-key to start a new trip.



3. Name the trip and touch the SAVE soft-key.

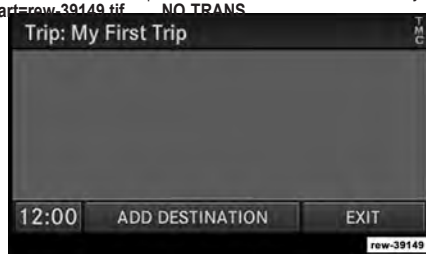


4. Touch ADD DESTINATION.

5. Enter a destination (see section Destination Input in this manual).



In the Confirm Destination screen

6. Touch the SAVE soft-key to add the destination to the list.

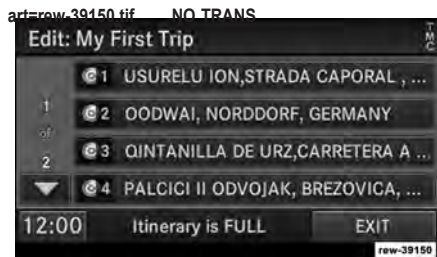

NOTE:

You can add up to 8 destinations to a trip. The display shows the Itinerary is FULL message in the status line, if all 8 destinations are used.


7. Touch the EXIT soft-key to access the My Trips menu.



8. You may now either PLAN NEW TRIP, DELETE ALL your trips, or select your trip by touching the soft-key with the desired trip name.

NOTE:


You may add up to 12 trips to the list. The display shows the My Trips is FULL message in the status line, if all 12 trips are used.

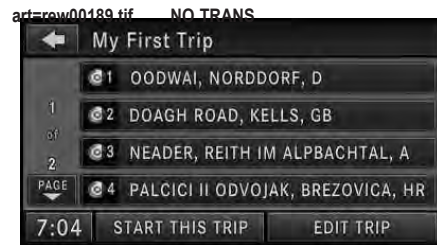

9. Touch a destination soft-key to get the destination information, or touch the START THIS TRIP soft-key to start the trip.


10. Touch the GO soft-key to confirm the first destination of the trip.

You may touch the EDIT TRIP soft-key to edit the trip.

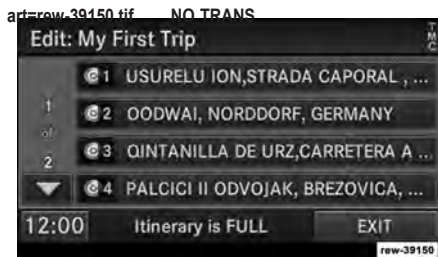

In the Edit Trip menu you may rename, delete, or edit the details of this trip. Touch a destination in the list.

From the Edit Trip menu touch the desired destination you would like to edit.

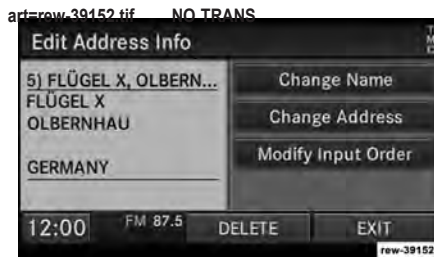

You may now Change Name or Change Address.

Touch the EXIT soft-key to confirm your changes.

Touch the Modify Input Order soft-key in the Edit Address Info menu to rearrange the order of the destinations in the trip.



Touch the yellow up and down arrow soft-keys to move the entry in the list. Touch the SAVE soft-key when you are done.

Traffic Message Channel

The Traffic Message Channel (TMC), is a specific application of the radio receiver used for broadcasting real-time traffic and weather information.

The navigation radio receives traffic messages with the radio receiver.

Press the MENU hard-key on the right side of the radio, and then touch the TMC Traffic soft-key.

Display Traffic Messages

1. Press the MENU hard-key on the right side of the radio.




2. Touch the TMC Traffic soft-key to display the available traffic messages.



The traffic message screen displays traffic messages in a list form. Data related to traffic flows, incidents, weather, etc., are gathered from traffic monitoring systems, emergency services, motorists' calls, etc., and are processed at a central traffic information centre. The information is transferred to the TMC traffic information service provider, who then generates the TMC traffic messages.

Touch one of the soft-keys with a message to view details.

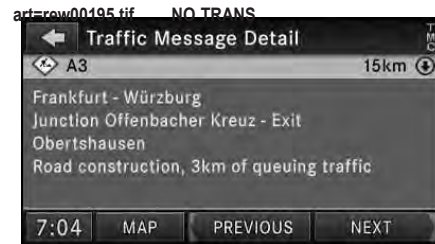

Touch Map to see the location of a message on a map. Touch PREVIOUS or NEXT to step through the list of available messages.

Touch the back soft-key in the upper left corner of the screen to exit the Traffic Message Detail screen.

Touch setup to access the setup menu.



Touch the TMC soft-key to switch TMC on or off. Touch Warning Prompts soft-key to enable warning prompts. Once you change settings, touch the SAVE soft-key to confirm your changes.

You can view either all received messages for the area you have a subscription, or only the messages on your route within the same area.

Ongoing route guidance will change your route, based upon the traffic information received. The AUTO mode will make these changes automatically; the MANUAL mode will ask for each traffic event.

Touch the Legend soft-key to display a list of possible traffic icons. The icon will be displayed in the map mode.


TMC Legend

The navigation radio can display icons on the map when the TMC function is active.

NOTE:

It can take between 15 and 30 minutes for a message to reach the system.

Touch the LEGEND soft-key in the Traffic/TMC Setup menu to review possible icons and their meaning.

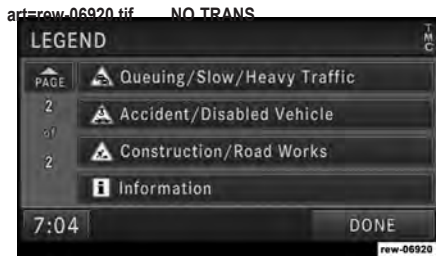

Address Book

Overview

The address book provides a way to organize and store frequently used addresses.



The address book is organized in folders.

- The HOME folder contains only your home address. Touch this folder soft-key to edit the home address. You may route to this address by touching the Guide Me Home soft-key in the NAV Main Menu.
- The In-Motion Folder contains links to entries in the other folders. The In-Motion Folder is the only folder accessible while the vehicle is in motion. This is a safety feature that limits the availability of certain navigation tasks while the vehicle is traveling. Touch the In-Motion Folder soft-key and add links to existing entries in the Default Folder, VR Created Entries folder, or any of the personalized folders.
- The Default Folder contains contacts which are available whenever the vehicle is not in motion. Touch the Default Folder soft-key to add, edit, delete, and route to your contacts.
- The VR Created Entries folder contains contacts which were created with the help of Voice Command. Touch the VR Created Entries folder soft-key to add, edit, delete, and route to your contacts.

Add a Folder

Touch the +Folder soft-key to add a personalized folder. After the new folder is named, the folder will be available in the address book.

Entering/Editing/Deleting an Address


1. Touch MENU to access one of the menus.



2. Touch My Files for the Manage My Files screen.



3. Touch My Address Book soft-key to get to the Address Book menu.

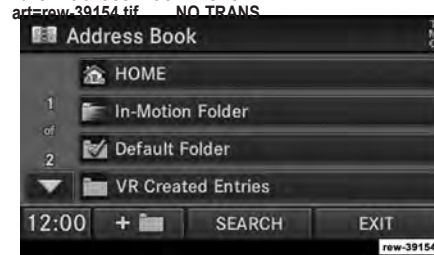

The Address Book screen appears.

4. To select an address from the Default folder, touch the Default Folder soft-key.

To select an address from another folder, touch one of the folder soft-keys.



5. Touch the ADD soft-key to add a new contact. Touch CLEAR ALL to delete all contacts in this folder, touch EXIT to go back to the Address Book menu, or touch a soft-key with a contact name to view, edit, or change the Contact Information.



You may now create a new contact or copy a contact from another folder.

6. Touch Create New Contact to go to the next screen.




7. Enter a name for your new contact.

8. Press the SAVE soft-key to display the Contact Information menu.




You may now edit the contact information. Add a voice tag for the Voice Command or touch the Edit Contact soft-key to add more information to the entry.

Touch the DELETE soft-key to delete the contact.

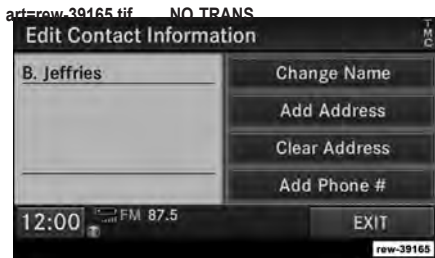


In this example, we need to add an address to the contact.

9. Press Add Address and enter a destination (refer to Destination Input section in this manual).

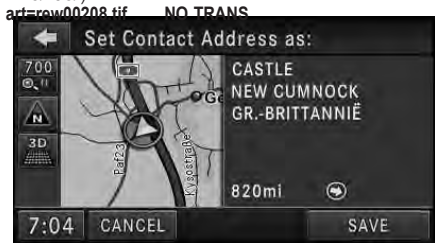

10. Once the destination is entered touch the SAVE soft-key to confirm the address.

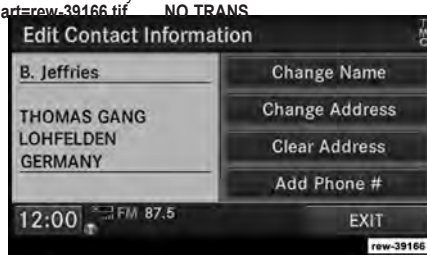

In addition, you may enter a phone number by pressing the Add Phone # soft-key.

11. Touch the EXIT soft-key after all available information has been entered.

Search a Contact in the Address Book

1. Touch the SEARCH soft-key in the Address Book menu.




2. Enter a contact name.

3. Touch either LIST or CONTINUE.



4. Touch the Jim Smith soft-key from the results list to select the contact.

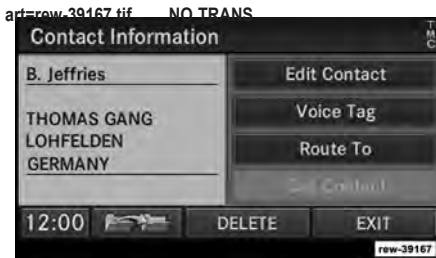


5. Once the contact information is displayed, touch the Route To soft-key to start route guidance to the contacts address.

SYSTEM INFORMATION

Press the MENU hard-key on the right side of the radio, and touch the System Setup soft-key to access the System Setup menu.

Touch the System Information soft-key to access the system information.

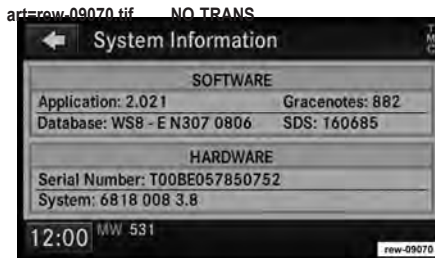

User Data Backup

Contact your local authorized dealer for information on how to backup or transfer your user data, such as address book entries, music files, etc., before returning or changing to a vehicle with a compatible navigation radio (e.g., end of lease).

Database Updates

Contact your local authorized dealer for information on available database updates.

Updates are available for the navigation radio software, the Gracenote® music recognition technology database, and the navigation database.

Please read the specific instructions on the update discs before installing the updates.

Contact your local authorized dealer if you need help or more information about the available updates.

TROUBLESHOOTING

Radio

Q.: I cannot find my favorite radio station that I was always able to receive before. What can I do?

A.: Select MUSIC TYPE while in radio mode. Select CLEAR to disable all PTY filters, and try to SEEK for your station.

Disc

Q.: The radio does not display the information for the disc I inserted. How do I access this information

A.: The radio will search the internal Gracenote® music recognition technology database on the hard drive for the inserted disc. If the database is out of date or the database does not contain the particular disc, the information cannot be displayed. Contact an autho-

alized dealer or website www.chrysler.com, www.jeep.com, www.dodge.com or www.ramtruck.com for available updates.

HDD

Q.: The radio is playing songs from the HDD, it jumps to the first song in the list. Why does it do that?

A.: After the radio is done copying or ripping music to the HDD, it needs to rebuild the current playlist. After the playlist was rebuilt, the radio starts to play the first song in the current playlist.

iPod/Digital Device Control

Q.: I cannot copy the iTunes library songs from my iPod to the HDD?

A.: That is correct. iPod does not allow iTunes library songs to be copied off the iPod.

Q.: Can I use an iPod to copy songs to the HDD?

A.: Yes. Copy to WMA or MP3 files to the USB storage partition on your iPod. Connect the iPod to the USB connector on the radio and copy the files to the HDD.

NOTE:

MP4 and M4V files are not supported.

Q.: My iPod does not play audio on the MyGiG radio?

A.: Make sure the iPod is connected via the iPod connector.

Navigation

Q.: I entered the wrong home address. How can I change it?

A.: Press MENU, select My Files, select My Address Book, select Edit Contact, select Change Address, and enter you new home address..

Voice Command

Q.: Voice Command does not understand what I say. What can I do to make this work?

A.: If the navigation radio has trouble recognizing your voice, you should press the MENU hard-key, press System Setup, and then press the Voice Command hard-key to access the Voice Command menu. Touch the Start Voice Training soft-key and follow the spoken instructions.

Uconnect™ Phone

Q.: I am in a gas station and my cellphone is ringing, I try to answer the call, but I do not hear anything. How do I get the call?

A.: Your phone is still connected with Uconnect™ Phone via Bluetooth®, the navigation radio expects you to be in the car. You need to temporarily disconnect from Bluetooth® to answer the call. Refer to the user's manual of your Bluetooth® device.

GLOSSARY OF TERMS

AS	Autostore
CD	Compact Disc
CDC	Compact Disc Changer

CDDB	A technology company founded in 1995 as CDDB, Inc. The company has been renamed to Gracenote, Inc. The technology has been renamed to the Gracenote media recognition service.
DVD	Digital Versatile Disc
DVDC	Digital Versatile Disc Changer
FIX	A position determined from terrestrial, electronic, or astronomical data.
GMD	Gracenote Media Database, Gracenote Media Recognition Service (www.gracenote.com)
GPS	Global Positioning System

GMT	Greenwich Mean Time
HDD	Hard-Disk Drive
HFM	Hands-Free Module
MFB	Multifunction soft-key
MFS	Multi Functional Steering Wheel
MP3 MPEG-1 Audio Layer-3.	Compression scheme used to transfer audio files via the Internet and store in portable players and digital audio servers.
M4A	The .M4A format is actually the audio layer of (non-video) MPEG 4 movies.
M4P	The .M4P format is an audio file purchased from Apple's Music Store (iTunes) and is protected by a Digital Rights Management scheme.
NAV	Navigation

POS	Position
PTY	Program type (radio)
RDS	Radio Data System
SAT	Satellite Radio
SDS	Speech Dialog System
TMC	Traffic Message Channel
UTC	Universal Coordinated Time
VES™	Video Entertainment System
WMA	Windows Media Audio Format

2

INDEX

