



# M842/M832 Garage Remote Programming Instructions

Your receiver or opener must learn the button from this remote control.

## 1. Find the learn button

### On overhead door openers:

- a) With five exposed terminal screws at the rear
  - Remove the small black cover to the right of the terminal screws.
  - **Learn** is the **RED** button under the black cover
- b) With four terminal screws at the rear, possibly covered with a plastic panel
  - Remove the lamp cover; remove the **red** or **green** control panel cover.
  - Find the small button marked "**Learn**"
- c) With four covered terminal screws at the rear, and a Merlin **wired** wall switch
  - The small button on the Merlin wall switch is the **Learn** button

### On Roller door openers:

- a) Single small square **RED** button on the front
  - Remove the lamp cover; remove the small black cover to the left of the lamp holder.
  - **Learn** button is the **RED** button under the black cover
- b) Large **RED** or **GREEN** push switch on front
  - Remove the red or green control panel cover
  - Find the small button marked "**Learn**"
- c) Large **RED** or **Green** push switch on front and a Merlin **wired** wall switch
  - The small button on the Merlin wall switch is the **Learn** button

### On other Receivers

- a) Dark grey boxed receiver with a large round **GREEN** button
  - The **Learn** button is the small dark grey button inside the **Green** button
- b) Gate receiver cards
  - The **Learn** button is the tact switch on the pcb marked "**Learn**"
- c) Others
  - See your receiver's user guide, or inspect and find a button marked "**Learn**"
  -

## 2. Teach the remote to the opener or receiver

- Press and hold the **Learn** button for 1-2 seconds
- Press the desired remote control button **three times or more**

### NOTE: If you want to control the lamp on your opener (if fitted):

#### press the desired button for the secondary function:

- Press and hold the **Learn** button for 1-2 seconds
- Press the desired remote control button **once** for the main function (open door)
- Press the desired remote control button **once** for the secondary function (control lamp)