

# PTX-4 Transmitter Coding Instruction Manual

Thank you for purchasing the ATA SecuraCode® PTX-4 keyring transmitter. Familiarise yourself with the following instructions prior to commencing set up. Store this information in a safe place for future reference.

## OPERATION

To open a door or gate using the transmitter simply press one of the programmed channel buttons for two seconds. Each press of the button will cycle through an open, stop or close action.

## STORING TRANSMITTER CODE

 
Make sure to install the battery in the transmitter correctly.

1. Press and hold the blue Door Code button on the opener or SW1 or SW2 on the receiver.
2. Press the transmitter button you would like to use to control the door for two seconds.
3. Release and pause for two seconds. Press the same button again for two seconds.
4. Release the Door Code or SW button.
5. Press the transmitter button to test operation of the door/gate etc.


**Note:** To remove a transmitter's code from the device repeat steps 1-5 above .

## DELETING ALL STORED TRANSMITTER CODES


1. Turn the power off to the opener.
2. Press and hold Door Code or SW1 button.
3. Turn the power on again, while holding the button. The Coding LED will illuminate to indicate that the receivers memory has been deleted.
4. Release the button. All the stored codes including the courtesy light codes should now be deleted. Confirm this by pressing the transmitters previously used to operate the device. There should be no response.

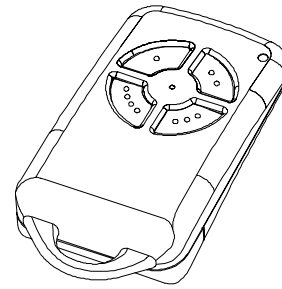


PTX-4 SecuraCode® Keyring Transmitter

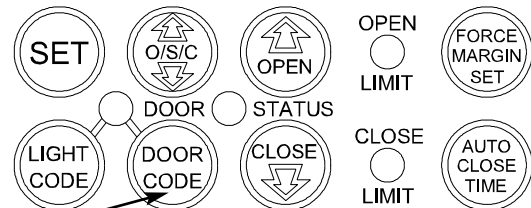 

 GDO-2 & GDO-4 Garage Door Opener Control Panel

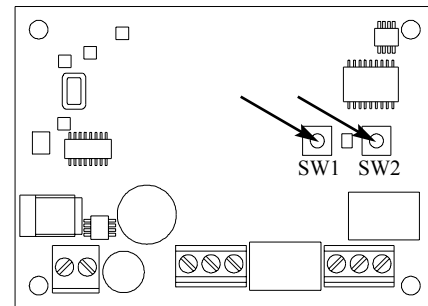

CRX-2 Stand Alone Receiver

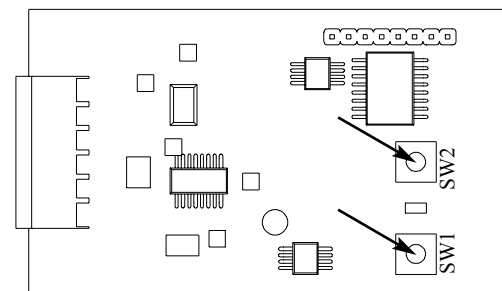 

RX-2 V2.02 Receiver Board

