

Jägermeister*

SPEED POUR FREEZER

OWNER'S MANUAL



INSTRUCTIONS

UNPACKING AND START-UP INSTRUCTIONS

- Start by removing the included boxes of the Stag Pourer & Bottle Neck Extender.
- 2. Remove foam inserts to reveal the freezer.
- 3. Carefully remove the freezer by lifting it straight up out of the box.
- Place the freezer in desired location with 4 inches of clearance on all sides.
- **5.** Before plugging in, make sure the power switch in the back is in the **OFF** position.
- **6.** Plug in, then flip the power switch to **ON**.
- 7. Take the Stag Pourer & Bottle Neck Extenders and screw on to 1L or 750ML bottles of Jägermeister Classic, then insert the two bottles in the cooling compartment. It is recommended that the bottles be chilled BEFORE inserting them inside the bottle compartment.

CLEANING INSTRUCTIONS

- 1. Turn off freezer and remove the bottles.
- **2.** Using a damp cloth or paper towel, insert hand inside the bottle compartment to clean or wipe up any spillage.

PLEASE NOTE: Although the machine is equipped with an automatic defrost mechanism, you may notice build-up of ice in the cooling compartment when the relative humidity is high. If the ice build-up becomes excessive, turn off for a few hours and empty the Drip Tray underneath the machine afterward.

RETAIN YOUR ORIGINAL BOX AND PACKING MATERIALS FOR A PERIOD OF 1 YEAR. THESE ITEMS ARE NEEDED IF YOUR FREEZER REQUIRES SERVICE OR REPAIRS.

For information on requesting service or repairs, visit:

WWW.TAPMACHINE.COM

Thank you for purchasing the Jägermeister® Speed Pour Freezer

REGISTRATION INFORMATION

Register your Jägermeister® Speed Pour Freezer online at:

WWW.TAPMACHINE.COM

PLEASE MAKE SURE TO REGISTER YOUR FREEZER AND RETAIN YOUR ORIGINAL BOX AND PACKING MATERIALS. FAILURE TO DO SO MAY CAUSE DELAYS IF YOU REQUIRE WARRANTY SERVICE.

NOTE: THIS FREEZER COMES WITH A 1 YEAR LIMITED WARRANTY. THESE MATERIALS WILL BE NEEDED FOR SHIPPING IF YOUR FREEZER NEEDS TO BE RETURNED FOR SERVICE OR REPAIR.

Please visit **www.tapmachine.com** for more information on warranty, repair and returns and for an online version of this owner's manual.

Do not return your freezer unless you receive authorization to do so by Tap Machine Inc.

To receive a return material authorization (RMA) number, call: 1-800-713-8881 or email: TapService@jagermeister.com

Freezers returned to Tap Machine Inc., Mast-Jägermeister US., or our affiliated warehouses, without a specified return material authorization number will be refused and returned to sender.

This manual is provided with each new Jägermeister® Speed Pour Freezer and contains important information to keep your freezer running problem free. This manual is also available online at www.tapmachine.com.

GET TO KNOW YOUR JÄGERMEISTER® SPEED POUR FREEZER

Model	Jägermeister® Speed Pour Freezer
Dimensions	11.81" W x 16.14" D x 13.72" H
Power Required	AC110 / 60Hz
Current Draw	4A at start / 1A steady
Electrical Cord	6 Ft.
Compressor	1/10P
Refrigerant / Charge Size	R134A / 60g
Temperature Range	<5°F (-15° C)
Capacity of Freezing Chamber	Two one-liter bottles
Required Clearances	100mm (Approximately 4 inches)
Operating Environment	For Indoor Use Only Between 50°F (10°C) and 90°F (32°C)

OPERATION INFORMATION

General: The Jägermeister® Speed Pour Freezer is a unique display and refrigeration unit designed to chill Jägermeister to temperatures well below freezing.

CARTON CONTENTS

The following are packaged with the freezer: Two Stag Pourers with Bottle Neck Extenders Owner's Manual

TO PURCHASE ADDITIONAL STAG POURERS, BOTTLE NECK EXTENDERS, OR OTHER ACCESSORIES, PLEASE VISIT

www.tapmachine.com





THE JÄGERMEISTER® SPEED POUR FREEZER MAY BE PLACED ON TOP OF THE JÄGERMEISTER SHOT GLASS FREEZER! (SOLD SEPARATELY)

IMPORTANT!

NOTICE

The Jägermeister® Speed Pour Freezer is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the Jägermeister® Speed Pour Freezer by a person responsible for their safety.

Children should not operate the Jägermeister® Speed Pour Freezer in any instance.

The Speed Pour Freezer's intended use is to chill Jägermeister and should be operated in accordance with the laws and regulations of the location in which such use takes place.

IMPORTANT!

When setting up your new Jägermeister® Speed Pour Freezer, place it on a level surface, indoors, with 4 inches of space on all sides to allow for adequate airflow from the refrigeration system.

DO NOT PLACE FREEZER ON AN ANGLE.
FAILURE TO PROVIDE ADEQUATE CLEARANCE
AROUND THE MACHINE WILL RESULT IN
IMPROPER CHILLING OR POSSIBLE DAMAGE
TO INTERNAL COMPONENTS.

WARNINGS AND IMPORTANT NOTICES

DANGER

ELECTRICAL SHOCK HAZARD

Can cause injury or death. Service should only be performed by qualified service personnel. Before attempting to perform ANY maintenance, UNPLUG unit. Use extreme care during electrical circuit tests. Live circuits may be exposed.

THERE ARE NO USER REPLACEABLE PARTS OR USER ADJUSTMENTS INSIDE THE FREEZER.

IF THE POWER CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURER, AUTHORIZED SERVICE AGENT, OR SIMILARLY QUALIFIED PERSONS TO AVOID A HAZARD.



DRINK RESPONSIBLY | TAPMACHINE.COM