

Womens Spy Watch Camera Instruction Manual




Provided by SecurityBees.com

- | | |
|--------------------|----------------------|
| A. Mode Switch | B. Mode Indicator |
| C. LED Lamp Switch | D. Time Reset Button |
| E. Mini USB Port | F. Microphone |
| G. IR Indicator | H. Lens |
| I. LED Lamp | J. Optical Sensors |

Important statements:

We design and manufacturer this product according to the 3 degrees technology (30 meters underwater) , but because of its special structure, you can't use it as a diving watch. All of the waterproof design of this product just to prevent splash liquid or other subject falling into the product and damage it in the daily lives.

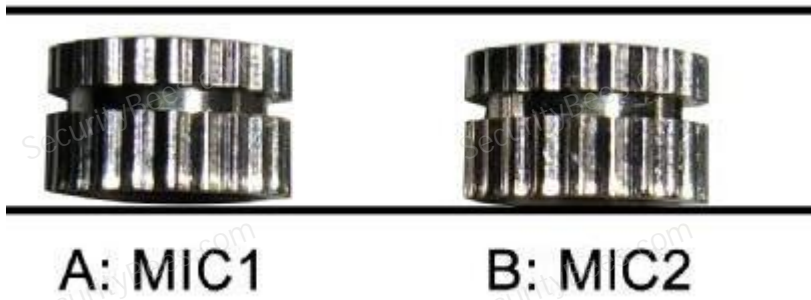


You should use the product according to the guidance in strict, if the product is damaged by water because of your improper operation, we will no longer offer this product warranty and after-sales service. In order to make the best waterproof function, you need abide by the following methods strictly:

A MIC1 and B MIC2 are microphone knobs, they have the same height. Please note the difference.

- A: MIC1 is a metal knob with a small hole in the center of it, in the below picture, the hole of the knob is used for voice transmission, In good environment, it is recommended to use this knob to let the sound transmit into the microphone, so the device can record video and sound at the same time.
- B: MIC2 is a metal sealed knob without sound transmission hole, there is a waterproof sealing pad in the center of the knob. In terrible environments, it is recommended to use this knob, To prevent splashing of liquid and dust falling into the microphone holes. If you use this knob, the external sound will not enter into the microphone, So the recorded video has no sound.
- C: USB knob is a metal seal knob without hole, there is a waterproof sealing pad in it, In any kind of environment, You must tighten the knob to prevent dust or liquids into the product.
- You must tighten these knobs when you use them.

Note: Check the sealing pads of the USB knob and the Mic2 knob carefully. If it missed, please do not use it as a waterproof knob, immediately change the other alternate waterproof knob.

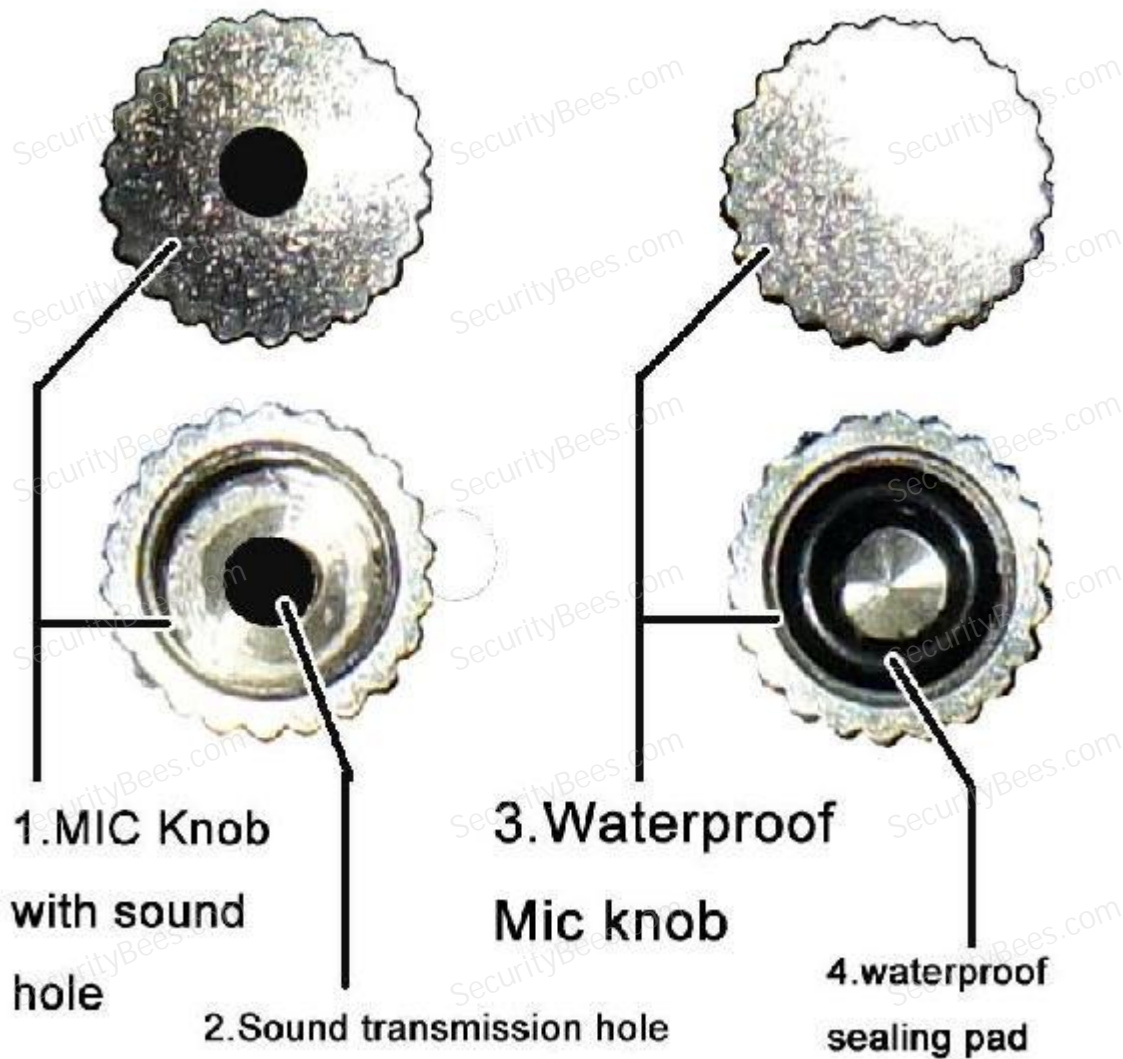

1. Power On/Video Recording

- Press A about 2 seconds, blue light blinks then go off, machine is power on and start recording video.
- Click A twice, stop recording and save the file, solid blue light means machine come back to standby mode;
- Click A again to restart recording.

2. IR Led On/Off

- It's auto-sensing, don't need manual operation

3. Photo Mode

- During the process of recording video or when the machine in standby mode, click C once, red light go on. Click C again, both red and blue light go on, at this time machine enter into photo mode;
- Click A once, blue and red light blink 1 time, it means take 1 picture successfully and saved.

4. Separate Voice Recording

- During the process of video recording or when the machine in standby mode, click C once, red light go on, at this time machine enter

into voice recording mode.

--Click A once, red light blink some times then go off, it start recording voice.

--Click A again, red light go on, it stop recording and save the file---> Click C once, both blue and red light go on, machine come back to photo mode--> Click C again, blue light go on, machine come back to standby mode.

5. Led Light On/Off

--In any mode, long press C, the Led light will be turn on;

--Long press C again to tun off.

6. Time Reset

--Connect the machine to your computer, under the disk root directory, please creat a txt named"TIME.TXT", then open it and set the time form

2014/01/05 12:59:30.

When you complete the setting, please restart the camera, it will automatically complete the time revision.

7. Power Off

Press A for about 2 seconds, red light blinks some times then go off, it means camera power off.