

INSTRUCTIONS FOR BASIC MINI-CONTROLLER

CONTROL BOX

PLAY (>) button:

Plays next effect. If held down, turns power off and saves effect for next power up.

VARIATION (+) button:

Modifies the current effect (speed, color, etc depending on effect).

REMOTE CONTROL

A: Play >

B: Variation +

C: Recall favorite effect. Press and hold to save favorite effect.

D: On/Off

LIST OF EFFECTS (11/12/11)

NAME	DESCRIPTION	VAR BUTTON (+)
Test Pattern	test mode	
User Defined	user-defined effects	next effect
Demo Mode	changes effects randomly	
Color Wheel	all lights cycle through color wheel	4 speeds
Rainbow	rainbow of color	8 speeds
Wide Rainbow	wide rainbow of color	8 speeds
Christmas Lights	colors fade in and out	4 speeds
Color Change	all lights change to new colors	4 speeds
Two Color Change	alternate lights change to new colors	4 speeds
Color Glow	glowing colors	7 colors
Comets	white or colored comets	2 colors, 2 directions
Trailer	flashing stars with trail	2 modes
Chaser	colored chaser lights	4 speeds
Color Waves	colored wave with sparkle	256 colors
Ping Pong	back and forth colors	4 speeds
Expander	colors expanding from center	2 modes
Exploder	lights exploding from center	8 speeds
Holiday Colors	color patterns for holidays	8 themes
White and Color	white alternating with a color	256 colors
Dimmable White	all white and dimmable	16 brightness levels
Color Picker	all lights same color (saturated)	256 colors
Pastel Picker	all lights same color (pastel)	256 colors
Twinkle	twinkling, flashing lights	8 colors, 1 mixed
Strobe	strobe light	8 speeds
RGB Flash	Red Green Blue flasher	2 modes

SETTING NUMBER OF LIGHTS

To set the number of lights attached to the MC do the following:

1. unplug power jack from MC.
2. hold PLAY button down (on MC, not remote) and plug power back in.
3. release PLAY button, then use both buttons to adjust number of lights.
flashing light indicates last light. when you have last light flashing,
wait 5 seconds for it to save setting, then power cycle to resume normal operation.