




Base plate installation---VP70T, VP84T, VP92T

*The Base plate prevents the pressure plate being worn out by VP levers.

Bend it to follow the shape of a pressure plate

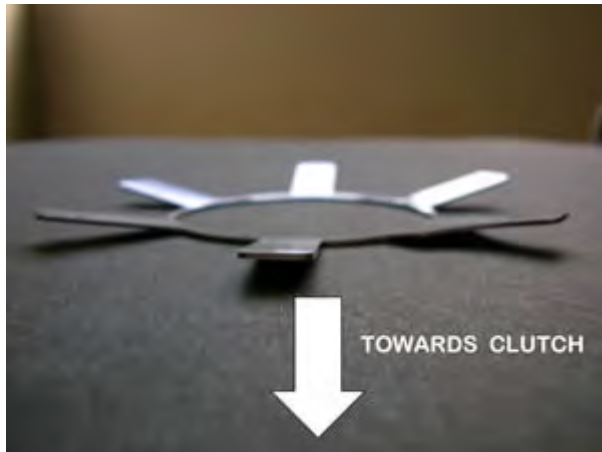

The base plate goes between a pressure plate and a diaphragm spring. You do not have to remove a spring. It can be slid through spring blades.

1.



2.



3.



4.

