



DESCRIPTION

The series 4300 chemical injectors are electric motor driven, positive displacement pumps utilizing an integral worm gear drive available in three different standard ratios and 6 plunger sizes to provide a wide selection of volumes and pressures .063 GPD up to 325 GPD per head, against pressures from 150 to 5000 psig. An optional 10 to 1 gear reducer, mounted externally, is available for extra low pumping rates from 1-1/4 gallons per day down to 1/2 pint per day.

Pumps are standard with a micrometer type stroke adjustment that puts an end to the tedious work of stopping and starting the pump while trying to set the proper flow rate. A 0-100% change in capacity is possible while the pump is running. Each complete turn of the knob results in a 10% change in stroke setting. Repeatable accuracy is 1% of set point. Up to eight heads driven by a common motor are possible, and each head can be independently adjusted.

The standard, virtually trouble free packed plunger injector heads have built-in priming valves and a dripring type barrier that will prevent chemicals from being conducted along the plunger and into the gear box. Standard pumps can be furnished with high strength ductile iron or all stainless steel liquid ends to handle a wide variety of chemicals used in oil and gas production facilities, pipelines, process plants and other applications where a rugged, easy to maintain proportioning pump is required.

FEATURES

- Integral gear drive and crosshead mechanism in heavy cast iron housing with an oil level sight gauge.
- Output gear of high strength alloy iron is supported in a sturdy special bearing arrangement for maximum rigidity to assure extremely long fife.
- A special drip-ring feature on the plunger prevents chemical from being conducted into the gear box and contaminating the lubricant.
- Oil level gauge on gear box.
- A full gasket under the gear box cover provides a positive barrier against moisture, dirt, and corrosive vapors.
- Choice of liquid ends . . . all interchangeable.
- Multiplex models with up to 8 heads driven by a common motor are available.
- Stainless steel tanks
- Flow rate is adjustable while the pump is running.

STOCKING DISTRIBUTORS: Fred C. Gilbert Co. * www.fcgilbert.com * 661-399-9569




MODELS AVAILABLE


The Texsteam 4300 Series pump is gear-driven and utilizes an electric motor, as a power source. Power units (less tank) and chemical injectors (with tank, suction piping and flow rate gauge) are available with from one to eight pumping heads in a choice of gear ratios (25:1, 50:1 or 100:1) and plunger sizes (3/16", 1/4", 3/8", 1/2", 3/4 or 1"). Refer to the chart below to determine horsepower requirements for units with multi heads.


MODEL DESIGNATION:

4323-3-P 3/8"

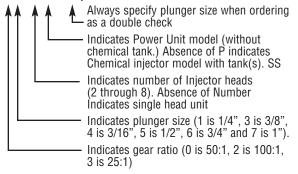

Horsepower Requirements for Muti-Headed Units

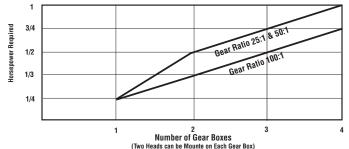


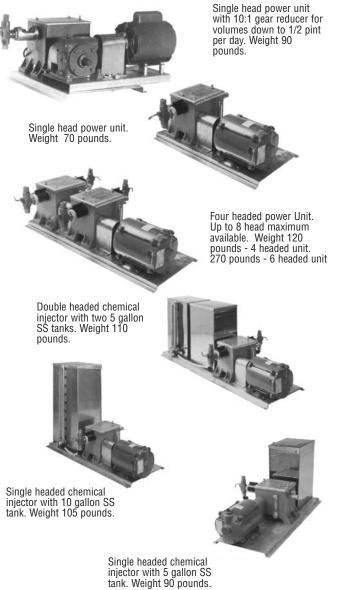

Min - Max Volume (Expressed in U.S. Gallons per day)														
Plunger	Maximum Discharge Pressure	100:1 Ratio (17.5 SPM)				50:1 Ratio (35 SPM)				25:1 Ratio (70 SPM)				
Size			Min.		Max GPD		Min.	Max	. GPD		Min.	Max	. GPD	
Single Head Units		Model No.		60 Hz 50 Hz Notor Motor		Model No.		Hz Itor	50 Hz Motor	Model No.	60 Mo		50 Hz Motor	
3/16"	5000 # Hard Pkg. 3000 # Soft Pkg.	4324	0.063	2.5	2.07	4304	0.13	5	4.15	4334	0.25	10	8.3	
1/4"	2400 PSI	4321	0.5	5	4.15	4301	1	10	6.3	4331	2	20	16.6	
3/8"	1200 PSI	4323	1.2	12	9.96	4303	2.3	23	19.09	4333	4.6	46	38.18	
1/2"	600 PSI	4325	2.1	21	17.43	4305	4	40	33.2	4335	8	80	66.4	
3/4"	300 PSI	4326	4.6	46	38	4306	9.1	91	75.5	4336	18.2	182	151	
1"	150 PSI	4327	8.1	81	67.5	4307	6.3	63	135.2	4337	32.5	325	269.7	
Dou	Double Headed Units													
3/16"	5000 # Hard Pkg. 3000 # Soft Pkg.	4324-2	0.13	5	4.14	4304-2	0.26	10	8.3	4334-2	0.5	20	16.6	
1/4"	2400 PSI	4321-2	1	10	8.3	4301-2	2	20	16.6	4331-2	4	40	33.2	
3/8"	1200 PSI	4323-2	2.4	24	19.9	4303-2	4.6	46	38.18	4333-2	9.2	92	76.4	
1/2"	600 PSI	4325-2	4.2	42	34.86	4305-2	8	80	66.4	4335-2	16	160	132.8	
3/4"	300 PSI	4326-2	9.2	92	76.3	4306-2	18.2	182	151	4336-2	36.4	364	302.1	
1"	150 PSI	4327-2	16.2	162	134.4	4307-2	32.6	326	270.5	4337-2	65	650	539.5	



Gear box shaft height is 3?" From base to center line of shaft. If a Frame 48 Motor is used, four (4) TA-1741 shims are required. A Frame 56 Motor can be mounted on base without shims.

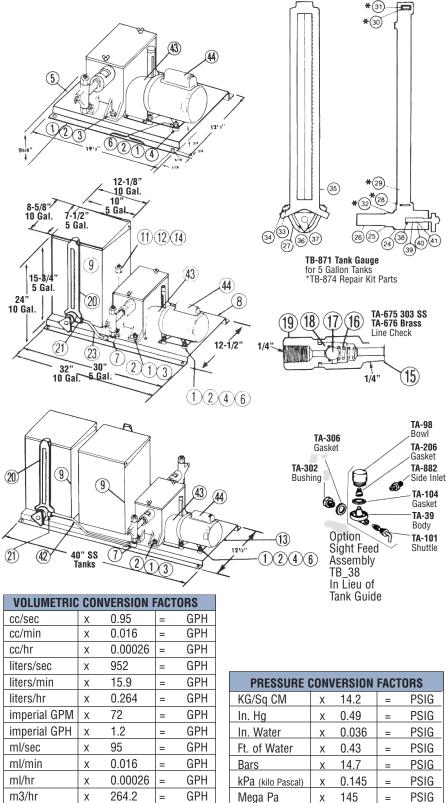

ITEM	PART NO.	PART NAME MATERIAL									
1	TA-0164	Hex Nut									
2	TA-3303	Lockwasher 1/4" Steel									
3	TA-0167	Cut Washer									
4	TA-1741	Spacer (48 frame motor only)									
5	TB-0437	Base 10 Gauge Galvanized Steel									
6	TA-0163	Cap Screw									
7	TA-3116	Elbow & Compression Nut									
8	TB-0436	5 Gal. Tank & Pump Base									
	TC-0269	10 Gal. Tank & Pump Base									
9	TA-0664	5 Gal. Chemical Tank 430 SS									
	TA-2057	5 Gal. Chemical Tank 316 SS									
	TA-1539	10 Gal. Chemical Tank 304 SS									
11	TA-0425	Lockwasher									
12	TA-0300	Cutwasher									
13	TB-0431	Base for two 5 Gal. SS Tanks									
14	TA-0144	Hex Nut									
15	TA-0677	Brass Outer Body									
16	TA-0391	316 SS Spring									
17	TA-0054	316 SS Ball									
18	TA-0479	Buna N O-ring									
	TA-2093	Viton O-ring									
19	TA-0678	Brass Inlet Body									
20	TB-0871	5 Gal. SS Tank Gauge Assy.									
	TB-1285	10 Gal. Tank Gauge Assembly									
21	TA-3118	Connector & Compression Nut									
23	TA-3161	Polypropylene Tube									
	TA-3115	303 SS Valve Body									
25	TA-3104	303 SS Retainer Nut									
	TA-3103	303 SS Strainer									
27	TA-3106	Cad Plated Steel U-bolt									
	TA-2184	Viton O-ring									
29	TA-3102	Glass Gauge TB-874									
	TA-3101	Fiber Flat Washer Repair									
	TA-3100	303 SS Spring Kit									
32	TA-3199	Viton O-ring									
33	TA-0577	Cad Plated Steel Washer									
34	TA-0164	Cad Plated Steel Nut									
	TC-0393	Aluminum Frame									
36	TA-3112	Cad Plated Steel Valve Handle									
	TA-0164	Cad Plated Steel Nut									
38	TA-3114	Valve Stem									
39	TA-3113	316 SS Spring									
40	TA-3328	303 SS Washer									
41	TA-3107	Viton O-ring									
42	TA-3162	Polypropylene Tube									
43	TB-1167	Coupling Guard									
44	TA-2266	1/4 HP, 1Ph, 60Hz, 115/230V, Open DP									
	TA-2272	1/4 HP, 3Ph, 60Hz, 230/460V, Open DP									
	TA-2264	1/4 HP, 1Ph, 60Hz, 115/230V, TEFC									
	TA-2268	1/4 HP, 3Ph, 60Hz, 230/460V, TEFC									
	TA-2265	1/4 HP, 1Ph, 60Hz, 115/230V, EX Proof									
	TA-2271	1/4 HP, 3Ph, 60Hz, 230/460V,									

** Recommended Spare Parts **NOTE:** All motors are 1800 RPM



INSTALLATION

- Remove pump from carton and inspect for possible damage in transit from factory. The cardboard carton was designed especially for this pump. If the pump has been damaged in transit, file claim with the carrier.
- 2. Bolt holes are provided for a permanent mounting (see drawing for dimensions)
- 3. Remove the gear box lid and fill gear box with 1-1/2 quarts of a good grade of lubricant. The oil level should be maintained level with the top of the crosshead guide rods, item #24.
- Adjust the stroke length to the desired volume. A full stroke length (1") will pump the maximum volume as shown in the data sheet. For approximately 50% volume use a 1/2" stroke, etc.
- 5. Connect the suction line to pump head
 - a. If a reservoir is furnished with the pump, the suction line is already connected. Fill the reservoir and open (all the way) the pump rate setting gauge valve, Item #35. A strainer is furnished as a part of this unit.
 - b. If a power unit model (without tank) was purchased, a strainer should be piped into the suction line to prevent sand, rust or other particles from injuring the plunger and fouling the check valves.
- 6. Connect the discharge line. A 1/4" line check is provided with all 3/16", 1/4", 3/8" & 1/2" heads. This valve should be installed as close to the point of injection as possible. Note the arrow on the check valve indicates the direction of flow. The top connection on the pump head is the outlet and has a 1/4" female pipe thread connection.
- 7. Mount motor if pump was ordered less motor. The pump input shaft speed should not exceed 1800 RPM and will operate the pump in either direction of rotation (CW or CCW). After careful alignment with shaft coupling (furnished on all pumps), bolt motor securely in place. Shaft alignment is very important. Misalignment will cause the bearings in the motor and pump as well as the coupling to wear out. Shim the motor if necessary. To check free rotation, turn motor and

pump over by grasping the coupling and rotating. A minimum of 1/16" spacing should be allowed between coupling ends for expansion. The use of an overload protector in the motor circuit is recommended.

- 8. Install Item #16, priming valve (included with pump, but shipped loose in carton) on the pump head.
- 9. Start motor and prime the pump head by opening the priming valve. After the pump discharges fluid through the priming valve discharge without bubbles, slowly close the priming valve for normal operation. At this point make a visual check of the packing drip, and using the TA-315 gland wrench slowly tighten the gland to prevent excess drippage and waste of chemicals. Do not over-tighten plunger packing. It may be necessary to readjust the packing the next day. A slight leak during the break- in is beneficial, sufficient time should be allowed to let the packing "seat in". Do not tighten packing when pump head is under load.

(Discharge pressure should be atmospheric.

If low volumes are being pumped, the pump head, the discharge line, and all other fittings up to the line check should be thoroughly purged of all air bubbles.

Check pump action by opening the priming valve.

OPERATING INSTRUCTIONS

- 1. Check oil level in gear box regularly. Observe oil level indicator, Item #5.
- 2. Check for excess chemical leakage around the packing gland. If it is impossible to tighten, replace the packing. If the plunger is badly scored, replace the plunger and packing. If excessive packing failure is experienced, consult your Texsteam representative.
- Each Texsteam Series 4300 Pump has an adjustment for the required stroke length. To adjust stroke length see the FLOW RATE ADJUSTMENT instruction note on page 5.

series **4300**

MAINTENANCE INSTRUCTIONS

REPLACING THE STROKE ADJUSTMENT GEARS

When replacing the Nylon stroke adjustment gears, they have to be correctly positioned relative to the crosshead, the stroke adjustment knob, and to each other.

Rotate the motor coupling by hand until the crosshead, Item 2, is moved forward as far as it will go toward the side of the housing on which the head is mounted.

Assemble the small and large gears, Items 19 & 21, in place. Reference the illustrations on page 5. Leave the set screw, Item 23, in the large gear, loose for the time being. The two gears should be in mesh at this point, and rotating the large gear by hand will cause the small gear to move forward & back on the adjustment bolt, Item 16. Turn the large gear in the direction that causes the small gear to move forward toward the crosshead, and continue this turning motion until the small gear is flush up against the crosshead (no lost motion). Now turn the stroke adjustment knob, Item 55, clockwise until it covers the last groove on the spindle, then tighten Item 23, the set screw, in the large nylon gear, using a 5/64" Allen wrench.

The pump is now set in the full discharge stroke position, and all parts are in their correct relative positions. To make further adjustment in the flow rate, see the FLOW RATE ADJUSTMENT instruction about 1/3 the way down on page 5.

DISASSEMBLY OF THE POWER MECHANISM

- 1. Disconnect and remove pump head from power unit.
- Remove item 21, large Nylon drive gear, by loosening Item 23, set screw with a 5/64" Allen wrench.
- 3. Remove Item 15 rod retainers and Item 14 "O" rings from each end of Item 24 bearing rods.
- 4. Using proper site punch, push bearing rods through Item 2 crosshead and out opposite side of gear box.

TO REMOVE ITEM #28 CROSSHEAD BEARING FROM WORM GEAR

Remove Item 2 crosshead and lift bearing off Item 27 bearing stud.

TO REMOVE WORM GEAR ITEM #37 AND ITEM #46 BEARING FROM GEAR BOX

1. Remove cap Item 36 from bottom of pump.

- Remove Item 48 hex-head machine screw, Item 49 spring washer and Item 47 bottom thrust washer. You can remove the worm gear Item 37 and Item 46 bearing through the top of the housing Item 1.
- Upon replacing be certain the gear roll pin Item 30 is located in its proper place — holding the bearing Item 46 in proper alignment.

TO REMOVE THE WORM GEAR AND SHAFT ITEM #12 SHAFT END REARING and/or OIL SEAL ITEM #9

It is not necessary to remove crosshead, guide rods or worm gear in order to remove the drive shaft and its component pails.

- Disconnect flexible coupling and remove motor from base. If unit is equipped with container on base, it is best to remove entire gear box from base:
 - a. Remove Item 10 truarc ring
 - b. Remove Item 33 pipe plug (opposite side)
- Insert proper size punch into recess on small end of Item 12 shaft (small end under Item 33 pipe plug). Carefully drive shaft out through opposite side of housing. Punch side should be small enough so not to drive against Item 3 inner race (if it is desirable to remove Item 4 needle bearing and Item 3 inner race, it should be done after the shaft has been removed).

As the shaft is being driven out, care should be taken to see that the large worm gear turns. This will "walk" or disengage the gear teeth.

As the shaft emerges from the side of housing, it will force out the oil seal Item 9, seal cartridge Item 11 and ball bearing Item 7.


Withdraw the shaft from pump housing.

In order to remove ball bearing Item 7 from shaft, it is necessary to remove one or both truarc rings Item 6. Upon replacing, care should be taken to "walk" the two worm gears back together.

Be sure the two truarc rings Item 6 are in place and that seal and seal housing are in properly (the seal lips and seal expander spring should face into the pump). Make sure the "O" ring Item 8 is in its proper place. The shaft assembly should be inserted into the pump until shaft bearing Item 7 shoulders against the truarc ring Item 10 located near the inner edge of the hole into which the shaft is inserted.




GEAR BOX ASSEMBLY

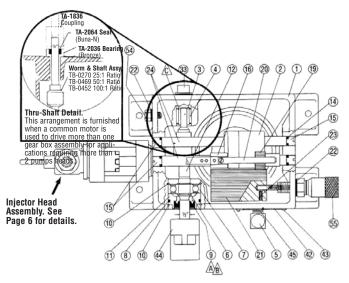

FLOW RATE ADJUSTMENT

Turn knob, Item no. 55, clockwise to decrease flow; counterclockwise to increase flow. Each complete turn of the knob results in 10% change in stroke setting. Each groove on the spindle, Item number 56, is equal to 25% change in stroke setting. To adjust pump while stopped, make sure plunger is in the full forward position. Maximum stroke length is 1".

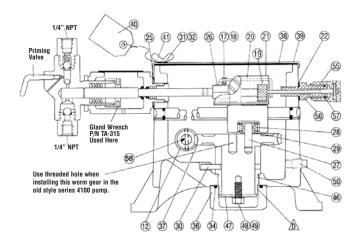

- * Recommended spare parts
- ** Item 44-alternate coupling for 48 frame TA-1836 1/2" x 1/2" These parts are directly interchangeable with Series 4100 and 4200 pumps. Apply Lubriplate 630 AA to wear surfaces of the following items:
- Guide & Crosshead Bearing Rod surfaces in contact with Crosshead. Worm Teeth & Gear Teeth. Seal Cartridge (Item 11). Worm Gear in contact with Lower Bearing (Item 46). Thrust Washer (Item 47). Surface in contact with Lower Bearing (Item 46).


Apply Lubriplate 631 PA or equal between Shaft & Seal lips. Assemble Oil Seal flush with end of Cartridge. Apply Lubriplate 630 AA or equal.

Use Locktite on threads.

PARTS LIST

ltem	Part Number	No. Reqd.	Name	Material				
1	TD-0492	1	Housing	Cast Iron				
2	TB-1333	1	Crosshead	Cast Iron				
3*			Inter Race Bearing	Carbon Steel				
4*	TA-2286	1	Needle Bearing	Carbon Steel				
5	TA-4066	1	Oil Gauge Assembly	Brass w/ Glass Tube				
6	TA-3310	2	Truarc Ring	Carbon Steel				
7*	TA-2285	1	Ball Bearing	Carbon Steel				
8*	TA-1961	1	O-ring	Buna-N				
9*	TA-2064	1	Seal	Buna-N				
10	TA-3311	2	Truarc Ring	Carbon Steel				
11*	TA-4045	1	Cartridge Seal	Carbon Steel				
12	TA-1871	1	Worm & Shaft Ass'y (25:1 Ratio)	Carbon Steel				
-	TA-2250	1	Worm & Shaft Ass'y (50:1 Ratio)	Carbon Steel				
-	TA-1755	1	Worm & Shaft Ass'y (100:1Ratio)	Carbon Steel				
13	TA-3319	1	Pipe Plug	Cast Iron				
14*	TA-3849	4	0-ring	Buna-N				
15	TA-4228	4	Retainer Rod	Carbon Steel				
16	TA-4755	1	Adjustment Bolt	Carbon Steel				
17	TA-3312	1	Lockwasher	Steel Cad Plated				
18	TA-4753	1	Round Head Screw	Steel Cad Plated				
19	TA-4757	1	Stroke Adjustment Gear	Nylon				
20	TA-4756	1	Guide Bar	304 SS				
21	TA-4758	1	Stroke Adjmt Drive Gear	Nylon				
22	TA-4759	2	Gasket	Buna-N				
23	TA-4894	1	Set Strew	Steel				
24	TA-4229	2	Crosshead Guide Rod	Carbon Steel				
25	TA-4256	2	Belleville Washer	302 SS				
26	TA-0290	1	Plunger Pin	Carbon Steel				
27	TA-4064	1	Bearing Stud	Carbon Steel				
28*	TA-4065	1	Crosshead Bearing	Carbon Steel				
29	TA-458	1	Washer	Carbon Steel				
30	TA-2337	1	Roll Pin	Carbon Steel Cad Plated				
31*	TA-4092	2	1/4" Stat-O-Seal	Buna-N				
32*	TA-4093	2	1/4" Gaskets	Neoprene				
33	TA-3309	1	Pipe Plug	Malleable Iron Galvanized				
34*	TA-2457	1	O-ring	Buna-N				
36	TA-1921	1	Сар	Ductile Iron				
37	TB-621	1	Worm Gear (25:1 Ratio)	Cast Iron				
	TB-616	1	Warm Gear (50:1 Ratio)	Cast Iron				
1	TB-623	1	Warm Gear (100:1 Ratio)	Cast Iron				
38	TA-4814	1	Cover Gasket	Neoprene				
39	TC-1576	1	Cover	Carbon Steel Galvanized				
40	TA-1656	1	Lubrication Instructions	Paper Tag				
41	TA-2970	2	Wing Screw	Carbon Steel Cad Plated				
42	GA-3181	1	Name Plate	304 SS				
43	TA-171	2	Escutcheon Pin	Brass				
44**	TA-1653	1	1/2" x 5/8" Coupling (56 frame motor)	TA-1836 1/2" x 1/2"				
45	TA-3325	1	1/4" Nipple	Carbon Steel Cad Plated				
46	TB-619	1	Lower Bearing	Ductile Iron				
47	TA-1930	1	Bottom Thrust Washer	Carbon Steel				
48	TA-2501	1	Machine Screw	Carbon Steel				
49	TA-459	1	3/8" Spring Lockwasher	Carbon Steel				
50	TA-138	1	Pipe Plug	Malleable Iron Galvanize				
51	See Pg. 6	1	Injector Heads					
54	TA-4795	1	Bolt	Steel Cad Plated				
55	TA-4795	1	Stroke Adjmt Knob & Scr					
		1						
56	TA-4761		Stroke neat Spindle	303 SS				
57	TA-2116	1	0-ring	Buna N				
58	TA-2351	1	Roll Pin	Carbon Steel				

series

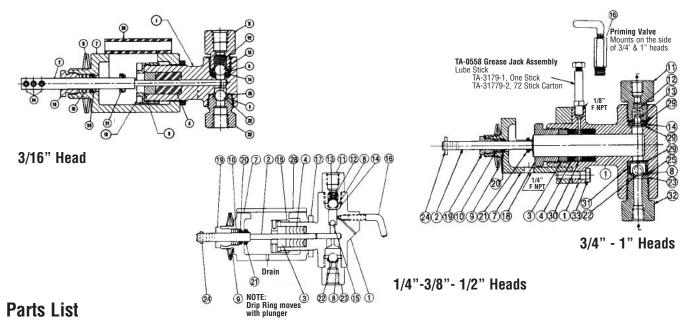

Parts List

2 3 4	Material Specification Body Plunger	Part Name	All SS	Ductile									
2 3 4	,		Trim	Iron w/SS Trim	All SS Trim	Ductile Iron w/SS Trim	All w/SS Steel	Ductile Iron w/SS Trim	All w/SS Steel	Ductile Iron w/SS Trim	All w/SS Steel	Ductile Iron w/SS Trim	All SS Steel
3 I 4 I	Plunger		TC-2040	TC-0275	TC-0291	TC-0276	TC-0425	TC-0272	TC-0349	TC-0333	TC-0340	TC-0020	TC-0138
4 I	i luliyol	17-4PH SS	TB-1471	TB-1175	TB-1175	TB-1176	TB-1176	TB-1177	TB-1177	TB-1351	TB-1351	TB-1352	TB-1352
4 I	Plunger Packing Gland	303 SS	TA-5642	TA-1463	TA-1463	TA-0957	TA-0957	TA-1219	TA-1219	TA-2769	TA-2769	TA-0043	TA-0043
	Plunger Packing Set (Buna N)	Buna-N	TA-3969	TA-1461	TA-1461	TA-1456	TA-1456	TA-0959	TA-0959	TA-2771	TA-2771	TA-0050	TA-0050
7 \	Yoke	Malleable Iron	TB-1173	TB-1173	TB-1173	TB-1173	TB-1173	TB-1173	TB-1173	TB-1884	TB-1884	TB-1884	TB-1884
8 (O-Ring (Included in item 23)	Buna-N	TA-0479	TA-0479	TA-0479	TA-0479	TA-0479	TA-0479	TA-0479	TA-0479	TA-0479	TA-0479	TA-0479
	Belleville Washer (2 Regd)	C. Steel	TA-4256	TA-4256	TA-4256	TA-4256	TA-4256	TA-4256	TA-4256	TA-4256	TA-4256	TA-4256	TA-4256
	Yoke Packing Set	Buna-N	TA-4892	TA-4127	TA-4127	TA-4127	TA-4127	TA-4127	TA-4127	TA-4127	TA-4127	TA-4127	TA-4127
	Top Bushing	302 SS	TA-1496	TA-1496	TA-1496	TA-1496	TA-1496	TA-1496	TA-1496	TA-0152	TA-0152	TA-0152	TA-0152
12 I	Ball Check Spring	316 SS	TA-0077	TA-0077	TA-0077	TA-0077	TA-0077	TA-0077	TA-0077	TA-0077	TA-0077	TA-0077	TA-0077
	Large Top Ball 3/8"	316 SS	TA-0054	TA-0054	TA-0054	TA-0054	TA-0054	TA-0054	TA-0054	TA-0054	TA-0054	TA-0054	TA-0054
	Top Seat-Assembly w/ Buna-N "O"-ring	303 SS	TB-0737	TB-0737	TB-0737	TB-0737	TB-0737	TB-0737	TB-0737	TB-0368	TB-0368	TB-0368	TB-0368
15 5	Small Top Ball 1/4"	316 SS	TA-0126	TA-0126	TA-0126	TA-0126	TA-0126	TA-0126	TA-0126	N/A	N/A	N/A	N/A
	Priming Valve (Ball & Spring incl. 3/16")	303 SS	TA-5462	TA-1497	TA-1497	TA-1497	TA-1497	TA-1497	TA-1497	TA-0123	TA-0123	TA-0123	TA-0123
17 \	Yoke Lock Nut	Brass	TA-0225	TA-0225	TA-0225	TA-0225	TA-0225	TA-0225	TA-0225	N/A	N/A	N/A	N/A
18 I	Nut, Plunger Packing Gland	303 SS	TA-4104	TA-4104	TA-4104	TA-4104	TA-4104	TA-4104	TA-4104	TA-2768	TA-2768	TA-0047	TA-0047
25 (Gasket	304 SS	TA-4394	N/A	N/A	N/A	N/A	N/A	N/A	TA-2338	TA-2338	TA-2338	TA-2338
	0-Ring	Buna-N	NA	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	0-Ring	Buna-N	NA	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	Yoke Cover	Plastic	TC-1604	TC-1604	TC-1604	TC-1604	TC-1604	TC-1604	TC-1604	N/A	N/A	N/A	N/A
	Gasket (3 Reqd)	Tern Plate	N/A	N/A	N/A	N/A	N/A	N/A	N/A	TA-2350	TA-2350	TA-2350	TA-2350
	Lantern ring	303 SS	N/A	N/A	N/A N/A	N/A	N/A	N/A	N/A	TA-2770	TA-2770	TA-0448 TA-0444	TA-0448
	Ball Cage Bottom Bushing	303 SS 303 SS	N/A N/A	N/A N/A	N/A N/A	N/A N/A	N/A N/A	N/A N/A	N/A N/A	TA-0444 TA-0153	TA-0444 TA-0153	TA-0444 TA-0153	TA-0444 TA-0153
32 1	Bottom Busining	303 33	N/A		-	ints for Corro			N/A	TA-0155	TA-0155	TA-0155	IA-0155
4	Plunger Packing	Viton 2400# Max.	TA 2067	TA-4102	TA-4102	TA-4101	TA-4101	TA-4103	TA-4103	TA-4657	TA-4657	TA-4658	TA-4658
4 1	Fluilger Facking	Teflon 1000# Max.		TA-4102	TA-4102	TA-4101 TA-1234	TA-1234	TA-4103	TA-4103	TA-2988	TA-4037 TA-298	TA-4038	TA-1013
		Hard 5000# Max.		TA-2295	TA-2295	TA-1234	TA-1875	TA-1874	TA-1874	TA-2772	TA-2772	TA-4135	TA-4135
8 (0-Rina	Viton	TA-2580	TA-2580	TA-2580	TA-2580	TA-2580	TA-2580	TA-2580	TA-2184	TA-2184	TA-2184	TA-2184
	Top Seat Assy. (M-to-M)	303 SS	N/A	TA-0806	TA-0806	TA-0806	TA-0806	TA-0806	TA-0806	TA-0157	TA-0157	TA-0157	TA-0157
22 I	Ball 1/2" (Use w/ TA-0771, M-to-M Bottom Seat Only)	316 SS	N/A	TA-0000 TA-0053	TA-0053	TA-0053	TA-0003	TA-0003	TA-0003	N/A	N/A	N/A	N/A
	Bottom Seat (M-to-M)	303 SS	N/A	TA-0771	TA-0771	TA-0771	TA-0771	TA-0771	TA-0771	TA-0751	TA-0751	TA-0751	TA-0751
-	O-ring	Viton	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A

*Recommended Spare Parts