


Model No. 2003

**The Beast**  
**15 N ONE Multi-Purpose**  
**Vehicle Jumpstart System**

**Instruction Manual**

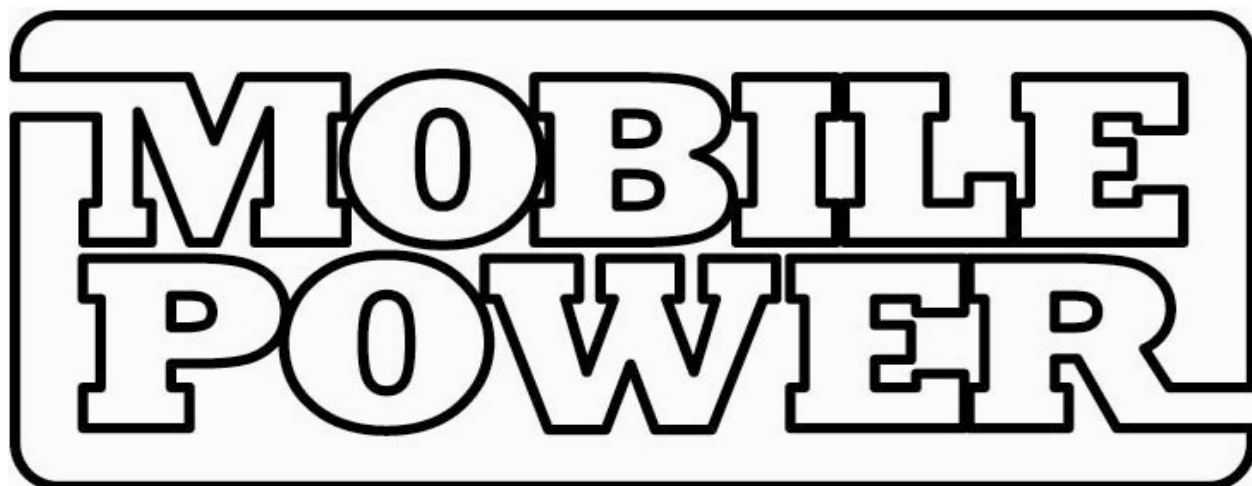

MobilePower, LLC. 198 Okatie Village Drive • Suite 103-312 • Bluffton, SC 29909  
[www. Mobilepower-us.com](http://www.Mobilepower-us.com) Office: (800) 708 - 8550  
[support@mobilepower-us.com](mailto:support@mobilepower-us.com)  
[customerservice@mobilepower-us.com](mailto:customerservice@mobilepower-us.com)

Model No. 2003

# THE BEAST


## 15 N ONE Multi-Purpose Vehicle Jumpstart System

MOBILE  
POWER




THE BEAST

Model No. 2003

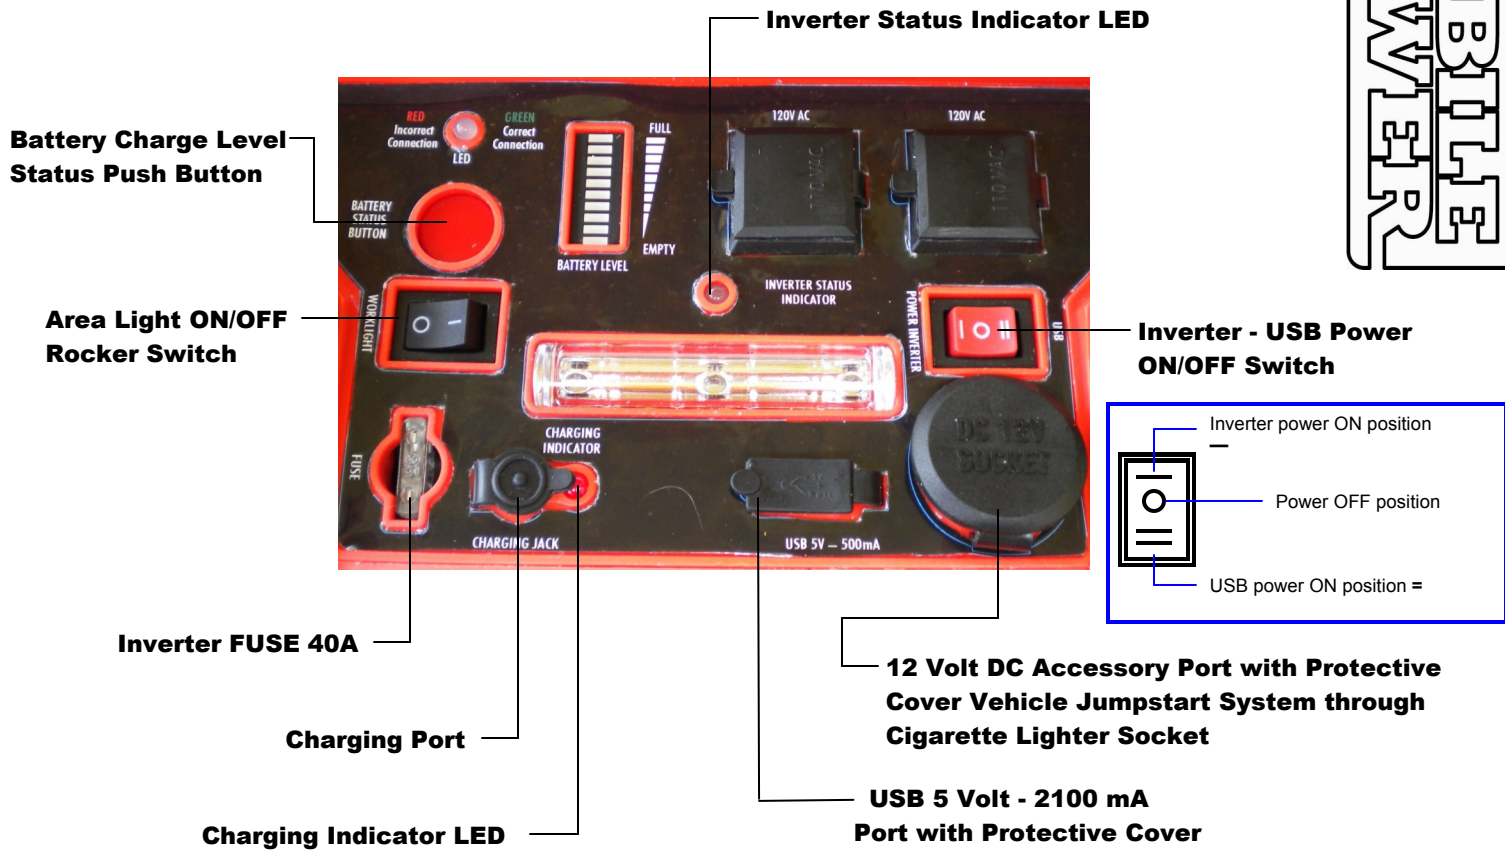

**Built-in AC charger with foldable prongs. Use 18 AWG extension cord to charge the internal lead acid battery**

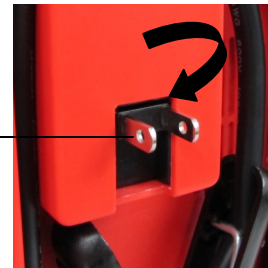

## IMPORTANT INFORMATION

READ AND UNDERSTAND ALL WARNINGS AND THE ADVISORY NOTES INCLUDED IN THIS MANUAL. FOLLOW INSTRUCTIONS PROVIDED BY YOUR VEHICLE MANUFACTURER AND MANUFACTURER OF THE DEVICES INTENDED TO BE USED WITH THIS POWER SUPPLY. MAKE CERTAIN THIS DEVICE IS FULLY CHARGED PRIOR TO FIRST USE.

## WARNINGS

THIS PRODUCT CONTAINS A SEALED LEAD-ACID BATTERY AND MUST BE DISPOSED OF PROPERLY. YOU MAY CONTACT YOUR LOCAL GOVERNMENT RECYCLING AUTHORITY FOR APPROPRIATE DISPOSAL. FAILURE TO FOLLOW THE INSTRUCTIONS MAY CAUSE DAMAGE TO THE PRODUCT AND OR PERSONAL INJURY.



## Model No. 2003

### **IMPORTANT ADVISORY NOTES**

- Do not use with dry cell batteries. These batteries may burst and cause injury to person or damage personal property.
- Do not attempt to face the battery being jumped. Stay away as far as possible from the battery when making the final connection.
- DO NOT CONNECT TO or jump start a 6 or 24 Volt battery.
- If battery acid comes in contact with skin or eyes, rinse immediately with water for 20 minutes. Seek medical attention if redness, irritation or pain is present.
- DO NOT smoke, use matches, lighters or an open flame near batteries.
- This products contains chemical substances including lead. Wash hands thoroughly after handling Lead Acid Batteries.
- Never allow red (Positive) and black (Negative) clamps to come in contact with each other or contact with metal object at the same time.
- To protect against electrical hazards, do not immerse charger, adapters, or unit in water or other liquid.
- Close supervision is necessary when working near children.
- Do not use unit for applications other than its intended use.
- Always connect the red (+) clamp to the positive battery terminal first. Connect black (-) clamp to the negative battery terminal as final connection.
- Jumpstart vehicles in a well ventilated area only.
- Do not expose this unit to moisture and use it in extremely hot conditions.
- Monitor the pressure gauge during use. Be careful not to over-inflate objects.
- Never work alone with this product. Make sure that someone is available to give assistance if needed.
- Wear complete eye and clothing protection. Do not touch eyes while working near battery.
- Do not attempt to remove or replace the battery used in this device. When the battery has reached the end of its useful lifetime, take the entire unit to a battery recycling facility.
- For proper and safe operation of the 12 Volt DC Power Accessory Port, do not place anything into it except the plug of the accessory to be used.
- Remove metal, personal jewelry, such as: rings, bracelets, necklaces and watches, while working with a lead acid battery. This can produce a short-circuit that may cause severe burns.
- Never charge or jump-start a frozen battery.
- Do not operate this device while wearing vinyl clothing. Static electricity may be generated when vinyl clothing is rubbed.
- This product is not intended for use in the rain or temperatures above 150°F.
- Use only the provided chargers, cables and clamps. Unauthorized parts may damage the unit.
- This product has no consumer serviceable parts except the replaceable fuses.
- Use of DAMAGED or IMPROPER extension cord to charge the BEAST could result in risk of fire and/or electric shock. Make certain that the extension cord is safe and in good electrical condition.
- The extension cord wire size shall be 18 gauge (AWG) or larger and 50 ft long or shorter.
- Make sure the prongs (blades) on the extension cord are the same size and shape as those of prongs used on the BEAST internal charger.
- Keep out of the reach of children.
- Keep battery terminals clean. Be careful to keep corrosion from coming in contact with eyes.
- Do not let the cords of this device or jumper clamps get wet.
- Prevent water to get into the BEAST housing. Water will damage the internal electronics board.
- This unit has a built-in lead acid battery. Although the BEAST arrives partially charged from the factory, it MUST be fully charged before the first use.
- Recharge the BEAST after each use or every 2 months preventing the battery voltage to become extremely low.

## Model No. 2003

### **FEATURES:**

15 in One Multipurpose AC and DC Power Supply with Instant Vehicle Jumpstart System. The unit provides: 400 Watt Continuous Power Inverter with two 120 VAC Protective Outlets - Air Compressor Heavy Duty Booster Cables with Insulated Clamps - Main Power Booster Cables ON/OFF Switch - Wide Angle Area Light - Two Detachable LED Flashlights with ON/OFF Push Lens - Reverse Polarity Protection - Internal Battery Charge Level Status Indicator LED Bars , Dual 12 Volt DC Accessory plugs with Charge/Booster Cable through vehicle 12 Volt DC cigarette lighter socket - USB power port with Protective Cover - Solar Panel Cell with Trickle Charging Feature - Air Nozzle Adaptors for most Inflatables - Reflective Safety Triangular Roadside Warning Sign - Foldable Handle for Vertical and Horizontal Operation Modes - Double Injection Casing with Rubberized Protective Bumper Guards. Includes Accessories Nylon bag to store AC extension cord, DC charger, 12 V cable and air nozzles.

### **SPECIFICATIONS:**

- BUILT-IN 12V 18AH RECHARGEABLE LEAD ACID BATTERY.
- 500 CRANKING AMPS - 1000 PEAK AMPS.
- 0.50 WATT SOLAR PANEL WITH TRICKLE CHARGING FEATURE.
- DUAL 12 VDC 10 AMP. RATED COVERED OUTPUT PORTS.
- USB 5 VOLT - 2100 mA OUTPUT PORT WITH PROTECTIVE COVER .
- HIGH POWER 400 WATT CONTINUOUS/800 WATT PEAK POWER INVERTER WITH 2 x 120 VAC COVERED OUTLETS.
- HIGH VOLUME AIR COMPRESSOR WITH NEEDLE DIAL GAUGE.
- BUILT-IN 110 VOLT - 600mA AC CHARGER WITH FOLDABLE PRONGS.

### **CHARGING INSTRUCTIONS:**

#### **CAUTIONS**

- Prior to charge this device, read and understand all the related instruction indicated below. Fully charge the unit when the Battery Status Indicator displays two bars. This product may arrive partially charged from the factory. It is highly recommended to fully charge the BEAST after purchase and before using for the first time.
- Make certain that all ON/OFF Power Switches are set in the OFF position.
- Do not charge the BEAST Power Supply near flammable material, open flame or any location which accumulate flammable fumes.
- Make certain the electrical outlet located in a potentially wet or moist area that is to be used to charge this device, is protected by a Ground Fault Circuit Interrupter (GFCI).
- Make sure that both booster clamps are securely placed in their designated storage compartments when not in use and during the charging period.

#### **A. AC Charging At Home with 110 Volt Charger**

1. Keep the Main Power Booster Clamps ON/OFF Switch in OFF position while charging.
2. Unfold the BEAST internal AC Charger prongs located on the side of booster clamp compartment.
3. Attach an 18 gauge (AWG) or larger wire gauge extension cord to the internal charger plug. (**Extension cord is included** ). Refer to page 3 of this manual.
4. Connect the other end of the extension cord into the 110 Volt AC home receptacle.
5. Fully charge the BEAST according to the following schedules:  
**First time charge: 36 hours**  
**Recharge and subsequent charge: 24 hours**
6. Unplug the extension cord from the 110 Volt receptacle first and then unplug the extension cord from the BEAST internal charger unit.

#### **B. DC Charging In Your Vehicle with 12 Volt Charger**

1. Keep the Main Power Booster Clamps ON/OFF Switch in OFF position while charging.
2. Insert the 12 Volt DC Charger round Plug into the BEAST Charging Port.
3. Connect the 12 Volt DC Charger Plug into the vehicle cigarette lighter or 12 Volt accessory port.
4. Fully charge the unit internal battery for 8 hours while the vehicle engine is running.
5. Unplug the DC charger from the vehicle cigarette lighter or 12 Volt accessory port first and then remove the round plug from the BEAST Charging Port.

## Model No. 2003

### **C. Solar Panel with Trickle Charging Feature:**

1. Expose the Solar Panel Trickle Charger to full sun for trickle charging and battery conditioning mode.
2. Leave the Solar Panel exposed to full sun to keep the internal battery charged at all time.

### **AIR COMPRESSOR OPERATING INSTRUCTIONS:**

#### **CAUTIONS**

- **Do not operate the Air Compressor more than 10 Minutes continuously. Allow the compressor to cool down for 10 to 15 minutes between each continuous operation.**
- **Review the products to be inflated for manufacturer's recommended maximum inflation pressure. Most tires are recommended to be inflated between 27 to 38 PSI.**
- **Always check the air inflation pressure with a separate and reliable pressure gauge during and after inflation.**

#### **A. TO INFLATE TIRES:**

1. Open the Compressor Air Hose Compartment access door at the left side of the BEAST and pull out the air hose. Make sure that the Nozzle Locking Lever is in the UP position.
2. Remove the valve cap from the tire valve stem.
3. Attach the compressor air valve nozzle onto the tire air valve stem and push down the air valve nozzle as far as it travels. Make certain it is seated properly.
4. Press down the Nozzle Locking Lever all the way down to securely lock the tire air valve stem. **IMPORTANT:** If the tire is completely deflated, raise the vehicle by utilizing a recommended rated lifting device and jack stand before inflating the tire.
5. Turn the compressor switch located on the front panel of the unit to ON position.
6. Monitor the pressure on the compressor air pressure gauge while inflating.
7. Turn OFF the compressor when the desired tire air pressure is reached.
8. Disconnect the air hose nozzle from the tire air valve stem by lifting Nozzle Locking Lever to the UP position.
9. Replace the tire valve cap onto the tire valve stem.
10. Stow the air hose into the Compressor Air Hose Compartment.

#### **B. TO INFLATE BALLS/AIR MATTRESSES/RUBBER RAFTS:**

1. Open the Compressor Air Hose Compartment access door at the back side of the Beast and pull out the air hose. Make sure that the Nozzle Locking Lever is in the UP position.
2. Remove the valve cap from the inflatable valve stem.
3. Attach the appropriate valve stem adaptor to the Air Hose Nozzle.
4. Press down the Nozzle Locking Lever all the way down to securely lock the valve stem adaptor.
5. Attach the compressor Air Valve Nozzle with the valve stem adaptor onto the air valve stem of the inflatable and push down the Air Valve Nozzle as far as it travels. Make certain it is seated properly.
6. Turn the compressor Power ON/OFF Switch located on the side panel of the BEAST to ON position.
7. Monitor the pressure on the compressor Air Pressure Gauge while inflating.
8. Turn OFF the compressor when the desired air pressure is reached.
9. Disconnect the Air Valve Nozzle from the Air Valve Stem.
6. Replace the Valve Cap onto the Valve Stem.
7. Stow the air hose into the Compressor Air Hose Compartment.

### **12 VOLT DC POWER PORT OPERATING INSTRUCTIONS:**

**IMPORTANT:** The Internal auto-reset Circuit Breaker will automatically interrupt the power if the current drawn exceeds 10Amp. This feature prevents damage to the BEAST internal circuits. Internal Circuit Breaker will automatically reset after cooling period (Approximately 10-25 minutes).

1. Remove the 12 Volt DC protective cover.
2. Insert the device 12 Volt accessory plug that can be powered by a power supply into the 12 Volt power port of the BEAST.
3. Turn on the power of the 12 Volt DC device being powered by the BEAST unit.

## Model No. 2003


### 400 WATT AC INVERTER OPERATING INSTRUCTIONS:

**SYSTEM NORMAL OPERATION** ————— **GREEN LED**  
**OVERLOAD** ————— **RED LED**  
**LOW BATTERY OR LOW INPUT POWER** ————— **RED LED**

1. Prior to connecting the device to be powered to the inverter, make sure the inverter power switch is in OFF position.
2. Prior to plug in the device, make sure the device power switch is OFF and ensure the current drawn by this device is not to exceed 400W maximum power consumption.
3. Remove the plastic protective covers from the inverter receptacles.
4. Connect the device 110 Volt AC electrical plug into the inverter receptacle.
5. Turn ON the inverter power switch to "I" position. If the inverter is operating properly, the green LED indicator will illuminate. Now turn ON the device. If the green indicator remains on, the system is operating properly. If the inverter green LED light turns RED, turn off the device then turn the power switch to "O" position to turn OFF the inverter immediately. See the trouble shooting guide. The inverter may have been over loaded or the input voltage may be too low.

#### **CAUTION:**

Some rechargeable devices are equipped with a separate charger, which can be connected into this inverter AC receptacle. However certain rechargeable devices are manufactured with built-in chargers (see device owner's manual). This category of devices may cause internal damage to inverters and should not be used with this inverter. The temperature of the device must be monitored for the first 15 minutes of operation. Abnormally elevated temperature of the device is an indication that they should not be used with this inverter.

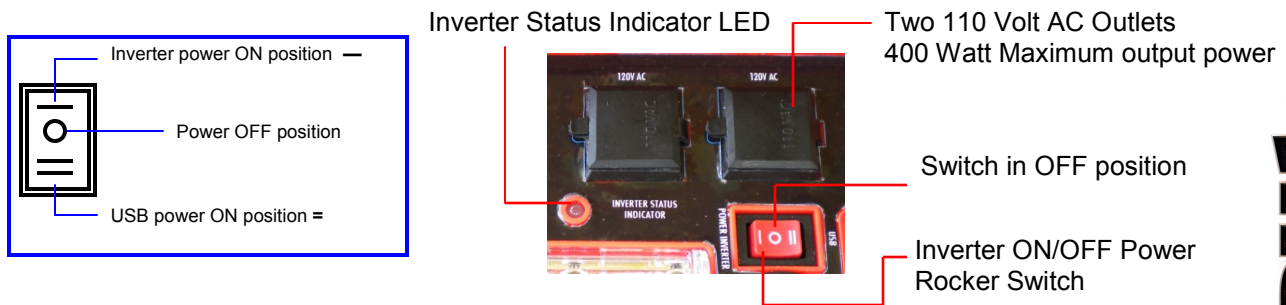

### VEHICLE BOOST START USING THE DUAL 12VDC PLUG BOOSTER CABLE:

**WARNINGS:** Vehicles equipped with on-board computers may be damaged if the vehicle is jump started. Read and understand your vehicle owner's manual instructions before attempting to jump-start your vehicle. Failure to follow these advisory instructions may result in explosion.

1. Turn off the vehicle ignition and all the accessories (Such as radios, lights, and air conditioners, etc.).
2. Apply the emergency brake and put those vehicles with automatic transmission in park position.
3. Place the BEAST unit in the vehicle front passenger side floor board.
4. Connect the Booster Cable 12 Volt DC plug with LED power indicator into the vehicle cigarette lighter or 12Volt DC socket.
5. Connect the other end of the Booster Cable into the BEAST unit 12 Volt DC port. Make certain a good connection is made.
6. Allow a minimum of 20 minutes for the vehicle depleted battery to boost charge.
7. Disconnect the dual 12 Volt DC plug Booster Cable from the vehicle and from the BEAST 12 Volt DC port.
8. Start the vehicle engine.



## Model No. 2003

**NOTE:** If the vehicle fails to start, reconnect the dual 12 Volt DC plug Booster Cable to the vehicle and the BEAST 12 Volt DC port. Allow an additional 20 minutes for boost charge before attempting to restart vehicle again.

### 110 Volt AC Household Electronic Devices Powered by Power 400 built-in 400 Watt inverter

<u>Electronics Device</u>	<u>Power Consumption</u>	<u>Approximate Operating time</u>
Small Utility light	2 Watt	35 Hours and 40 Minutes
iPhone/iPod/MP3	4 Watt	17 Hours and 50 Minutes
Cell phone Chargers	5 Watt	17 Hours and 30 Minutes
Radios	8 Watt	9 Hours
Fans	20 Watt	3 Hours and 30 Minutes
Power tool chargers up to 10 Volt	25 Watt	3 Hours
Digital/Video Camera	30 Watt	2 Hours and 30 Minutes
9" portable TV	50 Watt	1 Hours and 50 Minutes



**IMPORTANT NOTE:** The above listing is prepared for reference purposes ONLY. Certain electronic devices exceed the power consumption wattage listed. Prior to powering the intended electronic devices, refer to and review the Instruction Manual for actual wattage requirement.

### USB OUTPUT PORT:

1. Prior to connecting the device to be powered to the USB port, make sure the USB power switch is in OFF position. The power switch must be positioned in the middle.
2. Prior to plug in the device to the USB port, make sure the device power switch is OFF position.
3. Using the USB cable included with your electronic device to be powered or charged, connect the USB plug into the USB port of the BEAST.
4. Connect the other end of the cable to the into the electronic device.
5. Press the USB port Power Switch to ON (II) position. The device with built in rechargeable battery will start charging automatically. Turn ON the electronic device and use as normal after charging.
6. After using the USB port, the USB Power Switch must be turned to OFF (O) position, Otherwise the
7. internal battery of the BEAST will be slowly depleted, although there is no electronic device attached to the USB port.
8. Turn OFF the electronic device and disconnect the cable from the USB port.

### INTERNAL BATTERY CHARGE LEVEL:

- Press and hold the Battery Charge Level Status Push Button to determine the unit internal battery charge level prior to each use.
- The battery Charge Level bars illuminate indicating the Status of the battery Charge.

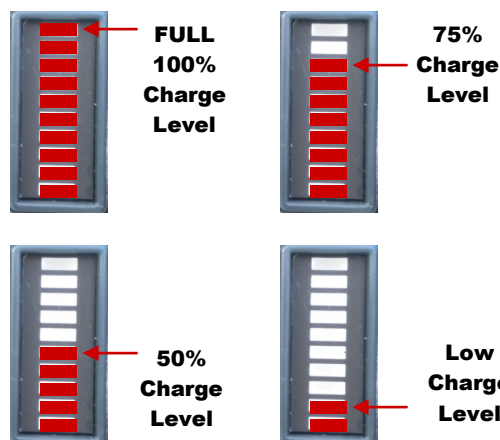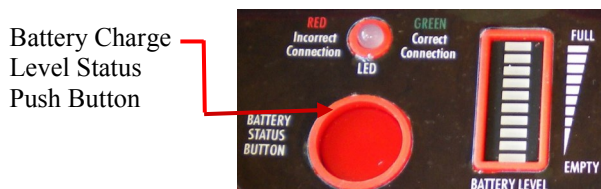

### VEHICLE JUMP START INSTRUCTIONS:

**WARNINGS:** Vehicles equipped with on-board computers may be damaged if the vehicle is jump started. Review and understand your vehicle owner's manual instructions before attempting to jump-start your vehicle. Failure to follow these advisory instructions may result in personal injury and property damage. Use Safety Glasses to protect your eyes while working near battery during jump-starting a vehicle. Jump start a vehicle in an open area without any type of obstructions.



## Model No. 2003

**CAUTIONS: Make certain that the BEAST Main Booster Power Switch is in OFF position before starting to jump start a vehicle.**

1. Turn off the vehicle ignition and all the accessories (Such as radios, lights, and air conditioners, etc.).
2. Apply the emergency brake and put those vehicles with automatic transmission in park position.
3. Determine the polarity of the vehicle battery terminals. The positive (+) battery terminal normally is larger in diameter than the negative (-) terminal. If you are unsure, you must refer to the vehicle owner's manual.
4. Determine whether your vehicle designed with a negative or positive grounded system: In the Negative Ground System, the negative battery terminal is grounded to chassis of the vehicle. Most vehicles use this type of system. Positive Grounded battery terminal is grounded to chassis or any other part of the vehicle. If you are not certain of this important information, YOU MUST REFER TO YOUR VEHICLE OWNER'S MANUAL.
5. Remove clamps from the holders. Never allow clamps (positive & negative terminals) to touch together or contact the same piece of metal to prevent short-circuits.
6. Follow the instructions for a Negative Grounded System or Positive Grounded System as indicated below:

### Negative Grounded System

- I. Connect the RED CLAMP (positive +) to the positive terminal of the vehicle battery or the remote positive terminal if available.
- II. Connect the BLACK CLAMP (negative -) to the vehicle engine block, or a metal part of the vehicle which is connected to the vehicle main ground system. Do not clamp directly to negative battery terminal, main fuel distribution module or sheet metal parts.
- III. The Polarity Protection System GREEN LED is illuminated if the proper connections have been made. **WARNING: If RED LED is illuminated, DISCONNECT the booster clamps from battery terminals. Reconnect the booster clamps by reversing the connections to the proper battery polarity.**


### Positive Grounded System:

- I. Connect the BLACK CLAMP (negative -) to the negative terminal of the vehicle battery.
- II. Connect the RED CLAMP (positive +) to the vehicle engine block, or a metal part of the vehicle which is connected to the vehicle ground system. Do not clamp directly to positive battery terminal, main fuel distribution module or sheet metal parts.
- III. The Polarity Protection System GREEN LED is illuminated if the proper connections have been made. **WARNING: If RED LED is illuminated, STOP and disconnect the booster clamps from battery terminals. Reconnect the booster clamps by reversing the connections to the proper battery polarity.**


7. Turn on the Main Power Booster Clamps Switch by rotating the switch to the ON position.
8. Allow 3 to 5 minutes of charge time. It is highly recommended having a second person to assist holding the unit securely in place during the next steps.
9. Start the engine and Stop if the vehicle does not start after 2 to 3 seconds of engine cranking. Wait 2 to 3 minutes then try again. Repeat the above steps several times until the vehicle starts.
10. If the vehicle starts, turn off the Main Power Switch by turning the switch to the OFF position.
11. Disconnect the clamps as far away from the vehicle battery as possible.  
For Negative Grounded System, disconnect the BLACK CLAMP Negative first and then the RED CLAMP Positive. For Positive Grounded System, disconnect the RED CLAMP Positive first, and then the BLACK CLAMP Negative.
12. Stow the booster clamps into their storage compartment.

**Model No. 2003**

## AREA LIGHT WIDE ANGLE BEAM:

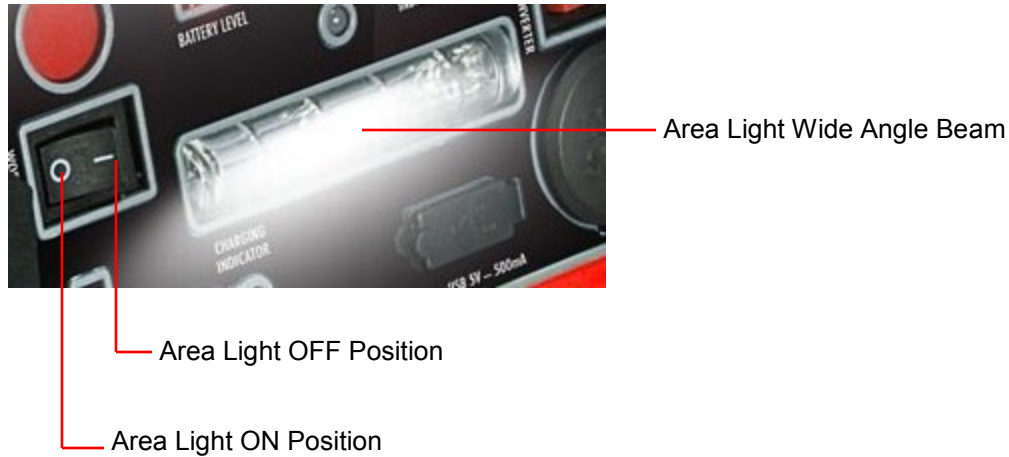

## Detachable LED Flashlight :

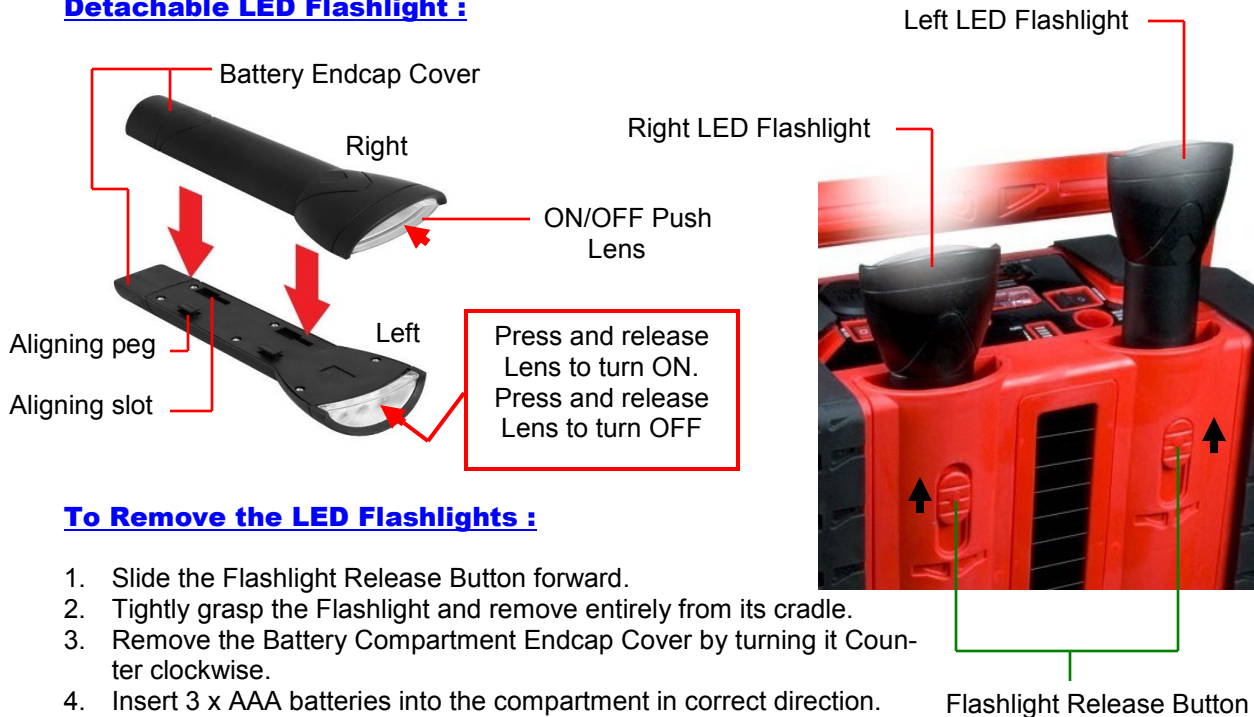

## To Remove the LED Flashlights :

1. Slide the Flashlight Release Button forward.
2. Tightly grasp the Flashlight and remove entirely from its cradle.
3. Remove the Battery Compartment Endcap Cover by turning it Counter clockwise.
4. Insert 3 x AAA batteries into the compartment in correct direction.
5. Replace the Battery Compartment Endcap Cover and securely tighten the battery Cover in clockwise rotation.
6. To turn ON the Flashlight, press firmly on the surface of the lens. Press on the lens again to turn OFF the Flashlight.
7. To assemble two half Flashlights together, firmly hold the Flashlight marked "L" and place the Right Flashlight marked "R" over the Left light by aligning the pegs with the slots on both half Flashlight.
8. Hold both half lights tightly against each other and push all the way forward, transforming to one powerful LED spotlight.

**Model No. 2003**

## TROUBLESHOOTING GUIDE:

TROUBLE	RECOMMENDED SOLUTION
Vehicle does not start	<p>Make sure the Polarity Protection Green LED is illuminated. Turn the Main Power Switch to ON Position to allow power into the booster clamps.</p> <p>DO NOT turn the Main Power Switch to ON position if the Polarity Protection RED LED is illuminated. Disconnect both booster clamps and reconnect the Booster Clamps to the proper polarity.</p> <p>Allow the BEAST to stay connected to the vehicle battery for a longer period of time. Wait 6 to 8 minutes before attempting to start the vehicle again.</p> <p>Recharge the BEAST to a FULL charge status.</p> <p>Replace the vehicle battery or visit workshop/garage for further assistance.</p>
110 V electronic device does not operate with the 400 Watt inverter	<p>Recharge the BEAST to a FULL charge status.</p> <p>Check for proper rated power required to turn on the electronic device. If the electronic device wattage is rated above 400 Watt, remove the Device since the operating wattage is above the maximum output power of the inverter.</p> <p>Check the connection of the electric device to the inverter receptacle.</p> <p>Check the inverter fuse. To replace the inverter fuse, using a needle nose pair of pliers or fuse puller, remove the old fuse and replace with a 40A blade type fuse</p>
12 Volt DC devices connected to the 12 Volt output port of the BEAST does not operate.	<p>Recharge the BEAST to a FULL charge status.</p> <p>Insert the device 12 Volt plug properly into the BEAST DC output port</p> <p>Internal Circuit Breaker is OFF. Remove the 12 Volt Accessory plug from The BEAST 12VDC output port. Wait 15 - 25 minutes for automatic Reset to regain power.</p>
Compressor does not turn on.	<p>Recharge the BEAST internal battery to Full charge.</p>
Compressor does not inflate	<p>Make sure the hose nozzle is properly seated and the locking lever is in down position.</p> <p>Repair air hose if possible.</p> <p>Allow 10 - 15 minutes for compressor to cool down before re-use.</p>
USB powered device connected to the USB of The BEAST doesn't function	<p>Press the USB output port SWITCH to ON position (—)</p> <p>Insert the device USB plug properly into the BEAST USB port.</p>

## Model No. 2003

### SPECIFICATIONS:

- Battery rated capacity \_\_\_\_\_ 12 Volt - 18 Ah
- Power inverter power output \_\_\_\_\_ 400 Watt
- Air Compressor \_\_\_\_\_ 100 PSI
- Solar panel output power \_\_\_\_\_ 0.50 Watt
- Two Detachable LED Flashlights \_\_\_\_\_ Three bright white LED  
Powered by 3 x AAA each Flashlight
- 12 Volt DC output ports output Amp. \_\_\_\_\_ 10 A
- USB ports output rating \_\_\_\_\_ 5 Volt - 2100 mA
- LED work-light \_\_\_\_\_ 120 mA
- Unit dimensions \_\_\_\_\_ 14 5/8" H x 10 3/8" W x 6 3/8" D
- Unit weight without AC/DC charging adaptors \_\_\_\_\_ 17 lbs.

NOTE: Specifications are subject to change without notice.



### LIMITED PRODUCT WARRANTY AND LIABILITY

MobilePower, LLC. warrants to the original purchaser that the Vehicle Boosting System shall be free from material defects in constructing material and workmanship for a period of two years from the original date of purchase except the internal Lead Acid rechargeable battery pack warranted for a period of one year. If the product is determined by MobilePower, LLC. to be defective in material and workmanship during the warranty period, MobilePower, LLC. will repair or replace the defective product or defective accessories/components with the factory original specifications product at MobilePower, LLC. option. The original purchaser is entitled to obtain this warranty with the proof of purchase within the warranty period. To obtain a return authorization and shipping instructions related to the warranty services in North America visit us at [www.mobilepower-us.com](http://www.mobilepower-us.com) or call (800) 708 – 8550 Customer Support or contact us at [support@mobilepower-us.com](mailto:support@mobilepower-us.com). You may ship the defective product with freight prepaid to MobilePower, LLC. Your replacement will be mailed back to you at no additional charge.

Great care must be taken when packing the product and all associated accessories into a suitable packing box along with original dated purchasing receipt or invoice. The package must include a letter stating the defect details, contact information including physical address. Any address with a PO Box will not be processed and will be held until further notification from the consumer. Make certain that your package can be tracked when you are shipping the defective products to us. MobilePower, LLC will not be responsible for lost packages sent by consumers. MobilePower, LLC. Will not be responsible for damages incurred during shipment to our facilities. Failure to provide the original purchase receipt or proof of purchase will render this warranty invalid.

THIS WARRANTY SHALL NOT APPLY IF THIS PRODUCT (A) IS DAMAGED RESULTING FROM ABUSE, MISUSE, NEGLIGENCE, ACCIDENT, LACK OF MAINTENANCE, WEAR AND TEAR, UNREASONABLE USE OR BY OTHER CAUSES UNRELATED TO THE DEFECTIVE MATERIAL OR WORKMANSHIP; (B) IS USED WITH PRODUCTS THAT ARE NOT COMPATIBLE WITH VEHICLE BOOSTING SYSTEM; (C) IS USED FOR COMMERCIAL PURPOSES; (D) IF THE PRODUCT HAS BEEN SUBJECTED TO WATER AND FIRE.

This warranty provides you with specific legal rights, and you may also have other rights which vary from state to state. This warranty is valid only in North America.

**MobilePower, LLC. 198 Okatie Village Drive . Suite 103-312 . Bluffton, SC 29909**  
**[www. Mobilepower-us.com](http://www.Mobilepower-us.com) Office: (800) 708 - 8550**  
**[support@mobilepower-us.com](mailto:support@mobilepower-us.com)**  
**[customerservice@mobilepower-us.com](mailto:customerservice@mobilepower-us.com)**

Made in China