

Product function:

- Maxgear – Cross shot converter – for Xbox one controller on Xbox 360 and PC is an adapter that allows you to connect your Wired Xbox One™ controller (connect with charge cable) to your Xbox 360™/Xbox 360™ Slim console with the ability to remap all buttons to how you want it to be.
- Support button mapping.
- Can map multi-keys function into one key. (with this Marco programming, you are able to program special modes like: auto drop shot, auto burst, active reload, sniper breath, super aim, quick scope etc for FPS games. Regarding to different FPS games with different setting, you are able to program without waiting for the new marco program from the PC), and of course -no need to modify or solder your controller and console.
- Built in Rapid fire function.
- Compatible with PC and all versions of Xbox 360™ consoles.
- Compatible with Xbox 360™/Xbox One™ wired controller (connect with charge cable).
- Support firmware update via PC.
- You are able to enjoy Trigger vibration effect of Xbox one controller on Xbox 360 /PC games.

Device introduction:



<1> USB port, connect to the Xbox 360™ console.

<2> Rapid fire/Turbo LED indicator.

<3> Program LED indicator.

<4> Program key.


<5> Rapid fire/Turbo key.

<6> Vibration/Rumble key.

<7> Vibration/Rumble key LED indicator.


<8> USB port (For connecting to Xbox One™ and Xbox 360™ wired controller).

How to connect:

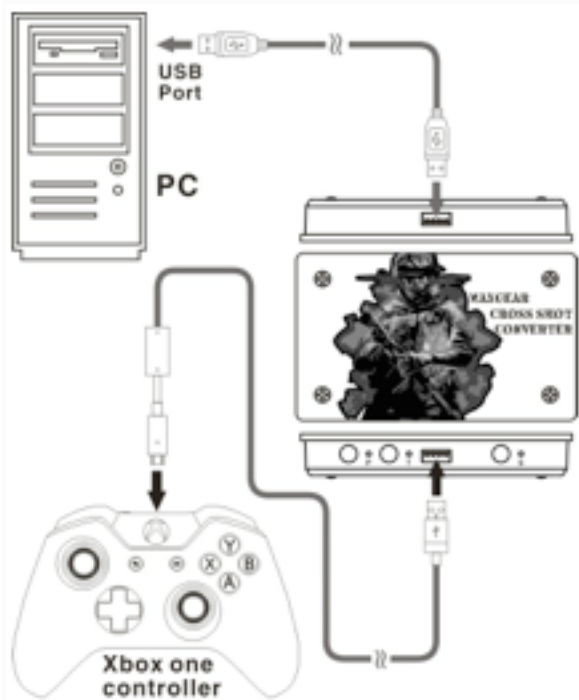

Maxgear – Cross shot converter connects to PC

Install the Xbox 360™ controller driver before starting to play, please download it from our web site <http://maxbuy.cc/>

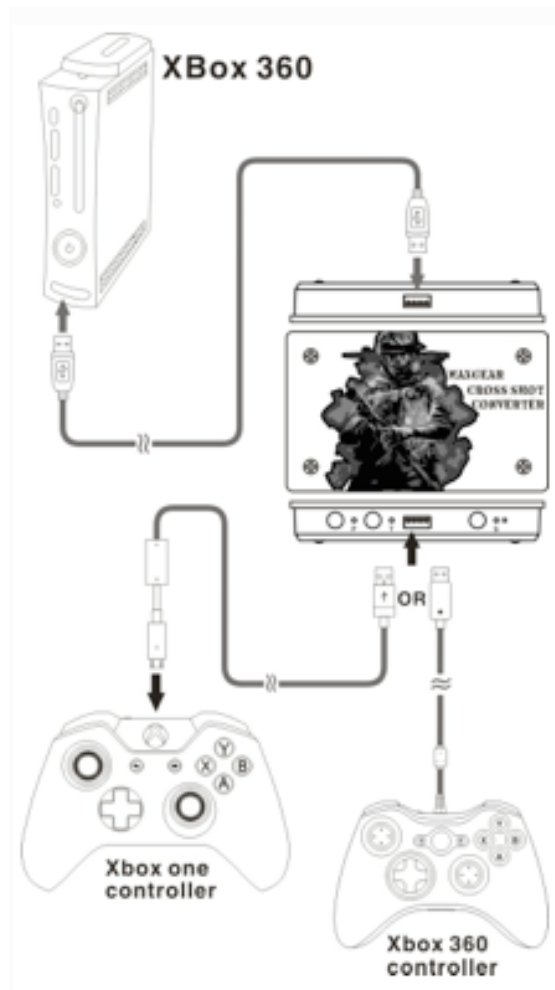

Default configuration chart:

The default buttons mapping to Xbox 360™/Xbox one™ controller, is shown on the table below:


Xbox one Controller	Xbox 360 Controller
MENU	START
VIEW	BACK
RT	RT
LT	LT
RB	RB
LB	LB
A	A
B	B
X	X
Y	Y
LC	LC
RC	RC
↑	↑
↓	↓
←	←
→	→
ANALOG-L	ANALOG-L
ANALOG-R	ANALOG-R
GUIDE	GUIDE

How to use the Rapid fire function:


The Wired Xbox One™ controller (connect with charge cable).or Xbox 360™ wired controller connected to the Maxgear – Cross shot converter device will have the Rapid fire function.

For instance, if you want the rapid fire function to be on the A button of the wired Xbox One™ controller (connect with charge cable)., simply follow the steps shown below:

1. Press the T key <5>on the device, the T key LED indicator <2> turns to ON.
2. Press the A button on Xbox One™ controller, the T key LED indicator <2> turns off, the setting is completed, the rapid fire function is set on to the A button of the Xbox One™ wired controller (connect with charge cable)., (the A button on the Xbox 360™ controller has the rapid fire function right now), to erase the rapid fire function, repeat the previous procedure.

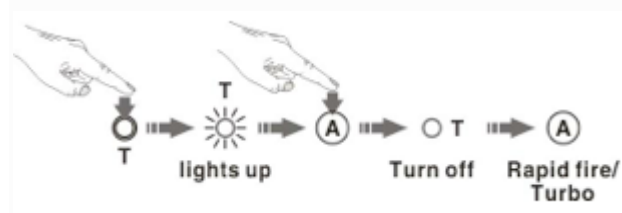

3. If you want to remove all the rapid fire function on all the buttons, press and hold the T key <5> for 3 seconds, the T LED indicator <2> blinks, release the T key <5>, the T LED indicator <2> lights off, all the rapid fire function on buttons are removed.
4. The setting will be remained inside the Maxgear-Cross shot converter device for next gameplay (for using on the same game).

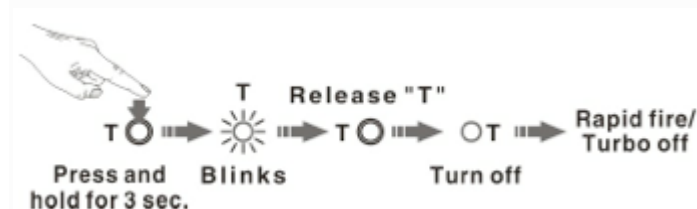


5. Maxgear-Cross shot converter has 2 rapid fire modes:

The fastest rapid fire speed mode: 20 shots per sec.

The normal rapid fire speed mode: 5 shots per sec.

How to set the rapid fire mode:

Press the T button, the T button LED indicator lights up, press the UP direction on the D-pad , the T button LED turns off, the rapid fire speed is now set to the fastest speed (20 shots per sec.) , press the down direction on the D pad , the rapid fire speed will change to the normal speed (5 shots per sec.).

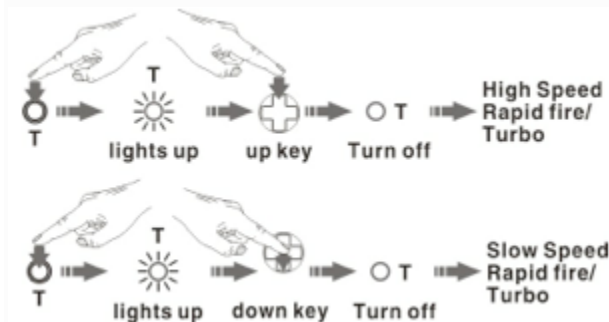


Set the Xbox one controller Triggers' Vibration/Rumble function:

Maxgear – Cross shot converter built in with On/Off Triggers' Vibration/Rumble function key for gamers.

Press the “S” key <6> , the Vibration/Rumble key LED <7> lights up , the Vibration/Rumble function on RT and LT of Xbox one controller turns off.

Press the “S” key again, the Vibration/Rumble key LED <7> lights off , it will turn on the Vibration/Rumble function of RT and LT on Xbox one controller.

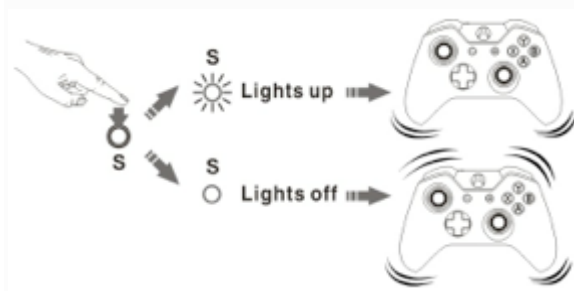


Re-mapping the button:

A. Single button re-mapping

a. If you want to remap the “RT” button to the “RB” button on your controller.


- Press the P key <4> once and wait until the P key LED indicator <3> lights up, now press the “RT” button, and press the P key <4> again, the P key LED indicator <3> blinks, press

the “RB” button now, the P key LED indicator <3> lights off , the “RB” button functions has been set to the “RT” button function, the original function of the “RB” button will be temporarily replaced by the “RT” function, the function of the “RT” button will still be the same.

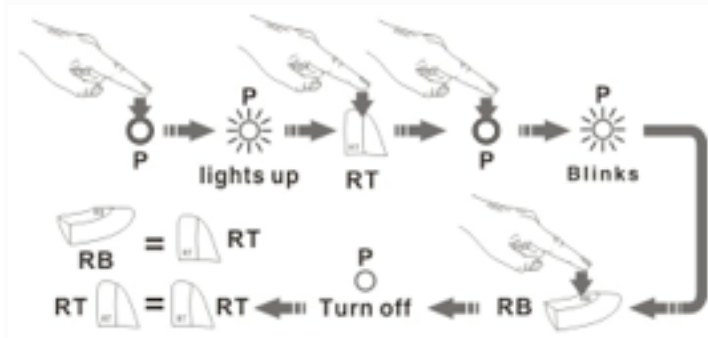

b. If you want to erase the setting on the “RB” button

- Press the P key <4> once and wait until the P key LED indicator <3> lights up, now press the “RB” button, then press the P key <4> again, the P key LED indicator <3> blinks, press the “RB” button now, the P key LED indicator <3> lights off ,the “RB” button restores to its original function.

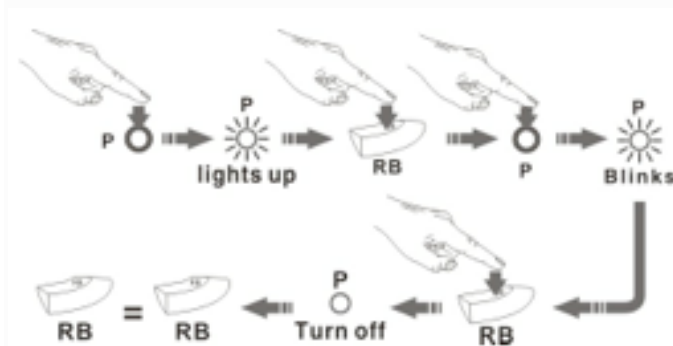


c. Exchange the “RT” and “RB” function:

1. Press the P key <4> once and wait until the P key LED indicator <3> lights up, press the “RB” button, and press the P key <4> again, the P key LED indicator <3> blinks, press the “RT” button now, the P key LED indicator <3> lights off.
2. Press the P key <4> once and wait until the P key LED indicator <3> lights up, press the “RT” button, press the P key <4> again, the P key LED indicator <3> blinks, press the “RB” button now, the P key LED indicator <3> lights off, you had just exchanged the “RT” and “RB” function.

B. Mapping multi-keys' function to a single key.


a. If you want to map the "A,B,X," 3 buttons on the Xbox One™ controller to the "RT" button.

You will have to press the P key <4> once and wait until the P key LED indicator <3> lights up, now press the "A,B,X" 3 buttons on xbox One™ controller in proper order then press the P key <4> again, the P key LED indicator <3> blinks, press the "RT" button on the controller, the P key LED indicator <3> turns off. Now if you press the "RT" key (on the controller) it's the same as pressing down "A,B,X," 3 buttons simultaneously.

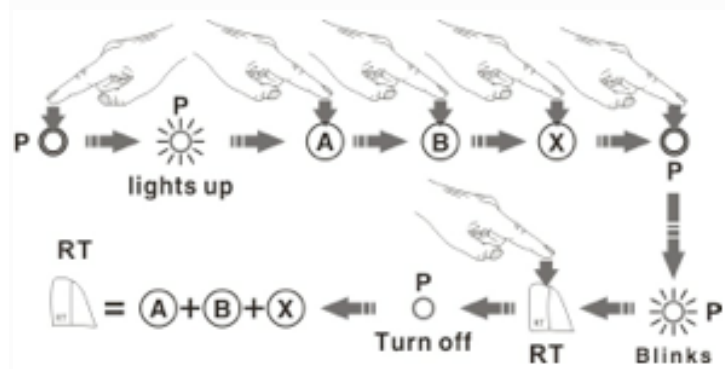


b. Remove this combo mapping mode on the "RT" button. Step:

Press the P key <4> once and wait until the P key LED indicator <3> lights up, press the "RT" button, and press the P key <4> again, the P key LED indicator <3> blinks, press the "RT" button again, the P key LED indicator <3> is now turned off, you have now removed the settings on the "RT" button.

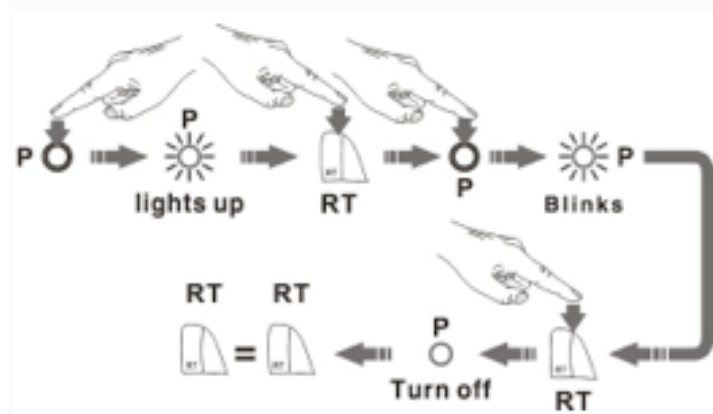

If you want to erase all the custom setting, press and hold the P key <4> for 3 sec the P key LED indicator <3> blinks, release the P key <4>, the P key LED indicator <3> turns off, all of the custom setting are removed.

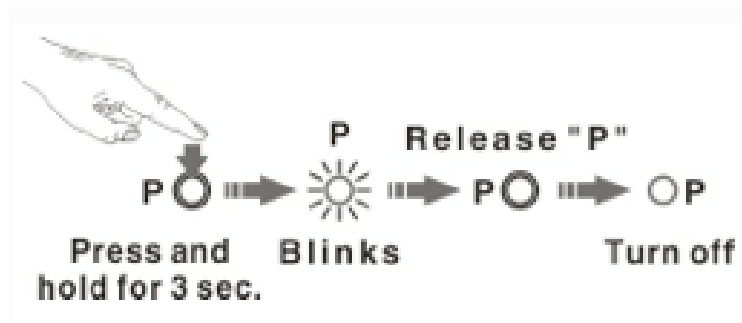

Maxgear – Cross shot converter firmware can be upgraded via PC. More information can be found on www.maxbuy.cc