

## XFPS PC Magic box 2 manual

### XFPS PC Magic box 2

#### Usage manual

Before using this product, please read this manual carefully and retain it for future reference.

#### Function and Feature:

 
The XFPS PC Magic Box 2 allows you to use an Xbox 360™ (wired/wireless) and PS3™ controllers with PC games. Although the Xbox 360™ controller can be used on the PC but due to lack of keys remapping function, gamers may find the gaming controllers quite difficult to use on some PC games. The XFPS PC Magic Box 2 compliments this need. You're now able to remap any key on the keyboard to the game controller, using the right buttons/triggers to shoot, the right button for punch or kick etc. and many more with the XCM PC Magic Box 2. This device is user friendly and also adds auto fire function. Let's start to play the PC games in another mode!

#### Function and feature:

1. Supports both Xbox 360™ (wired/wireless) and PS3™ controllers with PC games. \*NOTE: if using with Xbox 360 wireless controller, the Xbox 360™ PC Wireless Gaming Receiver must be required.
2. Supports rumble function.
3. Supports Xbox 360™ wired or wireless headset.
4. Supports PS3™ SixAxis tilt function
5. 8 built-in independent auto fire buttons
6. You are able to re-map the keys on keyboard to the Xbox 360™ or PS3™ controller.
7. PC will recognize PS3™ controller as Xbox 360™ controller, so the PS3™ controller can be able to use on all PC games. \*NOTE: most PC games won't recognize PS3™ controller but XCM PC Magic Box 2 will trick PC into

thinking a Xbox 360™ controller is plugged in. Xbox 360™ controller has better compatibility with PC.

Layout:

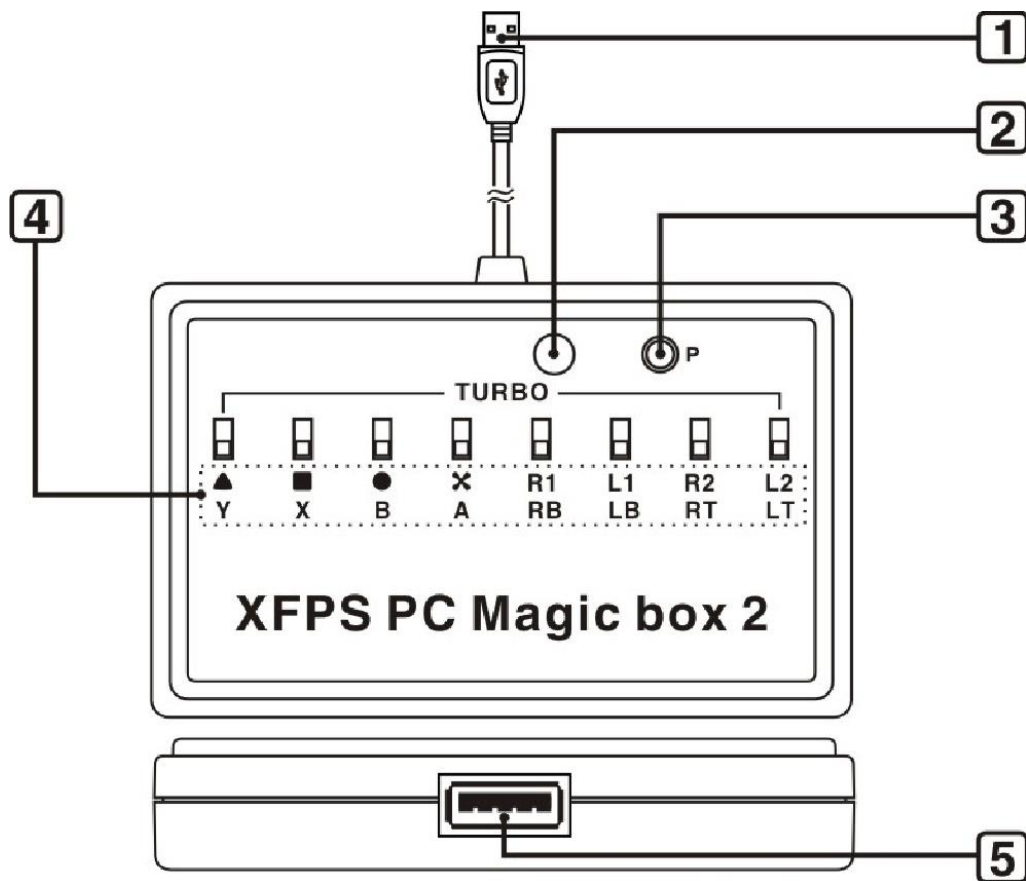

< 1>----USB plug

Connect to PC.

< 2>----Status indicator

< 3>----Programming button (P)

< 4>----Auto fire ON/OFF

< 5>---- USB port

Connect the Xbox 360™/PS 3™ wired controller or the Xbox 360™ PC Wireless Gaming Receiver

Install the driver:

 
If you want to connect the Xbox 360™ wired controller via XFPS PC Magic Box 2 to PC, you have to install the Xbox 360 Controller for Windows software and driver. To download the software and driver, visit Microsofts official web site

<http://www.microsoft.com/hardware/en-us/p/xbox-360-controller-for-windows#support>

If you want to connect the Xbox 360™ PC Wireless Gaming Receiver via XFPS PC Magic Box 2 to PC, you have to install its driver, please check it from the Xbox 360™ PC Wireless Gaming Receiver user manual.

After you installed the Xbox 360 Controller for Windows software and driver, you are able to use the PS3 controller on PC as well.

Connect to PC

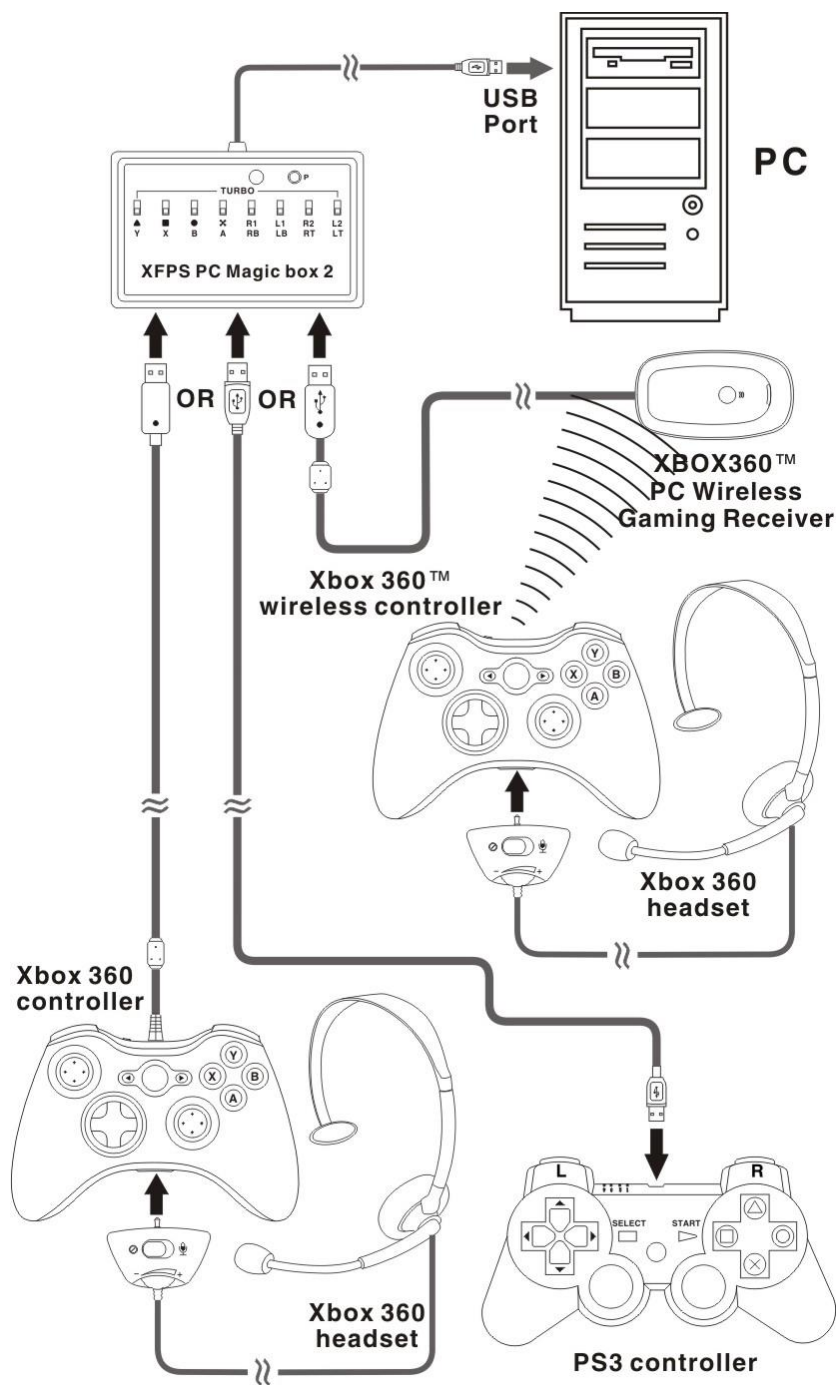

1. Connect the Xbox 360™ wired controller via XFPS PC Magic Box 2 to PC.

Firstly plug in the Xbox 360™ wired controller to XFPS PC Magic Box 2, then plug the XFPS PC Magic Box 2 to the PC USB port, wait until the Status indicator <2> will light up GREEN. This means the connection is successful. The Xbox 360™ wired controller can be used with the Xbox 360™ headset and the rumble function also been functioning.

2. Connect the Xbox 360™ wireless controller via XFPS PC Magic Box 2 to PC.

Firstly plug the Xbox 360™ PC Wireless Gaming Receiver to XFPS PC Magic Box 2, then plug the XFPS PC Magic box 2 to the PC USB port, wait until the Status indicator <2> will light up RED. This means the connection is successful. The Xbox 360™ wireless controller can be used with the Xbox 360™ headset and the rumble function also been functioning.

### 3. Connect the PS3™ wired controller via XFPS PC Magic Box 2 to PC

Firstly plug in the PS3™ wired controller to XFPS PC Magic Box 2, then plug the XFPS PC Magic Box 2 to the PC USB port, wait until the Status indicator <2> will light up BLUE. This means the connection is successful. The PS3™ wired controller rumble function also been functioning.

The Compatibility keys table between 2 controllers is as below:

<b>PS 3 Controller</b>	<b>Xbox 360 Controller</b>
<b>START</b>	<b>START</b>
<b>SELECT</b>	<b>BACK</b>
<b>R2</b>	<b>RT</b>
<b>L2</b>	<b>LT</b>
<b>R1</b>	<b>RB</b>
<b>L1</b>	<b>LB</b>
<b>×</b>	<b>A</b>
<b>○</b>	<b>B</b>
<b>□</b>	<b>X</b>
<b>△</b>	<b>Y</b>
<b>L3</b>	<b>LC</b>
<b>R3</b>	<b>RC</b>
<b>↑</b>	<b>↑</b>
<b>↓</b>	<b>↓</b>
<b>←</b>	<b>←</b>
<b>→</b>	<b>→</b>
<b>ANALOG-L / Sensor</b>	<b>ANALOG-L</b>
<b>ANALOG-R / Sensor</b>	<b>ANALOG-R</b>
<b>PS</b>	<b>GUIDE</b>

Most of the PC game is compatible with the Xbox 360™ controller. The XFPS PC Magic Box 2 also has a built-in function that tricks the PC into thinking that a Xbox 360™ controller is plugged in when a PS3 controller is actually plugged in.

Therefore the PS3 controller can be used on all PC games, the operating procedure are as below:

- \* Press and hold the “HOME” button on PS3™ wired controller for 5 seconds and wait for the Status indicator <2> to turn GREEN. The PC now treats the PS3™ controller as Xbox 360™ wired controller, and this setting will be saved on the XFPS PC Magic Box 2 for your next gameplay.

If you are now holding the “HOME” button on PS3™ wired controller for 5 seconds and wait for the Status indicator <2> to turn BLUE. The PC will recognize the controller as the PS3™ controller again.

 
### Rapid fire function

XFPS PC Magic Box 2 has 8 built-in Turbo/Rapid Fire switches. The rapid fire speed is 20 shots per seconds.

### Custom setting.

Through XFPS PC Magic Box 2, you are able to remap the keys on your gamepad, for instance if you want to swap the “A” key to “B” key, the steps are as below:

1. Press once on the XFPS PC Magic Box 2 Programming button <3> key. The Status indicator <2> will turn from GREEN to PURPLE.
2. Now press the Xbox 360™ “A” key. The Status indicator will blink Purple. Press the “B” key on Xbox 360™ controller and the Status indicator will turn back to GREEN.
3. Press again the XFPS PC Magic box 2 Programming button <3>, the Status indicator < 2> turns GREEN to PURPLE.
4. Press the Xbox 360™ “B” key again and the Status indicator will blink a Purple light. Finally press the Xbox 360™ “A” key. The Status indicator <2> turns back to GREEN. The programming procedure is completed.

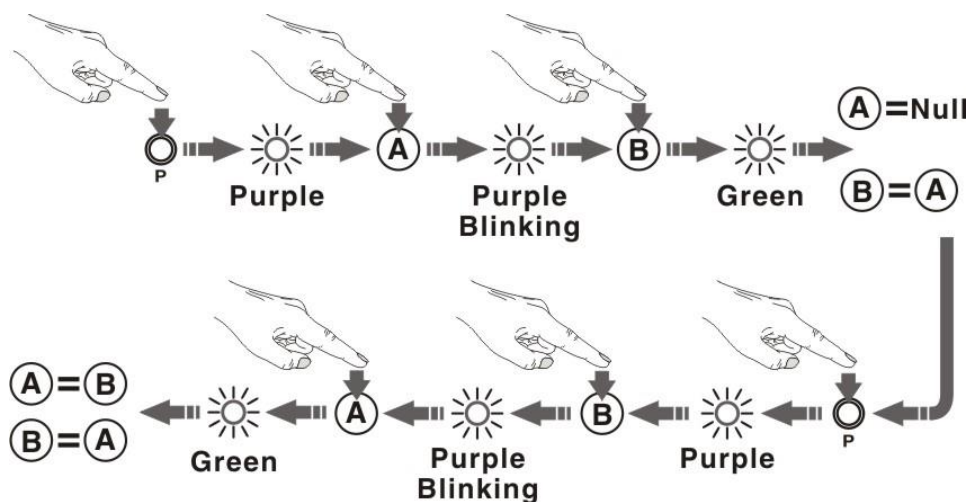

Note: the UP, DOWN, RIGHT and LEFT direction on both Left and Right analog sticks can't be programmed.


### How to swap the 2 analog sticks

 You are able to swap the function of 2 analog sticks, the steps are as below:

Press XFPS PC Magic Box 2 Programming Button <3> once. The Status indicator <2> will turn from GREEN to PURPLE.

Now push the Right or Left analog sticks to the left end, the Status indicator <2> will blink PURPLE, then press down the Right or Left analog sticks. The Status indicator <2> will turn GREEN. The programming procedure is completed.

NOTE: the swap of 2 analog sticks only effect on UP, DOWN, RIGHT and LEFT function, but not included the MIDDLE key function. If you want to swap the MIDDLE key function on 2 sticks, please refer to the 6-1-4 Custom setting.

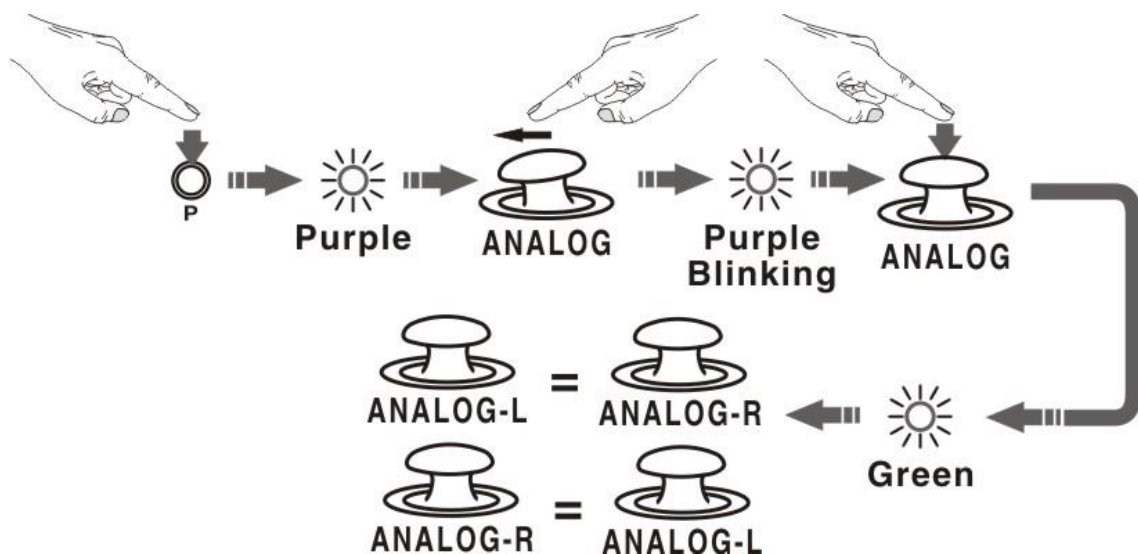


### PS3 controller tilt function setting

XFPS PC Magic Box 2 can set the tilt function onto the RIGHT or LEFT analog stick, for instance, if you want to set the tilt function on the LEFT analog stick, the steps are as below:

Press XFPS PC Magic Box 2 Programming button <3> once. The Status indicator <2> will turn from BLUE to PURPLE.



 Now push the LEFT analog to the RIGHT end. The Status indicator <2> will blink PURPLE. Press the middle key on the LEFT analog stick and the Status indicator < 2> will turn BLUE. The programming procedure is completed.

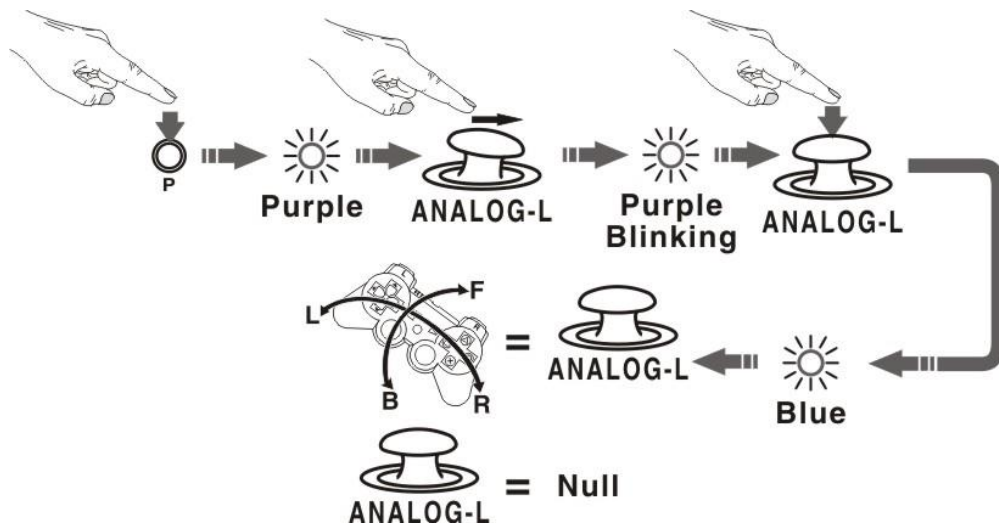

How to erase the custom setting.

Press and hold the Programming button <3> for 5 seconds, the Status indicator < 2> turns to PURPLE then blinks and finally turns back to its status. Now all the custom setting (included the setting of swap of 2 analog sticks and the tilt function) are reset. The controller is back to its default function.

\* The XFPS PC Magic Box 2 can be upgraded via further firmware update.