


Programming the Remote Control Receiver to Work with a New Remote

The remote control receiver sits next to the upper battery as seen in the picture below. Locate the receiver and remove the small plastic cover in the area shown by the yellow pointer.



Locate the two test pins that are shown below. These are difficult to see when the receiver is installed in the machine and you may find a mirror helpful. You will need to short the two pins with a screwdriver. "Shorting" means bringing the two pins in contact by touching both at the same time with a piece of electrically conducting metal.

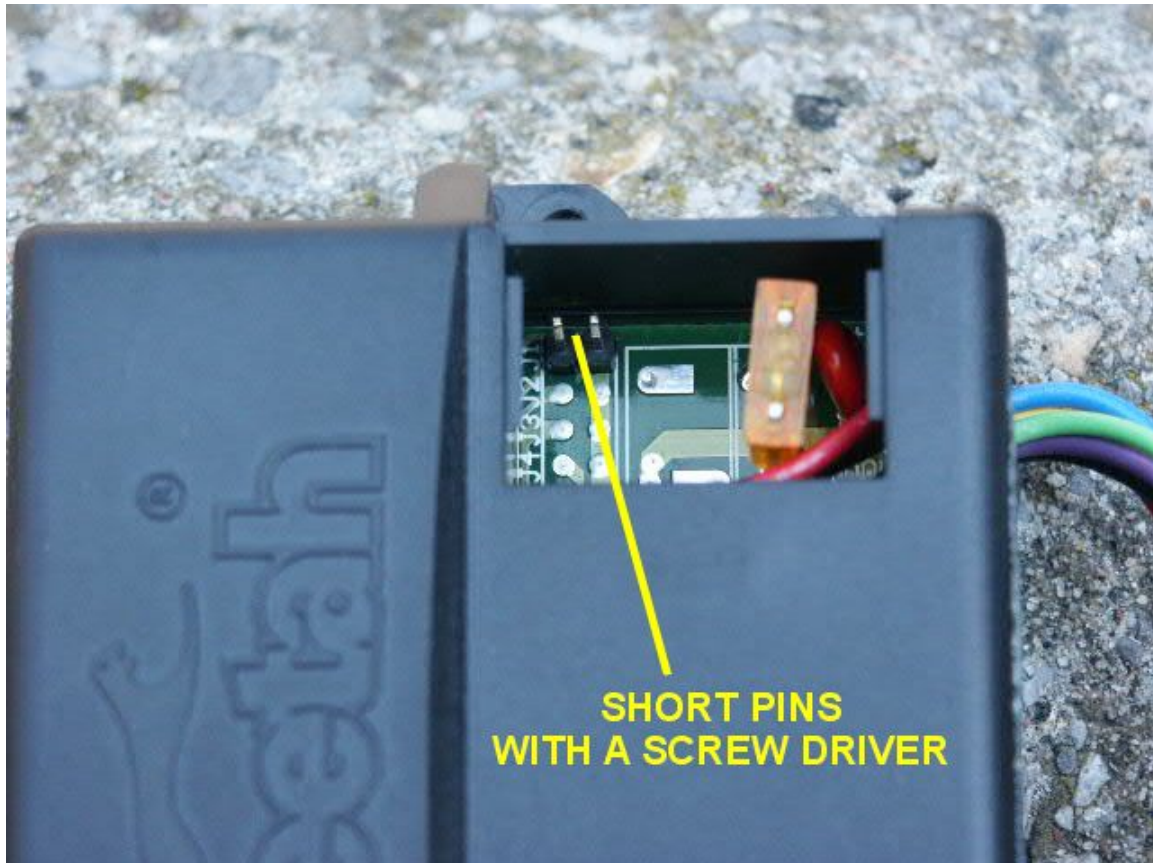

1. Turn the machine on to power up the remote control receiver.
2. Short the two test pins. An LED on the left of the box will stay on.
3. Press either button on the remote control transmitter. When the LED goes off, release the button.
4. Press the same button on the transmitter again. When the LED lights up and goes off again you will confirm that the code of the transmitter has been learned by the receiver.
5. Each receiver can store up to 4 codes.