

## Resetting the e.Stringer DG

If the control panel of your DG does not appear to behave normally, or if the Screen shows a message such as this one upon turning the machine on:

**"Reset Please" "0 Power on"** and continually blinks, you should reset the machine.

Turn the machine on while holding the "KNOT" and "MAIN" keys.

"RESET +1 or -1" will be shown on the screen. Press "-1" key on the keypad and "OK !" will be displayed briefly on the screen.

It is desirable that you check the calibration of the machine after resetting it. Follow instructions shown in the instruction manual. If you do not have your manual handy, you can download it from the services page.