

X Key

Designed by Teslaunch

What's in the Box



XBrooch



XCore



Xkeyfob



XBand



XBuckle



XPendant

Different Wearing Styles



XBand

It can be worn on the wrist like a watch. This key is IP68 waterproof. You can wear it even swimming.



XPenda

The design is similar to the usual pendant. You can hang this key as decoration on any of your bags.



XBrooch

It is designed to be attached to garments. It's convenient that put it on your clothes and go for a run.



XBuckle

It can be used to snap onto your own keychain. This is perfect to wear while commuting.



XKeyfob

It can be attached anywhere you want, like keychain, backpack and trousers.

Assembling X Key

XCore



 
white side



metal side down


XBand / XPendant /

Put XCore directly into the round hollow part in the XBand. (White on the top and silver on the bottom.)

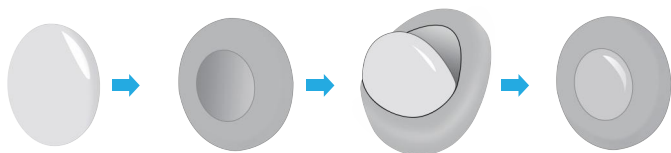

XBuckle / XKeyfob

 Place XCore into the round hollow part. (White on the top and silver on the bottom.)

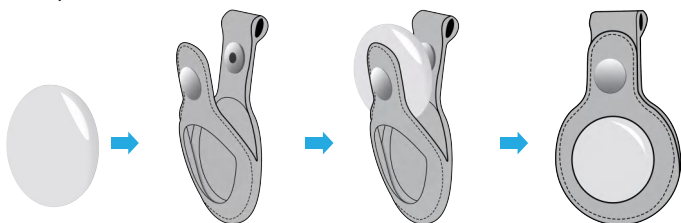

Compatible Model



2017-2024 Model 3
(including 2024+ Model 3 Highland)



2020-2024 Model Y



2021-2024 Model S/X



2024 Cybertruck

 
How to Pair X Key with Your Tesla?

Adding X Key from the Touchscreen

If you have a key card or key fob that is already paired with your vehicle, you can pair it using the touchscreen.

1 Model 3 (2017-2023) / Y (2020-2024)

1. On the touchscreen, touch Controls > Locks > Keys > Add Key.
2. Scan your X Key on the card reader located behind the cup holders on the top of the center console. After X Key is recognized, remove it from the card reader.
3. Scan a key card or key fob that has already been paired to the vehicle to confirm X Key pairing.
4. When complete, the key list includes the new device. Touch the associated pencil icon to customize the name of the key.

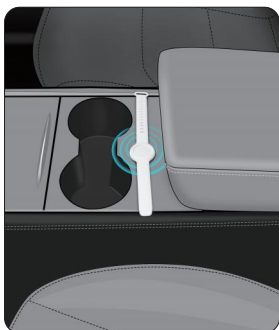

2 2024+ Model 3 Highland

1. On the touchscreen, touch Controls > Locks > Keys > Add Key.
2. Scan X Key on the card reader located on either wireless phone charger. When you hear a chime, then X Key is recognized.
3. Scan a key card that has already been paired to the vehicle to confirm X Key pairing.
4. When complete, the key list includes the new key. Touch the associated pencil icon to customize the name of the key.



 
3 Model S/X (2021-2024)

1. On the touchscreen, touch Controls > Locks > Keys > Add Key.
2. Scan your X Key or key fob on the card reader located on the wireless phone charger. When you hear a chime and the new key is recognized, remove it from the card reader.
3. Scan a key card that has already been paired to the vehicle to confirm X Key pairing.
4. When complete, the key list includes the new key. Touch the associated pencil icon to customize the name of the key.



4 Cybertruck (2024)

1. On the touchscreen, touch Controls > Locks > Keys > Add Key.
2. Scan your X Key or key fob on the card reader located on the wireless phone charger. When you hear a chime and the new key is recognized, remove it from the card reader.
3. Scan a key card that has already been paired to the vehicle to confirm X Key pairing.
4. When complete, the key list includes the new key. Touch the associated pencil icon to customize the name of the key.

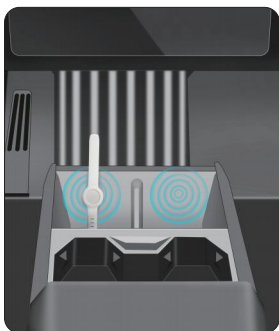


How to Unlock & Lock

1 Model 3 (2017-2023) / Y (2020-2024)


To use a key card to unlock or lock Model 3/Y, position the card as shown and tap it against the card reader located just below the Autopilot camera on the driver's side door pillar. When Model 3/Y detects the key card, the exterior lights flash, the mirrors unfold or fold (if Fold Mirrors is on), the horn sounds (if Lock Confirmation Sound is on), and the doors unlock or lock.

Note:

 1. You may need to physically touch the driver's side door pillar with the X Key, and you may need to hold it against the transmitter for one or two seconds.
2. For Model 3, the X Key should be placed below the camera about 1.97 inch (5 cm).
3. For Model Y, the X Key should be placed below the camera about 7.5 inch (19 cm).

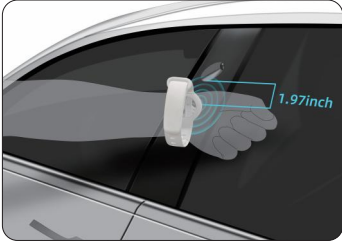

Model 3 (2017-2023)

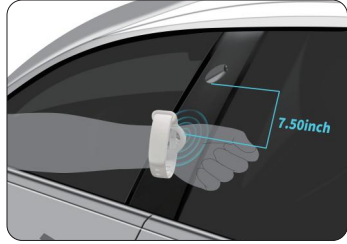 


Model Y (2020-2024)

2 Model S/X (2021-2024) / 2024+ Model 3


To use a key card to unlock or lock Model S/X/Highland Model 3/Cybertruck, position the card as shown and tap it against the card reader located approximately one third the way up of the driver's side door pillar. When Model S/X/Highland Model 3/Cybertruck detects the key card, the exterior lights flash, the mirrors unfold or fold (if Fold Mirrors is on), the horn sounds (if Lock Confirmation Sound is on), and the doors unlock or lock.

Note:

 
You may need to physically touch the driver's side door pillar with the X Key, and you may need to hold it against the transmitter for one or two seconds.

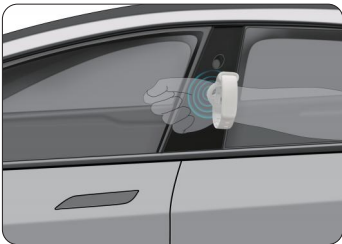


Model S (2021-2024)

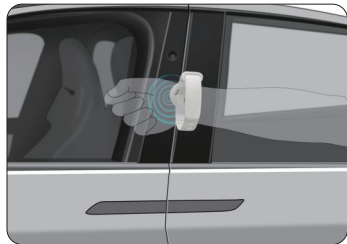 

Model X (2021-2024)

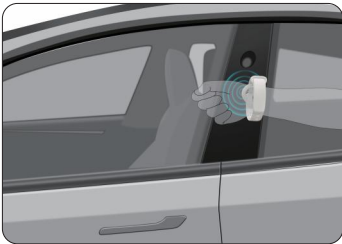 

2024+ Model 3 Highland

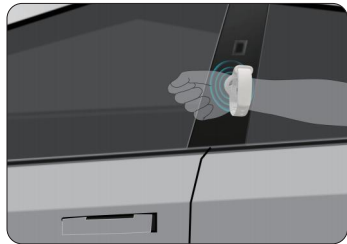 

Cybertruck (2024)

 
3 What Can I Do If It Cannot Unlock?

If the lock does not respond, pull the door then use the X Core to unlock again.

Power Up Your Tesla

1 Model 3 (2017-2023)/ Y (2020-2024)

Once inside, power up Model 3/Y by pressing the brake pedal within two minutes of scanning X Key. If you wait longer than two minutes, you must re-authenticate by placing X Key near the card reader located in the wireless phone charger on the center console. When your X Key is detected, your two minute authentication period restarts.

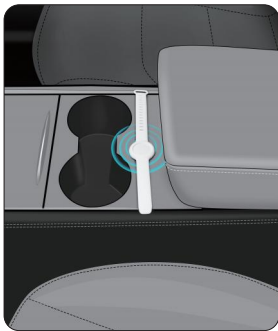


2 2024+ Model 3 Highland/ Model S/X (2021-2024)

Once inside, power up Model 3 Highland/S/X by pressing the brake pedal within two minutes of scanning X Key. If you wait longer than two minutes, you must re-authenticate by placing X Key near the card reader located in the wireless phone charger on the center console. When your X Key is detected, your two minute authentication period restarts.



Cybertruck (2024)

 Once inside, power up Cybertruck by pressing the brake pedal within two minutes of scanning X Key. If you wait longer than two minutes, you must re-authenticate by placing X Key near the card reader located in the wireless phone charger on the center console. When your X Key is detected, your two minute authentication period restarts.

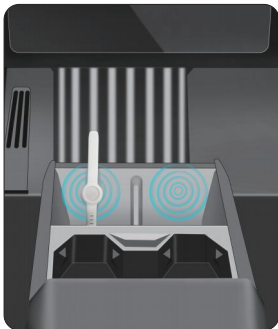

Important Things

1. If the wristband causes any skin irritation or other discomforts, please discontinue using and consult your doctor.
2. If your XBand gets wet after sweating or showering, dry it thoroughly before putting it back on your wrist.
3. Waterproof: Not suitable for diving, swimming in the sea, or sauna. But it is suitable for swimming in the swimming pool or shower (cool water) and shallow beach.
4. We provide one-year warranty for the XCore chip (excluding physical factors). If XCore requires replacement for any reason, please feel free to contact us.

Email: support@teslaunch.net

Teslaunch

Designed by Teslaunch