

RE-BINDING WINCH REMOTE

Tin case for some reason the remote control transmitter is not activating your remote winch you can try to re-bind the transmitter to the receiver. The steps are as follows (below photo):



STEP 1: Connect remote receiver module to a fully-charged battery pack. Make sure remote transmitter battery is working (red light should go on when pressing a button on the remote).

STEP 2: Locate the binding button underneath the receiver shrink wrap, using the photo above for reference. Note that you do not have to cut open the shrink wrap to access the button; you can push the button through the shrink wrap.

STEP 3: Push the binding button and hold it down. While doing this, get the remote control transmitter and also push and hold buttons A+B at the same time.

STEP 4: After holding all three buttons for about 6 seconds, release all buttons and check for operation. If the remote did not bind and does not communicate with the receiver, retry step 3 again.