


Spoke Drive Swap Guide:

How to change out the Spoke Drive on the Siva Atom

1.

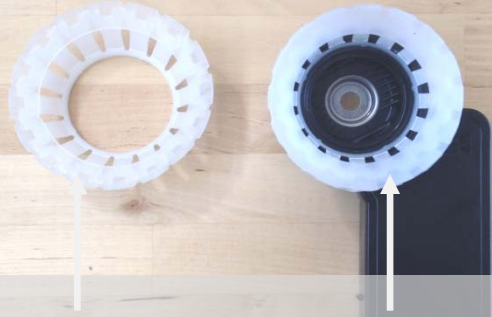

New Spoke Drive

Existing Spoke Drive

2.




Place finger on black Drive Gear just inside where the Spoke Drive inserts and press down

3.



Gently wiggle up the base of the Spoke Drive while pressing down on the black Drive Gear

4.

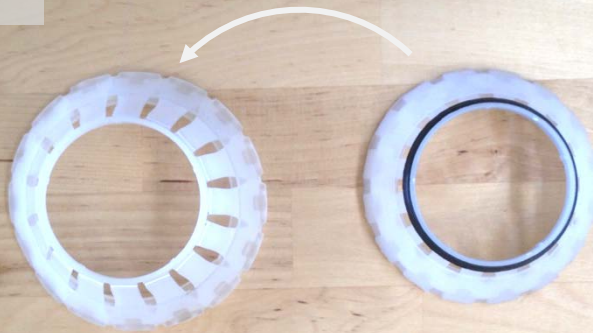

Transfer Rubber Seal to new Spoke Drive (if needed)

5.




Slip Rubber Seal onto new Spoke Drive

6.



Check for correct orientation of Rubber Seal

7.

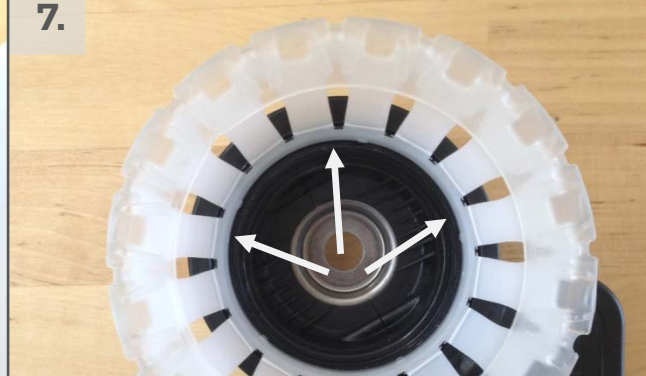

Insert new Spoke Drive into black Drive Gear, taking care to line up the grooves