

WINDOW LOCK

FOR WOODEN SASH WINDOWS

Fitting instructions

- Select desired position for security bolt, either close to the top of the lower window so that the upper and lower windows can be secured tightly together, or about 10cm (4") above the top of the lower window, (Fig 1) to allow the locked window to be opened slightly for ventilation. Alternatively, using 2 locks, place one in each position to allow either option.

- Drill a 16mm ($\frac{5}{8}$ ") wide and 25mm (1") deep hole in the upper sash in the selected position. If you wish to lock the windows tightly together, leave space for the striking plate beneath the bolt on the top of the lower sash.


- Place lock in the hole and if required rebate the end plate so that it fits flush. Secure with the two 19mm ($\frac{3}{4}$ ") screws provided, (Fig 2).

- Insert key and turn anti-clockwise until bolt is fully extended. Lower sash as necessary until bolt is touching the top of the lower sash and then centre the striking plate under the bolt. Retract the bolt and secure the striking plate with the 13mm ($\frac{1}{2}$ ") screw provided.

(Fig 1)



(Fig 2)

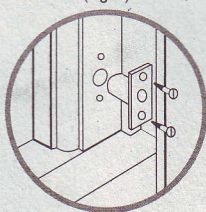

Tools required

- Flat blade screwdriver
- Drill
- 16mm ($\frac{5}{8}$ ") drill bit
- Bradawl or drill for pilot holes

SW66K

Made in the UK



Yale Security Products Limited
Wood Street, Willenhall
West Midlands, WV13 1LA
Telephone: 01902 366911

Ingersoll is a member of
the Yale Security Group