


# INSTRUCTIONS FOR USE CC 10

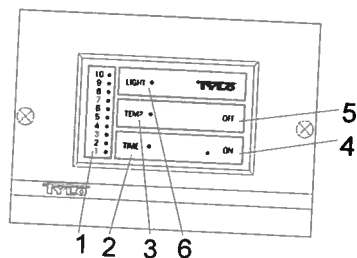

## Functions.

1 = setting scale. 2 = time settings. 3 = temperature settings. 4 = on (Green). 5 = off (Red). 6 = lighting.

## Illumination.

The illumination automatically switches on when the unit starts and switches off automatically when the unit shuts down. You can also switch the illumination on or off manually by pressing LIGHT.

## Temperature setting.

*(The heater must be switched on)*

**Press TEMP** – the previous temperature setting is displayed.

The numbers indicate a rising temperature scale. Experiment to find the temperature that suits you best. Begin for example by turning the thermostat dial to position 4. If you later find that you would prefer a higher or lower temperature, adjust the dial up or down until you find the ideal bathing temperature for you (usually 70-90°C (158-194°F) for traditional dry and wet sauna baths, 40-45°C (104-113°F) for steam saunas and herb saunas).

## Manual on/off.

**Press ON** to switch the facility on. **Press OFF** to switch it off. (the LED goes out). A memory function automatically sets the previous temperature.

**Press TEMP** – to change the pre-set temperature.

The built-in timer automatically switches the sauna heater/steam generator off after 3 hours. If you want to switch it off earlier than that, press OFF. To extend the sauna time, press ON.

## Timer settings.

*(The heater must be switched off)*

The numbers in this case represent the timer times (= the number of hours until the heater automatically switches on). To set the timer:

**Press TIME** – use the arrow keys to select the desired pre-set time, 1–10 hours.

**Press ON** – the timer is activated and the time indicator blinks during the pre-set time period. Once the heater switches itself on, it remains on for 3 hours, after which it automatically switches itself off. If you want to switch it off earlier than that, just press OFF. To extend your sauna time, press ON.

## Main power switch.

To be changed more than once: At the bottom of the relay box, the SE unit and the smaller types of steam generators is a main power switch that disconnects the heater entirely from the electrical supply. This main switch should only be used if the sauna will not be used for a longer period, such as several weeks. To be changed more than once: The memory function must be reset each time the power is interrupted.

# TYLO

In the event of any problems, please contact the retailer where you purchased the equipment.

© This publication may not be reproduced, in part or in whole, without the written permission of Tylo. Tylo reserves the right to make changes in materials, construction and design.