



*Pellet Stoves
Wood Stoves
Multi-Fuel Stoves
Pellet Grills*

P.O. Box 206

Monroe, VA 24574

www.heatredefined.com

Phone: (800) 516-3636

Fax: (434) 929-4810

Glass Gasket Replacement

***WARNING: BE SURE TO READ YOUR OWNER'S MANUAL BEFORE INSTALLING OR OPERATING YOUR STOVE.
ALWAYS FOLLOW ALL CODES.***

Be sure the stove is unplugged and cooled before performing any maintenance/component replacement.

NOTE: These instructions are also included on the service DVD that came with your unit.

An airtight seal around the gaskets is crucial to proper stove performance and safety. If the glass is removed from the door, or if the glass gasket is frayed or not sealing properly, the gasket should be replaced. Please refer to your owner's manual and/or the service DVD that came with your unit for glass removal instructions for your particular unit.

Take note of how the factory-installed gasket is cut and routed around the glass. Once the gasket is removed, all the old adhesive should be cleaned (or carefully scraped, if necessary) from the glass. Then, using a glass cleaner, wipe any soot and ash from the glass, to ensure proper adhesion of the new gasket.

The new gasket should be installed by starting at the corner and forming a "u" shape around the edge of the glass to fold the gasket over the glass. Make sure the finishing edge overlaps the beginning just a bit, so that there is no possibility of air leaking around the glass. Once finished, reinstall the glass in the reverse of the manner it was removed. Note: Be careful not to over-tighten the screws, as the glass could break.

Glass Gasket



See your owner's manual and service DVD for your specific part number and for more information on checking and replacing gaskets.

Call Technical Support at (800) 245-6489 with any questions.