



*Pellet Stoves  
Wood Stoves  
Multi-Fuel Stoves  
Pellet Grills*

P.O. Box 206

Monroe, VA 24574

[www.heatredefined.com](http://www.heatredefined.com)

Phone: (800) 516-3636

Fax: (434) 929-4810

## Cradle Gasket Replacement


***WARNING: BE SURE TO READ YOUR OWNER'S MANUAL BEFORE INSTALLING OR OPERATING YOUR STOVE.  
ALWAYS FOLLOW ALL CODES.***

***Be sure the stove is unplugged and cooled before performing any maintenance/component replacement.***

*NOTE: These instructions are also included on the service DVD that came with your unit.*

An airtight seal around the gaskets is crucial to proper stove performance and safety. The cradle gasket should be replaced when it starts to thin, fray or disintegrate, or when it is removed for yearly maintenance as outlined in the owner's manual and service DVD for your stove.

See your owner's manual and service DVD for instructions on cradle removal and replacement. Note how the factory-installed gasket is placed on the cradle before beginning. Pull off the old gasket and scrape off any remaining adhesive and/or gasket that is left. Then, using a spray adhesive or silicone, attach the new gasket where the old gasket was. Reinstall the cradle in the reverse of the manner it was removed.

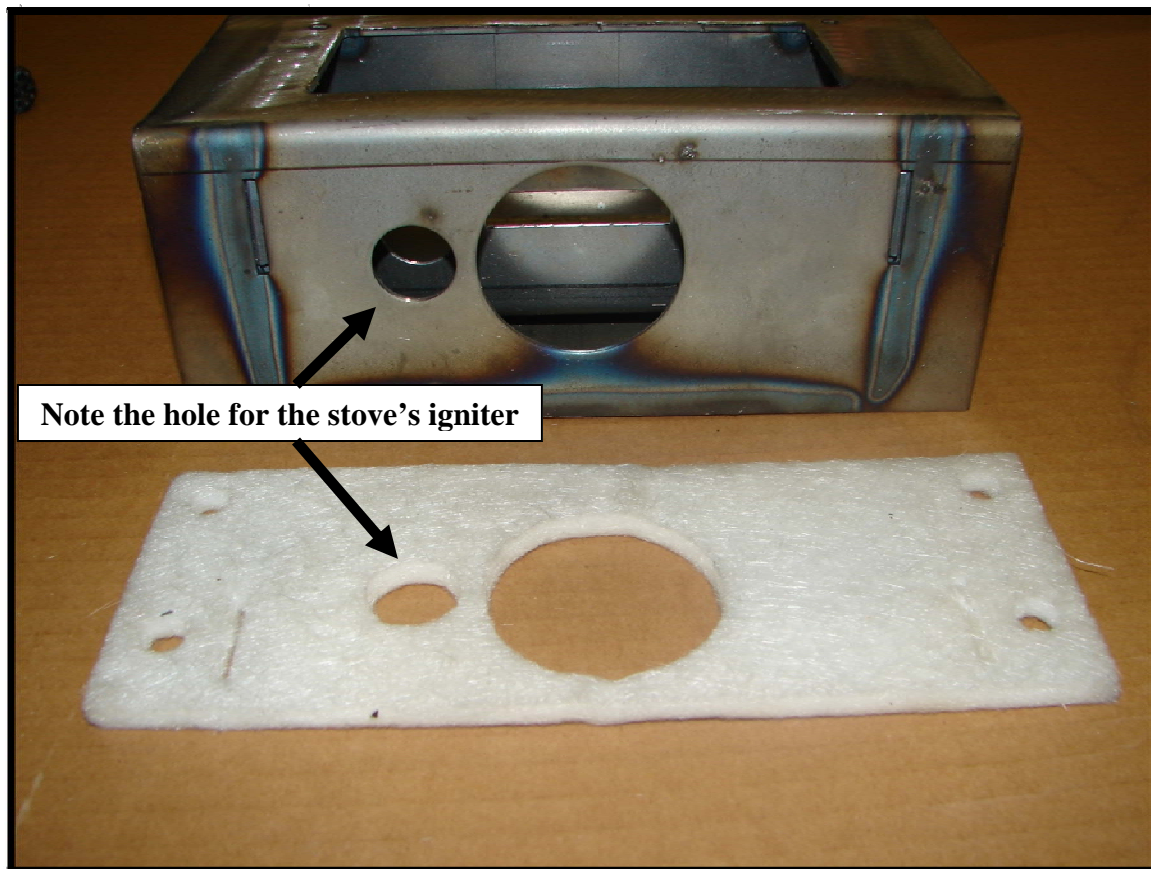

See your owner's manual and service DVD for your specific part number and for more information on checking and replacing gaskets.

*Call Technical Support at (800) 245-6489 with any questions.*