
## **Assembly Instructions**


## 7-Piece Patio Dining Set - Item# 22108

## **Parts List**

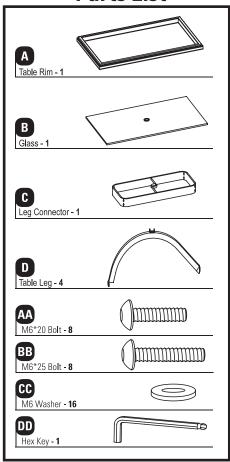


Step 1 Requires A, D, AA, CC, DD

Place the table rim (A) on a soft flat surface. Line up the bolt holes on the table rim (A) with the corresponding bolt holes on the table legs (D). Insert M6x20 bolts (AA) through M6 flat washer (CC) and lightly tighten the bolts using the hex key (DD). Do not completely tighten until all assembly is completed. Repeat the above steps for the remaining table legs.

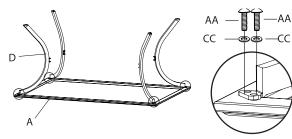


Step 2 Requires C. D. BB. CC. DD

Line up the bolt holes on the table legs (D) with the corresponding bolt holes on the table leg connector (C). Insert M6x25 bolts (BB) through M6 flat washer (CC) and lightly tighten the bolts using the hex key (DD). Do not completely tighten until all assembly is completed. Repeat the above steps for the remaining table legs.

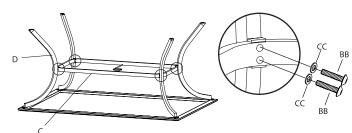

Step 3 Requires A. B. DD

Ensure all bolts are securely tightened using the hex key (DD). Turn the table right-side up. Carefully place the glass (B) into the table rim (A).

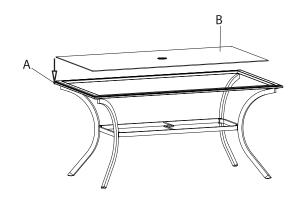

Step 4
Your table is now complete and ready to use.



Caution! Always keep children under close supervision while they are using or around this product. Never leave children unattended.

- This product is intended for domestic outdoor use only.
- The product should be placed on a flat horizontal surface.
- Any assembly or maintenance of the product must be carried out by adults only.
- Arrange necessary manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves if necessary.

- Keep children and pets away while setting up the product.
- Check all nuts and bolts periodically for tightness. When required, tighten them again.
- If the product is not in use for extended periods of time (e.g. winter), it should be stored in a clean, dry environment.
- Do not light any fires inside or near the product!
- · Do not hang any weights on the frame.