


HYPERION SII OWNER'S MANUAL

WINDING/SETTING THE TIME



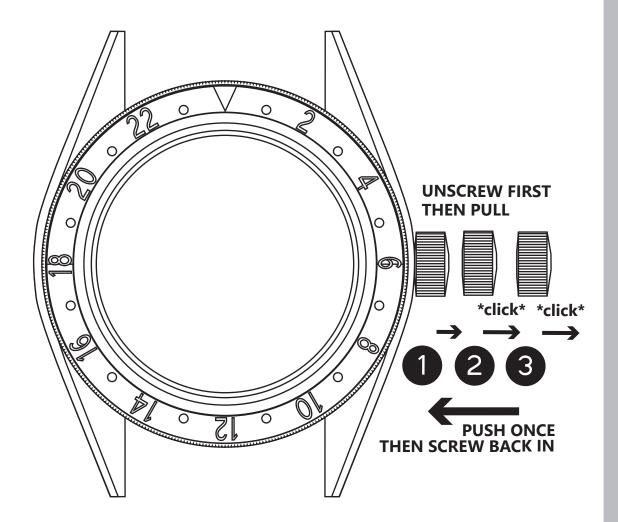

WINDING POSITION

Rotate the crown counter-clockwise to unscrew it. Once fully unscrewed, rotate clockwise to wind the watch. 50-60 turns will bring it to a full-wind state.



GMT HAND/DATE SET POSITION

Gently pull out the crown to Position 2 to set the date and GMT hand. Turn the crown counter-clockwise to advance the date. Turn the crown clockwise to advance the GMT hand. Note: DO NOT SET THE DATE BETWEEN THE HOURS OF 10 PM AND 2 AM.



TIME SET POSITION

Gently pull out the crown to Position 3 to set the time. Turn the crown counter-clockwise to advance the time.

SECURING THE CROWN

Push the crown back in only once. Keep pressure on the crown until you can feel the crown threads catch. Turn clockwise to screw back in.

NOTE:

Please keep the crown secured when the watch is in use.


USING THE GMT HAND (TRACKING A SECOND TIME ZONE)



The Hyperion's GMT hand can be adjusted independently of the main hour hand.

To track a second time zone, point the **GMT hand** to the desired local or home time, as indicated on the **24-hour bezel**.

OPERATING THE BEZEL (TRACKING A SECOND TIME ZONE)

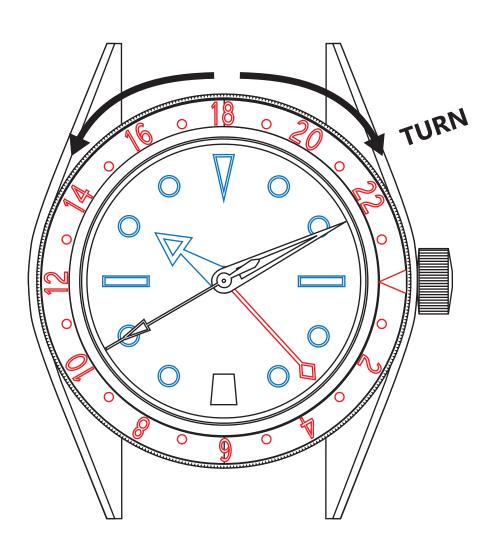


The Hyperion's bezel rotates in both directions and can be used to change timezones quickly.

To track a second time zone, rotate the bezel as necessary to track local or home time using the **GMT hand.**

In the illustration, it is 10:10 in time zone A, as indicated on the dial, and 3:10 AM (03h10) in time zone B, as indicated on the bezel.

RESIZING/CHANGING THE BRACELET

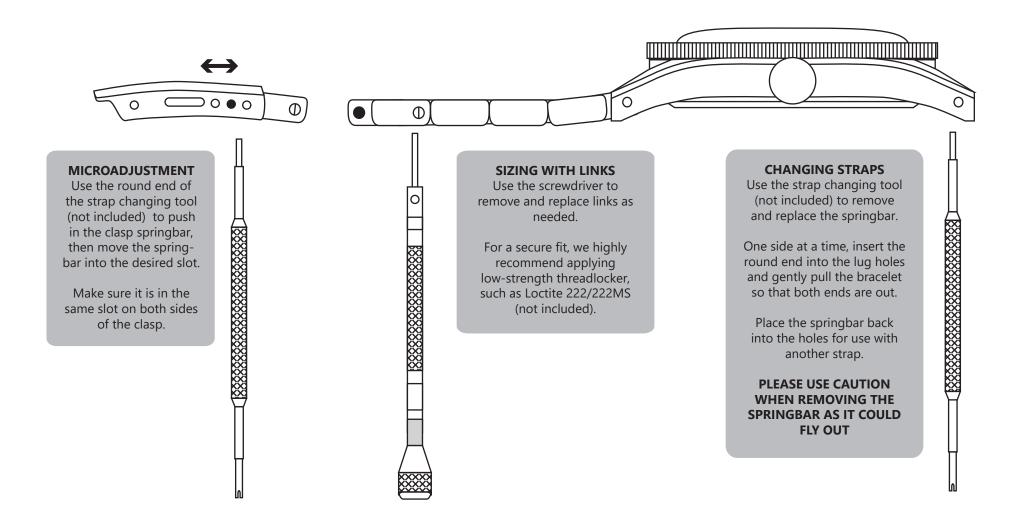

GENERAL CARE INSTRUCTIONS

- * Always have the crown fully secured before submerging into water.
- ** Do **NOT** attempt to open caseback without prior approval from Lorier, as this will void your warranty.
- * Do **NOT** use alcohol to clean your watch. Warm water will suffice.
- * Scratches on the crystal can be buffed out using the included Polywatch and polishing cloth.
- * Scratches on the **brushed surfaces** of the case can be removed with 3M 30 Micron Green Paper (not included). Brush gently in one direction until the scratch is removed.
- * Scratches on the **polished surfaces** of the case can be removed with a Cape Cod cloth (not included). Use caution NOT to make contact with brushed surfaces.
- * Thoroughly rinse in fresh water after submerging in salt water.

FREQUENTLY ASKED QUESTIONS

1. My watch stopped! What can I do?

Your watch runs based on the movements of your arm. Give your watch a shake and wind using the crown to get the watch moving again.

2. My watch is not keeping time well! What can I do?

Your watch may be magnetized. A watchmaker with a demagnetizer will address the issue within minutes, for a minimal fee.



For any other inquiries, please contact

info@lorierwatches.com