ZEITMESSER







How to setup your timepiece

- **O1** Remove the lock on the crown.
- Now you are ready to <u>set the time.</u> To do so, pull the crown to position 3 and turn until the hands are in the correct position.
- To set the date and the day, push the crown in by one position so that it is in position 2. Turn the crown clockwise until the correct date is displayed. Turn the crown anticlockwise until the correct day is displayed. Now you can push the crown back to the starting position (position 1).

Note: Your date changes at noon? This is because the movement does not "know" if it is noon or midnight. If so, simply wind your timepiece forward by 12 hours.