
ZEITMESSER

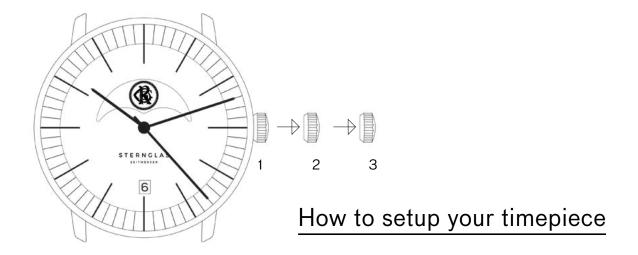

- **O1** Remove the lock on the crown.
- Your timepiece has a moon phase display.

  To set the current moon phase, pull the crown out to position 3 and wind it until the correct moon phase indicator appears.
- You can now <u>set the time.</u> Keep the crown at position 3 and wind it to the correct time.
- To <u>set the date</u>, push the crown in by one position so that it is in position 2. Turn the crown clockwise until the correct date is displayed. Now you can push the crown back to the starting position (position 1).

Note: Your date changes at noon? This is because the movement does not "know" if it is noon or midnight. If so, simply wind your timepiece forward by 12 hours.