

How to setup your timepiece

- O1 Remove the lock from the crown.
- O2 <u>To set the correct time</u>, pull the crown to position 3 and wind until the correct time is displayed.
- O3 <u>To set the date</u>, push the crown in by one position so that it is in position 2. <u>Note</u>: Please do <u>not</u> change the date between 9 and 3 o'clock, as this could damage the date disk. Turn the crown clockwise until the correct date is displayed. Now you can push the crown back in to its original position (position 1).

Your date changes at noon? This is because the movement does not "know" whether it is noon or midnight. Simply wind your timepiece forward by 12 hours.

O4 Your chronograph can measure time in <u>0.5 second units – up to 60</u> <u>minutes</u>. Press button A to start and stop the timekeeping. When you press button B, the chronograph second hand and chronograph minute hand return to the zero position.

After 60 minutes have elapsed, the chronograph hand stops again.