
# InnoGear **Aromatherapy Diffuser**

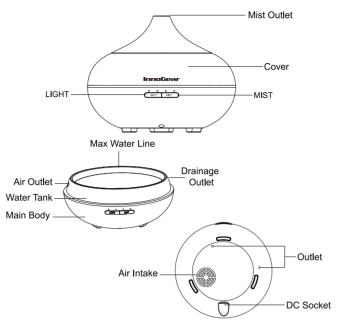



Aroma Diffuser

User Manual

# Operation



Connect the included AC adapter to the DC port at the



Lift up the cover.



Add the right amount of water (not exceeding the MAX line) and a few drops of essential oil into the water tank.



Put the cover back on, and then plug the AC adapter into the home power supply socket.



LIGHT button Press once to turn on the light and it begins to cycle

through colors.

The color will change per press. Long press to turn off the light.

#### MIST button

1st press - turn on and set 1 hour working time. 2nd press - set 3 hours working time.

3rd press - set 6 hours working time.

4th press - set continuous mist. 5th press - turn off mist.

Long press (3s) to turn off the diffuser.

# Specification

Dimensions	179*130mm
Weight (including adapter)	548g
Input	AC 100-240V 50/60Hz
Output	DC 24V 500mA
Length of power cord	180CM
Electric consumption	10W
Time mode	1H / 3H / 6H / ON
Water tank capacity	500ml
Materials	ABS+PP

User Manual

After-sale Service

Email: support@innogear.net

Phone: 800 806 3008

Our customer service is friendly and hassle-free.

# Troubleshooting

Cannot turn on	Is there enough water in the tank?  -Add enough water but do not exceed the MAX line. Is the AC adapter connected correctly?  -Please unplug, check and re-plug correctly.
No mist or low mist	Not enough water or too much water?  —Add the right amount of water but do not exceed the MAX line.  Dust on the ultrasonic film?  —Clean the product according to the maintenance.  Dust on the air intake?  —If the air intake is dirty, mist won't come out. Just clean it.
Water leakage	Is there any crack at the bottom of the water tank?  —Please check if there is any tiny crack at the bottom of the diffuser through which water can leak. If you find a crack upon receipt of this product, please contact us for a free replacement.  Is steam water inside the cover wiped out?  —Wipe out steam water after each use, making sure the inner cap is completely dry before refilling in case steam water may leak out while putting cover back on.  Low temperature or high humidity?  —In this case, mist may condense quickly into water drops.

## FAQ

- Q: Why can't I find the power adapter upon receipt of this product?
- A: The power adapter is packed in the water tank. Please lift up the diffuser cover to find it.
- Q: Why can't I smell anything?
- A: The strength of scent from different essential oils may vary. Choose a strong scented oil and don't put the diffuser near the air conditioner, fan or window.
- Q: Can the light be set for one specific color only?
- A: Yes. Just press the LIGHT button.
- Q: Can I turn the light off and just use the mist?
- A: Yes. There are separate buttons for the light and the mist.

### Precaution

 
- . The power adapter is packed in the water tank. Please lift up the diffuser cover to find it.
- To prolong the life span of the diffuser, do not use mineral water.
- . Do not fill water over 500ml.
- Due to anti-dry protection, the diffuser will stop misting when the water is lower than a certain level.
- Do not touch the Ultrasonic vibration plate when using.
- Unplug the unit before maintenance and clean regularly with damp clean cloth.
- Do not fill water directly. Please add water with measuring cup.(not included)
- Keep away from direct sunshine heat sources and air conditioners or fans.
- Always keep on flat, moisture-resistant surface. Do not place on carpet, duvet or unstable area.
- Keep away from electronic equipment, such as TV and other auto equipment.
- Do not flip the unit when in operation, otherwise water may enter the mechanism and cause malfunction.
- Please clean the product before changing to another scent of essential oil according to the instructions.
- Please only use 100% essential oil with this diffuser. Low quality oil that contains chemicals, spices, or impurities may cause malfunction.

### Maintenance

Please clean the product as following steps after using 5-6 times (or 2-3 days):

- Turn off the power, unplug the power cord and remove the cover.
- Pour out all the remaining water in the basin from the DRAIN SIDE.
- Add a few drops of neutral kitchen detergent into warm water and clean the product with a soft rag.






# Accidental Leakage

If the unit happens to be knocked over or tipped during operation, please follow the steps to avoid malfunction.

- Turn off the power, unplug the power cord and remove the cover.
- Pour out all remaining water in the tank from the DRAIN SIDE.
- Shake the unit to drain the water inside the mechanism, and put it in a well-ventilated place for natural drying.

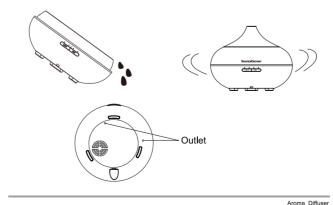

This product is guaranteed for 12 months since the date of purchase. Please

contact us with your Order Number/ Invoice/ Purchase Proof if you need

technical support or replacement/ refund due to QUALITY PROBLEM.

Follow us on Facebook

www.facebook.com/InnoGear.net

Aroma Diffuser

Aroma Diffuser

Aroma Diffuser

Aroma Diffuser