
 


Aroma Diffuser

User Manual

User Manual

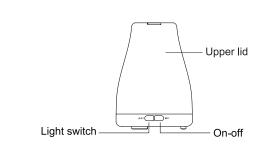



Aroma Diffuser

User Manual

Instruction

Please add half of the water and NO essential oil at the first use, and let it run until auto shut-off.



Twist upper lid to the right (counterclockwise), and lift it up.



Connect the included AC adapter to the DC port at the base.



Add water (no more than 150ml) and a few drops of essential oil into the water tank.



Align the inner cap nozzle with the mist outlet of lid when installing. Make sure to lock inner cap tightly with the upper lid. Loose inner cap may cause water leakage.

Aroma Diffuser

Instruction



Put upper lid back on, making sure to point "InnoGear" logo right above the mist and light button and align the groove inside the lid with bulge on the base. Twist to the left (clockwise) to lock the lid.

User Manual



MIST button

- (1) Press MIST and the LED indicator turns green. The diffuser begins to work in intermittent mist mode (30 seconds on and off).(2) Press MIST again and red LED indicator turns red, and the diffuser changes to continuous mist mode.
- (3) Hold MIST for 3 seconds to turn off the diffuser.



LIGHT button

- (1) Press once to turn on the light and it will cycle through colors.
- (2) The color will change per press.
- (3) Hold for 3 seconds to turn off the light

Installation

1.

Make sure to align the inner cap nozzle with the mist outlet of upper lid and lock tightly.

3.

4.

Aroma Diffuser

User Manual

Aroma Diffuser

Twist to the left (clockwise) to

Make sure to lock built-in cap tightly

lock the lid

with the upper lid.

User Manual

Troubleshooting

Is there enough water in the tank? --Please add enough water but do not exceed the MAX line. Cannot turn on Is the AC adapter connected correctly? --Please unplug, check and re-plug correctly. No enough water or too much water? --Add the right amount of water but do not exceed the MAX line. Dust on the ultrasonic film? No mist or --Clean the product according to the maintenance. low mist Upper lid and inner cap installed improperly? --Remove and re-install properly referring to "Installation" section. Dust on the air intake? --If the air intake is dirty, mist will not come out. Just clean it. Is there any crack at the bottom of the water tank? --Please check if there is any tiny crack at the bottom of the diffuser through which water can leak. If you find a crack upon receipt of this product, please contact us for a free replacement. Is steam water inside the lid wiped out? --Wipe out steam water after each use, making sure the inner cap is completely dry before refilling in case steam water may leak out when putting lid back on. Upper lid and inner cap installed improperly?

Low temperature or high humidity?

Aroma Diffuser

--Remove and re-install properly referring to "Installation" section.

--In this case, mist may condense quickly into water drops.

User Manual

Aroma Diffuser

FAQ

- Q: Can't open the upper lid?
- A: Please point "InnoGear" logo right above the mist and light buttons and align the groove inside the lid with the bulge on the base. Twist to the right (counter-clockwise).
- Q: Diffuser bottom base melted after a few months of use?
- A: Chemical essential oils are corrosive to plastic, please use 100% pure essential oils only. Contact us for a replacement/ refund.
- Q: Why can't I smell anything?
- A: The strength of scent from different essential oils may vary. Choose a strong scented oil and don't put the diffuser near the air conditioner, fan or window.
- Q: Can the lights be set for one specific color only?
- A: Yes. Just press the LIGHT button.
- Q: Can I turn off the diffuser by pressing the MIST button?
- A: Yes. Hold the MIST button, and both the light and mist will turn off.
- Q: Can I turn the lights off and just use the mist?
- A: Yes. There are separate buttons for the light and the mist.

Precaution

- To prolong the life span of the diffuser, do not use mineral water.
- Do not exceed the MAX line when filling water.
- Do not open the upper lid during operation. Please turn off the diffuser first, otherwise the water and oil will splash and oil may stick to the outside of the tank which may make the upper lid harder to open in later use.
- It's normal that the amount and intensity of the mist change during operation
- There are many factors that may affect the mist including: water type, humidity, capacity, temperature, and air currents.
- If diffuser runs out of water, it will shut off automatically.

/ Warning

- Only use 100% pure essential oil with this diffuser. Do not use low quality oil that contains chemicals, spices, or impurities.
- Do not open the cap while your diffuser is running.
- Clean your diffuser every 3 times of use.

User Manual

Aroma Diffuser

Maintenance

- Turn off the power, unplug the power cord, and remove the upper lid.
- Pour out all the remaining water in the tank from the DRAIN SIDE.
- Put a few drops of neutral detergent used in kitchen into warm water and clean the product with a soft rag.
- If the unit happens to be knocked over or tipped during operation, please shake the unit to drain the water inside the mechanism and put it in a well-ventilated place for natural drying.

Specification

Size	Diameter 106 × Height 147mm
Weight	About 348g
Input	AC 100-240V 50/60HZ
Output	DC 24V
Electric wire length	About 170CM
Power	About 10W
Water tank capacity	150ML
LED quantity	Three
Raw material	PP
Accessories	Power, measuring cup and user manual
Ultrasonic frequency	2.4MHZ

Aroma Diffuser

User Manual

After-sale Service

① Make sure to point "InnoGear" logo right

2 Make sure to align the groove inside the

above the mist and light button

lid with the bulge on the base.

This product is guaranteed for 12 months from the date of purchase, please contact us if you need a replacement/refund.

Email: support@innogear.net

Phone: 800-806-3008

Follow us on Facebook



www.facebook.com/InnoGear.net

Aroma Diffuser