



**MODELS: 8150-RS  
8150-RS1  
8150-RS1-220  
BUTTER SPREADERS**

**INSTRUCTIONS**

**MANUAL MODEL**

- 1. REMOVE BUTTER CHAMBER COVER
- 2. FILL WITH BUTTER
- 3. REPLACE COVER
- 4. PLACE SPREADER ON FLAT SURFACE GRILL TO MELT BUTTER
- 5. ROLL BREAD OVER ROLLER TO APPLY BUTTER

**ELECTRICAL MODELS**

- 1. PLUG INTO OUTLET WITH CORRECT VOLTAGE FOR THE MODEL
- 2. REMOVE BUTTER CHAMBER COVER
- 3. FILL WITH BUTTER
- 4. REPLACE COVER
- 5. WHEN BUTTER IS MELTED ROLL BREAD OVER ROLLER TO APPLY BUTTER

**SERVICE PARTS**

<u>DESCRIPTION</u>	<u>PART NO.</u>
BUTTER COVER	80153
ROLLER	80074
CORD WITH ELEMENT 24W 120	47232
CORD WITH ELEMENT 24w 220V	47235

**TROUBLESHOOTING- ELECTRIC MODEL ONLY**

No Heat	Check that unit is plugged in.
	Check power source for proper voltage and that receptacle is working. If receptacle is properly working and still no heat, call Nemco Customer Service at 1-800-782-6761.
Unit Blows Fuse or Circuit Breaker	Check to make sure circuit is not overloaded.

**NEMCO FOOD EQUIPMENT** 301 Meuse Argonne, Hicksville, OH 43526  
Phone: (419) 542-7751 Fax: 419-542-6690 Toll Free: 1-800-782-6761  
[www.nemcofoodequip.com](http://www.nemcofoodequip.com)