

Julian Bowen Limited OPTIKA TV BED 135CM

Assembly Instructions

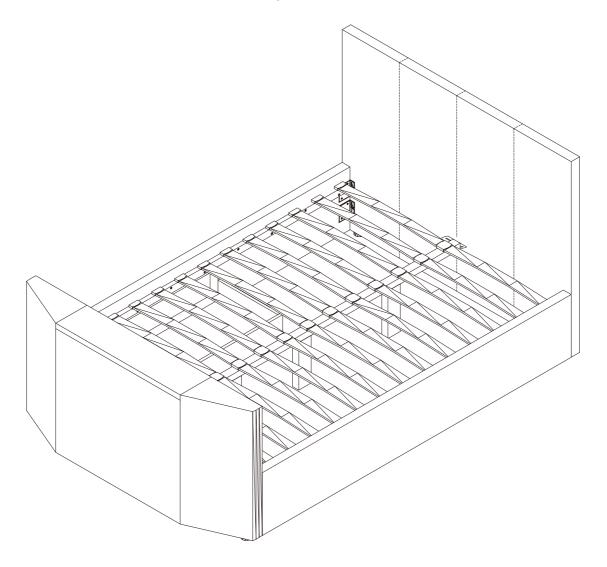

VERSION: 140516

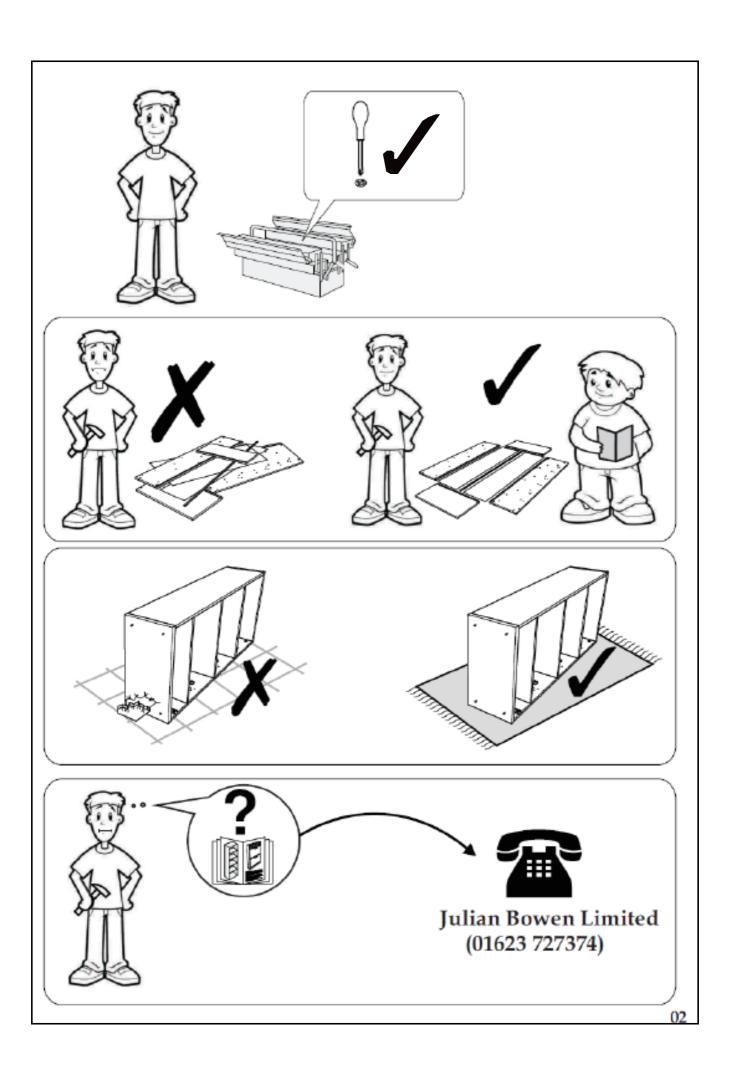

Hardware



Allen Key X1pc

(4)

Bolt M8X50mm X16pcs

Bolt M8X45mm X6pcs

Sprung Washer X20pcs

Flat Washer X20pcs

Е

Spanner X 1pc



Bolt M8X40mm X4pcs


Н

Cam X10pcs

Peg M6X60mm X10pcs

Nut X 6pcs

M3X20X2pcs

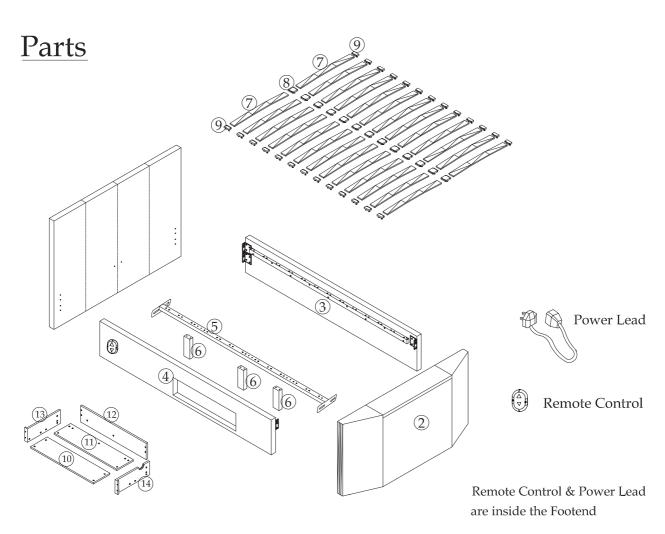

Safety Advice

Please take the time to carefully read through the whole of these instructions before you commence.

Keep these instructions for future reference.

Unpack, inspect and check off all of the contents.

Please dispose of all packaging safely.

Small component parts could choke a child if swallowed.

We strongly recommend that you keep children well away from the work area.


It would be sensible to lay a sheet or blanket on the floor where you intend to work to avoid scratching this product and to protect your floor

This product is heavy. Take extreme care when lifting to avoid personal injury or damage to the product.


Assemble the product as close to its intended final position in the room as possible.

The TV Lift System is pre-installed and is ready for use. The TV Lift System has a maximum load capacity of 46 Kg which is suitable for use with most LCD and LED televisions with a screen size up to 32 Inches.


HANDY HINT: If you keep the hardware in a bowl during assembly you will be less likely to lose them.

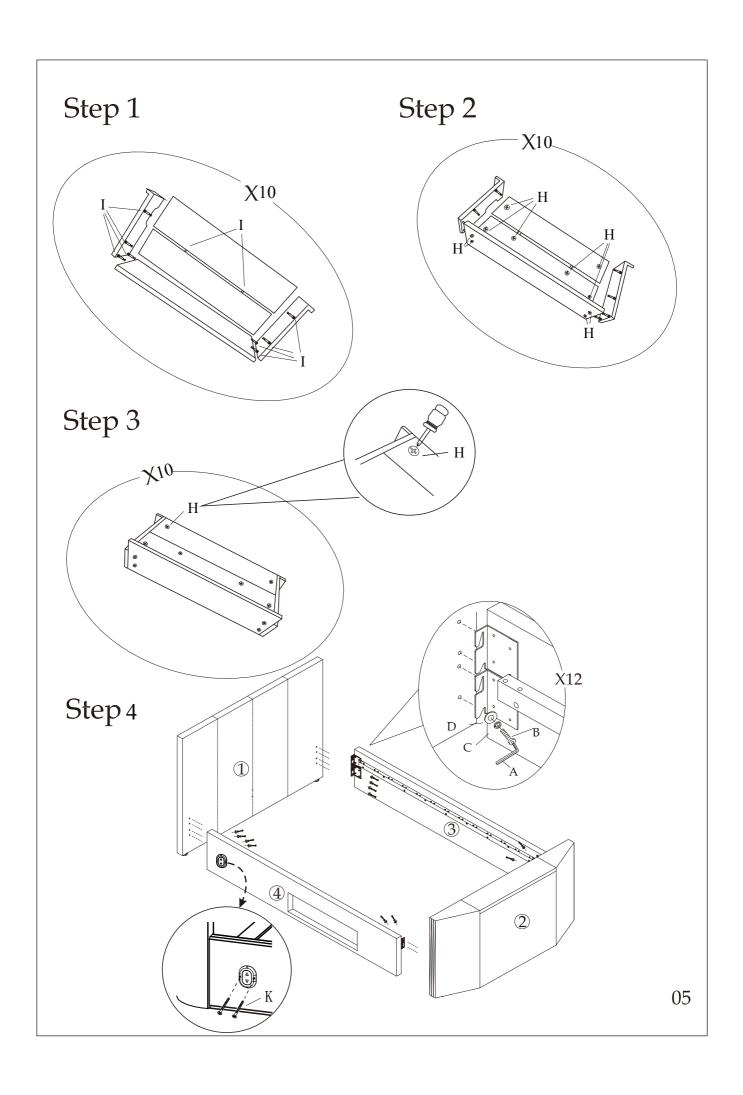


Step 5

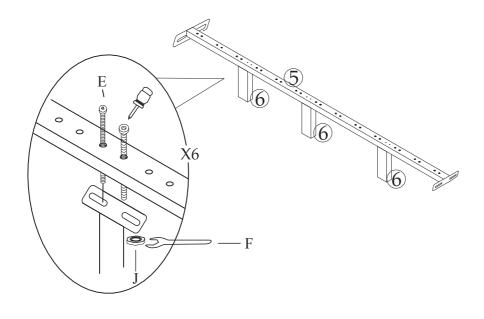


Step 6

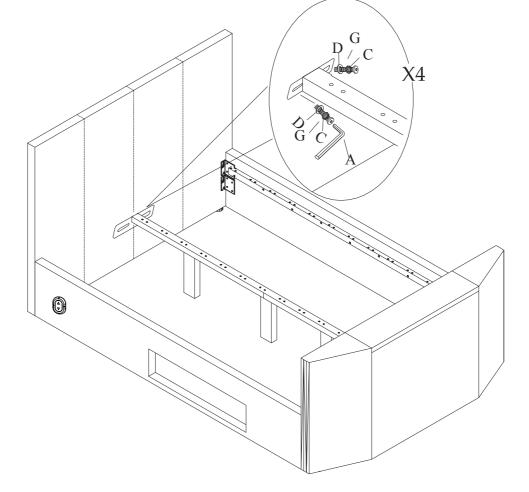

Step 7

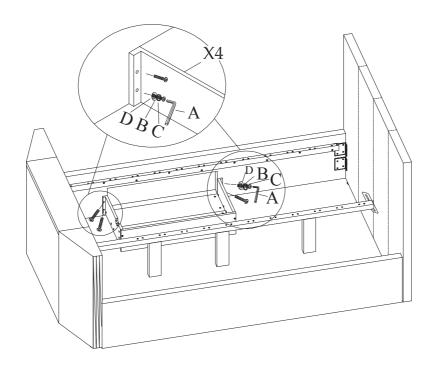


Step 8

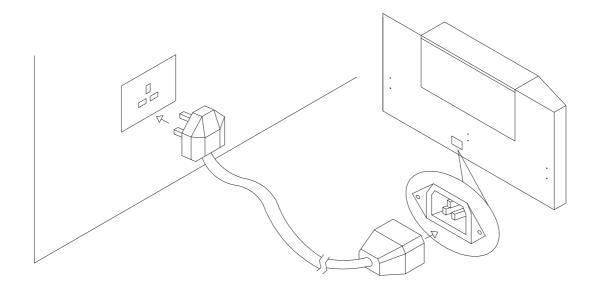



Your Remote Control and Power Lead can be found inside the Footboard of the bed. Please remove and connect the power lead as shown in the diagram.



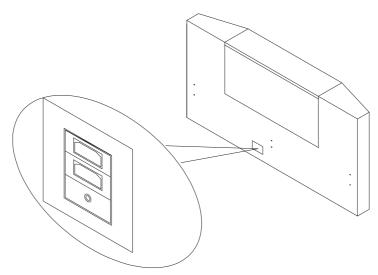

Connect any external components (DVD Player, Freeview Box, Games Console etc (not supplied) using the 2 x HDMI sockets and Arial Sockets located in the footend. These can then be placed in the side rail tray as required.

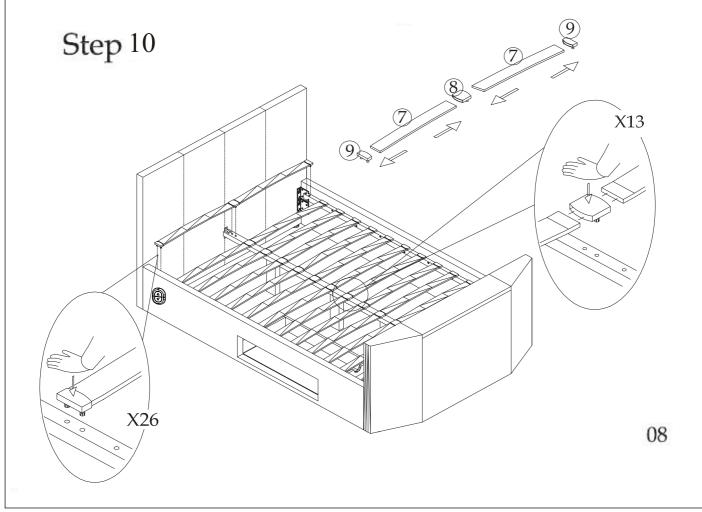

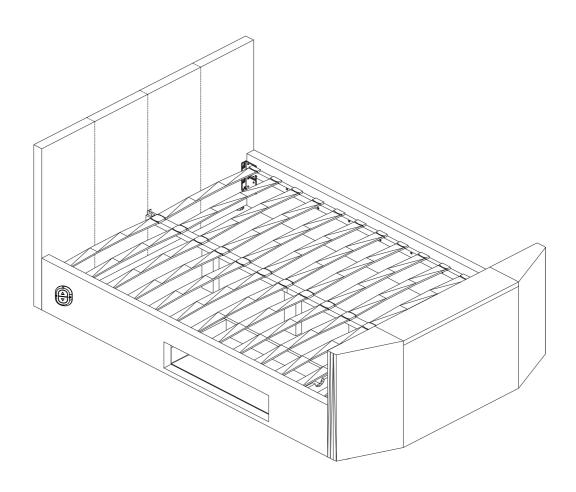

Your OPTIKA TV Bed is now ready for use

TV LIFT GUIDE

IF FOR ANY REASON THE TV LIFT DOES NOT WORK, PLEASE CHECK THE FOLLOWING.

Check Power

Open the lid;one can easily see the controller on left hand side of the TV Lift. When power is feeding through to the TV Lift-the light(1) is glowing.

If it is NOT glowing-power is not reaching the system. Check mains power is switched on and the plug is pushed firmly into the power socket on bottom of footboard.

Check Battery in the Switch

Battery Replacement

Battery Specification: A23 12V

Tools Required: Crosshead Screwdriver


Remove the switch from the side rail of the bed then follow the simple steps below:

Step 1: Take off the front buttons of the switch by pushing the 2 locking clips inwards together.

Step 2: Change the battery, making sure that the new battery is correctly located between the terminals.

The switch can then be re-assembled.

Test the switch and if the lift mechanism activates, re-mount in position on the side rail of the bed.

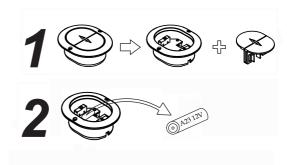

General Care

Wipe clean with a slightly damp soft cloth.

Avoid the use of all household cleaners and abrasives.

When moving your furniture, carefully lift into place.

Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

Recommendations

Periodical re-tightening of fixings.

Warning

This unit is heavy. Please use an assistant when lifting.

Notes

We've tried to make this piece of furniture as easy to assemble as possible. In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact our customer services on 01623 727374

Julian Bowen Limited

Bentinck House, Park Lane Business Park, Kirkby-in-Ashfield, Notts, NG17 9LE www.julian-bowen.co.uk